




COWAY LOVES THE PLANET
This paper can be recycled.

TH

Coway

Water Purifier CHP-264L (TH)

- This product can not be used if the voltage is different from that mentioned in the rating plate.
- For your safety and proper use of the product, please read this user manual before use.

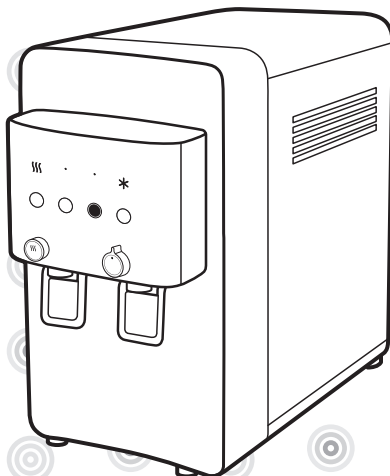

FEATURES

1

Optimal size and elegant design


This slim, elegant design fits into even narrow kitchen spaces, making it convenient to use.



2

Energy-saving function using the light sensor


When Eco mode is set, the motor and heater automatically run less often, reducing the amount of power consumed.

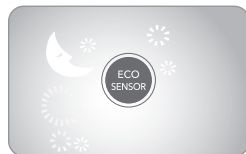

3

Detachable water deco faucets


The water deco faucets can be separated for easy cleaning (turn them clockwise to detach).

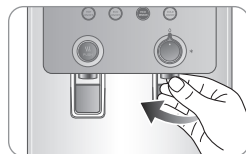

4

Convenient hot and cold/ambient water continuous release functions

Push the Cup-Touch Lever for hot or cold/ambient water, upward to continuously dispense hot, cold or ambient water while the lever is locked in place.

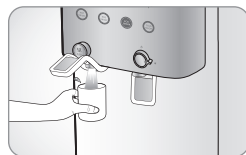

5

Dust-free filtering system


The water purifier is equipped with a Plus Inno-Sense filter which improves the taste of water by removing pollutants, such as odor-causing substances, soluble contaminant, chlorine and volatile organic compounds (VOC's).



6

Antibacterial system inside the water tank

An antibacterial filter is installed inside the product to prevent the proliferation of microorganisms.

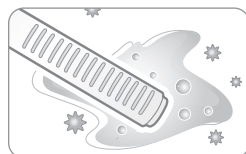

DEAR CUSTOMERS

Thank you for using **Coway Water Purifier**.

Please read this user manual to use and maintain the product correctly.

If you encounter a problem while using the product, you may solve the problem referring to the user manual.

CONTENTS

PRODUCT INFORMATION

- | 03 | **SAFETY INFORMATION**
 - Danger
 - Warning
 - Caution
- | 07 | **PARTS NAME**
- | 08 | **WATER PURIFICATION PROCESS**

HOW TO USE

- | 09 | **INSTALLATION PRECAUTIONS**
- | 11 | **BUTTONS AND INDICATORS**
- | 14 | **HOW TO USE**
 - How to get cold water
 - How to continuously extract cold water
 - How to get ambient water
 - How to continuously extract ambient water
 - How to get hot water
 - How to continuously extract hot water

MAINTENANCE

- | 17 | **HOW TO INSTALL**
- | 19 | **HOW TO CLEAN**
 - How to Clean Inside Water Tank
 - How to Clean the Tray
 - How to Clean the Product Body
 - How to Clean the Deco Faucet
 - Cup-Touch Lever
- | 23 | **FILTER REPLACEMENT**
- | 24 | **HOW TO REPLACE FILTER**

OTHERS

- | 25 | **TROUBLESHOOTING**
- | 26 | **SPECIFICATION**
- | 27 | **WATER FLOW DIAGRAM**

SAFETY INFORMATION

Be careful to keep this safety information.

Please read this information to prevent property loss and ensure your safety.



for 220 V - 240 V~, 50 Hz use only

▲ Danger : If you do not follow the instruction serious injury or even death could occur.

- Do not use a damaged power cord or plug, and loose outlet.
- Do not pull the power cord.
- Do not pull on the power cord to move the product.
- Do not touch the power plug with a wet hand.
- Do not forcefully bend the power cord or put it under a heavy object to prevent it from being damaged or deformed.
- Do not plug and unplug the power plug repeatedly.
- When the power area comes into contact with water, unplug the power plug and completely dry it prior to use.
- Do not connect multiple products to one power outlet. Use a separate socket for the product.
- Lock the tap water supply valve and disconnect power when not using the product for an extended period of time.
- Do not attempt to repair or modify the power cord at your discretion.
- If the power cord is damaged, do not attempt to replace the cord. Instead, contact the service center to replace it.
- Do not install near a heating device.
- When the water is coming inside of the product or there is a puddle on the product, call Service Center after closing the supplying valve and unplugging.

-
- If the appliance produces a strange noise or odd smell, immediately unplug from the electrical outlet and call our Service Center.
 - Do not put the candle, or fire related objects on to the products.
 - Do not place any containers with water, medicine, food, small metallic objects, or any flammable material on the top of the product.
 - Clean after unplugging.

SAFETY INFORMATION

▲ Warning : If you don't follow the instructions serious injury or property damage could occur.

- If the electric outlet is wet, carefully unplug the unit and let the electric outlet completely dry before subsequent use.
- Unplug the product before repair, inspection, or parts replacement.
- The water cooler is intended to be plugged into a receptacle of the ground fault circuit interrupting type.
- Do not install the product on a sloped floor.
- Do not press the product by constraint or impact.
- Do not clean by spraying the water directly or don't wipe the product using the benzene and thinner.
- Do not repair, disassemble, or modify.
- This appliance is not intended to use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above.
- Please use the new tubing sets that come with the water purifier. Do not reuse old tubing sets.


//////////

⚠ Caution : If you don't follow the instruction minor physical injury or property damage may occur as a result.


- Use after closing the water tank cover completely inside of the product.
- To drink purified water, change the filter according to the filter replacement cycle.
- Drain the stored water as well as newly filtered water one more time completely prior to use when not using the product for an extended period of time.
- Hot water is very hot, so avoid direct contact with your body.
- Do not use the purified water for replacing water in fish tanks and aquariums.
- After moving the product or replacing the Plus Inno-sense filter, the black powder can be remained in the inner bottom of the water tank.
- This product is not intended for the disinfection of microbiologically unsafe water.
Do not use this product to purify water from an unknown source.
- Cleaning and user maintenance shall not be made by children without supervision.

PARTS NAME

Front

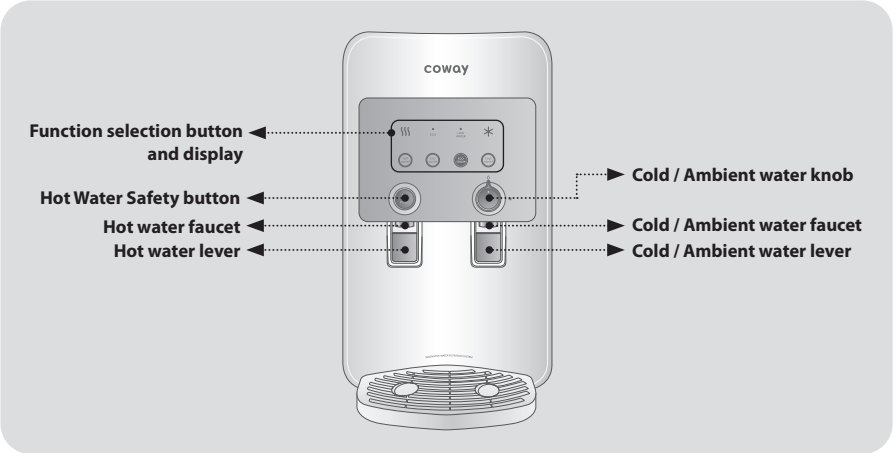

Rear

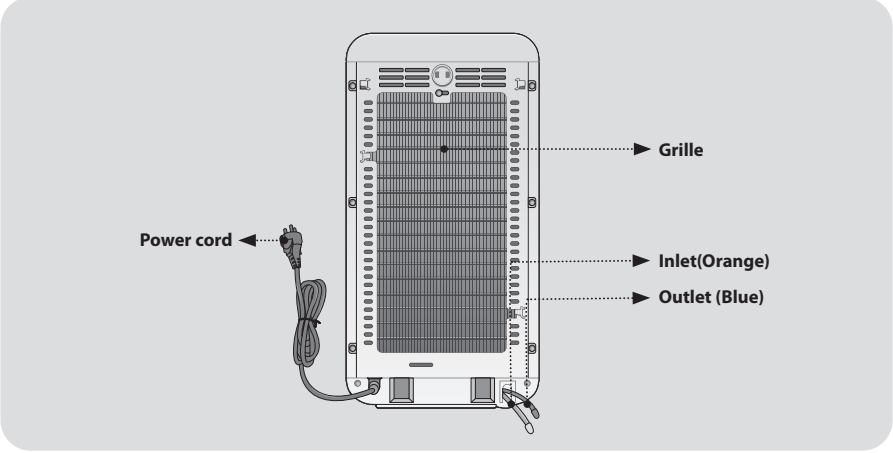

WATER PURIFICATION PROCESS

The essence of the water purification system lies in the filters.

Using an uncertified filter or even using a certified yet expired filter may reduce filter performance.

The 5-step water purification system (CHP-264L)

STEP 1, 2 : PLUS NEO-SENSE FILTER

This Plus Neo-Sense filter has the functions to remove particulates, dissolved organic and inorganic impurities. It also has the function to remove chlorine, volatile organic compounds(VOC's).

STEP 3 : RO MEMBRANE FILTER

RO membrane filter has the function to remove water contaminants such as heavy metals, waterborne microorganisms and harmful organic chemicals etc.


Water flowed out from the product through the drain tubing is concentrated with harmful materials that is eliminated and considered as disposed water.

STEP 4 : PLUS INNO-SENSE FILTER

This Plus Inno-sense filter has the function to remove odor inducing materials and to improve taste of water.

STEP 5 : ANTIBACTERIAL FILTER*

This Antibacterial Filter has the function to control microorganism propagation in water.

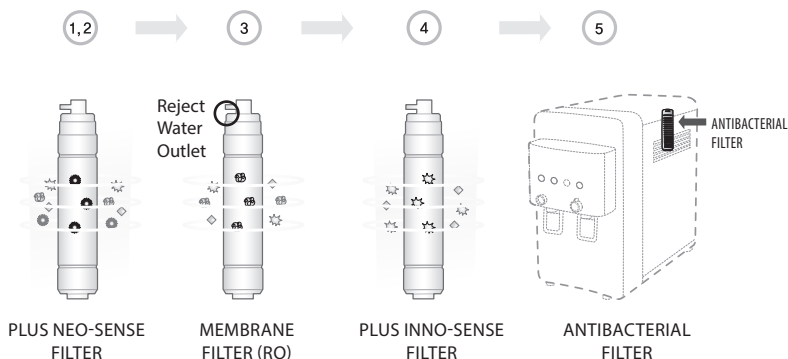

Tips


Uses of disposed water

- The disposed water should be used for cleaning the restroom, the house, clothes, or purposes other than drinking.
- Never use the disposed water for drinking or for cooking.

INSTALLATION PRECAUTIONS


The instruction for the proper installation of the water purifier

1. Close main water supply valve to separate the faucet.

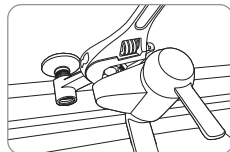


2. Apply the teflon tape on the adaptor and fit it to the pipe.

⚠ Do not turn the water pipe.

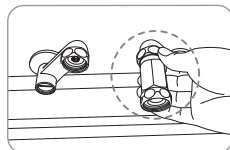


3. Connect the faucet with the adaptor.

⚠ Install the adaptor with connector to the cold water pipe.

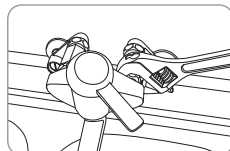


4. Connect 1/4 inch orange tubing with the connector on the adaptor.

⚠ Flush water through each filter at least 5 minutes before Connection.

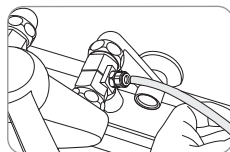

5. Open the feed valve to supply water to the filtration system.

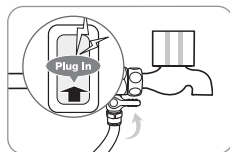

Please check before use!

⚠ This product is for 220 V - 240 V~, 50 Hz.

Make sure to connect the power plug to a grounded 220 V - 240 V~, 50 Hz outlet.

It requires a power supply to operate.



- **After installing the water purifier**

Please filter the water more than 70 minutes and drain them 2 times or more to use.

- **When indicator lights on the display is turned off**

When the indicator light is off, check if there is a blackout or if the power supply is cut off for other reasons.

- **Regular filter replacement**

Regular filter replacement is crucial for clean drinking water. Using expired filters decreases water purifier performance, so please replace the filters on time.

- **When the product has not been used for a long time**

If you stored water or have not used the water purifier for a long time, drain the water more than once before usage.

- **When planning to not use the product for a long time**

Turn off the tap water valve and unplug the power cord when the product is not in use for a long time.




Tips

When you don't use for a long time, turn off the tap water valve and unplug the power cord.

BUTTONS AND INDICATORS

Indication part

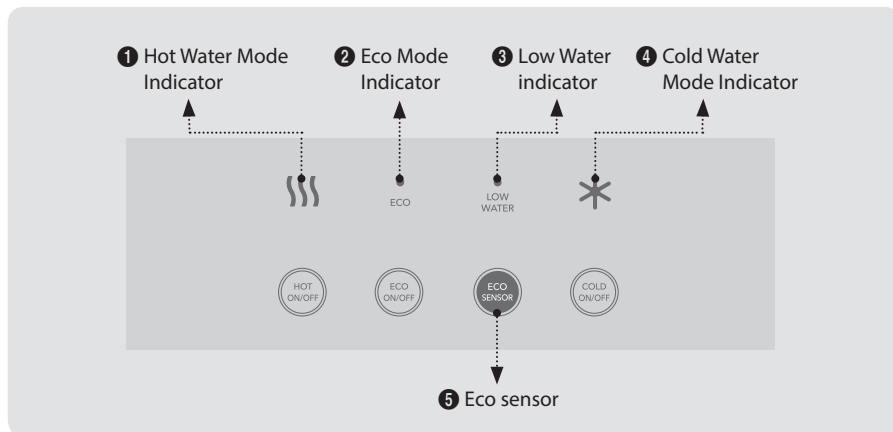

1 Hot Water Mode Indicator

The indicator lights up when hot water is selected.



2 Eco Mode Indicator

The indicator lights up when Eco Mode is selected



3 Low Water indicator

The indicator lights up when the water level in the tank gets low.



4 Cold Water Mode Indicator


The indicator lights up when cold water is selected.



5 Eco seneor

This sensor detects the light around the purifier to decide whether it is day or night.

Operation part

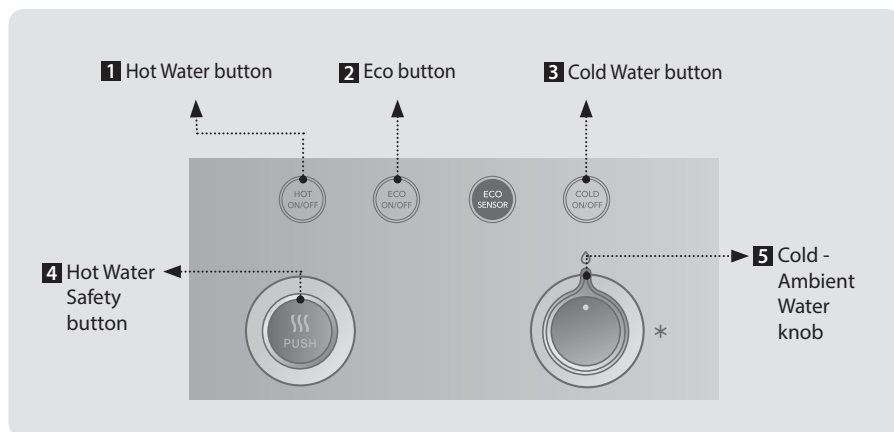

1 Hot Water button

Use this to select/cancel selection of the hot water function. Hold the button for 2 seconds or more and the indicator lights up.



2 Eco button

Use this to select/cancel selection of Eco Mode. Hold the button for 2 seconds or more and the indicator lights up.



3 Cold Water button

Use this to select/cancel selection of the cold water function. Hold the button for 2 seconds or more and the indicator lights up.



4 Hot Water Safety button

Press once before dispensing water. If the Hot Water Safety button is not pressed, hot water cannot be dispensed even if the Cup-Touch Lever is pushed.



5 Cold - Ambient Water knob


Use this to select cold water or ambient water.

BUTTONS AND INDICATORS

■ To use the Hot Water function

Press the Hot Water button for 2 or more seconds and check that the Hot Water function is illuminated on the display and the Hot Water Temperature Indicator is illuminated.
To turn off the Hot Water function, press the Hot Water button for 2 or more seconds again.


* You can get hot water starting about 30 minutes after you turn on the hot water function.

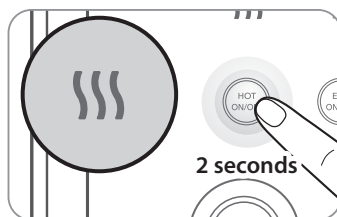

■ To use the Cold Water function

Press the Cold Water button for 2 or more seconds and check that the Cold Water function is illuminated on the display and the Cold Water Temperature Indicator is illuminated.
To turn off the Cold Water function, press the Cold Water button for 2 or more seconds again.

* You can get cold water about 30 minutes after you turn on the cold water function.

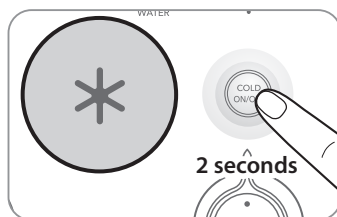


■ To use the Eco function

Hold the Eco button for 2 seconds or more to turn on the Eco function.

The Eco indicator blinks when it detects that it is night.

* If the Eco indicator is lit, the cold water temperature will be kept warmer when the area around the purifier is dark.

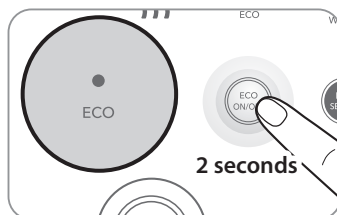


Tips

- If cold water is not released from the water purifier, check that the Cold Water Mode indicator is lit up on the display (see p. 11).
- When the level of ambient water inside the water tank is low, you may not be able to get as much water as usual.
- When there is a power failure or the power cord is reconnected, the machine is reset to its most recent settings.

HOW TO USE

How to get cold water

Press the Cold Water button and check that the Cold Water indicator is lit on the display. Turn the Cold Water - Ambient Water Knob to the right and push the touch lever.


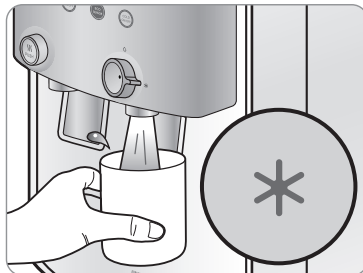


Tips

- If cold water is not dispensed from the water purifier, check that the Cold Water indicator is lit up on the display (see p. 11).

How to continuously extract cold water



Press the Cold Water button and check that the Cold Water indicator is lit on the display. Turn the Cold Water - Ambient Water Knob to the right and move the Cup-Touch Lever upward to lock the lever in place.

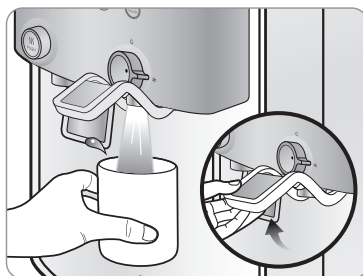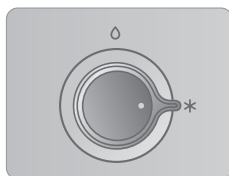

HOW TO USE



How to get ambient water

Turn the Cold Water - Ambient Water Knob to the left and push the Cup-Touch Lever.

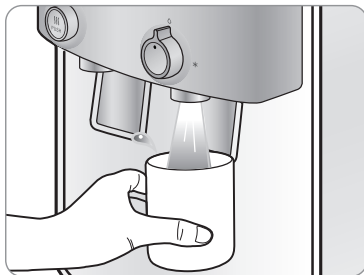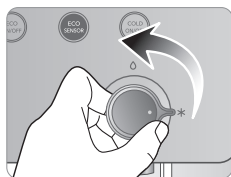


How to continuously extract ambient water

Turn the Cold Water - Ambient Water Knob to the left and move the Cup-Touch Lever upward to lock the lever in place.

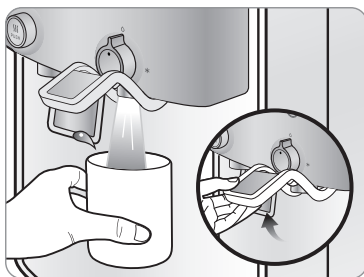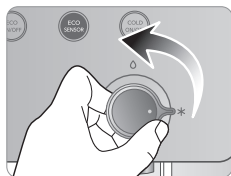

How to get hot water

Press the Hot Water Safety button and push the Cup-Touch Lever. Press the Hot Water button and check that the Hot Water indicator is lit. Push the Hot Water Safety button once more.

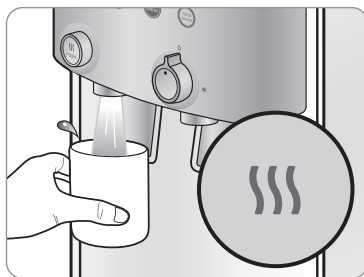


Tips

- If hot water is not dispensed from the water purifier, check that the Hot Water indicator is lit up on the display (see p. 11).
- Beware of burns when using the Hot Water function.

How to continuously extract hot water


Press the Hot Water Safety button and move the Cup-Touch Lever upward to lock the lever in place. Press the Hot button and check that the Hot Water indicator is lit on the display.

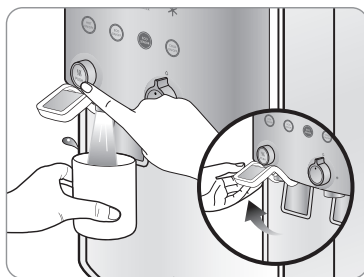


HOW TO INSTALL

Installation Guide

Only for
220 V - 240 V~,
50 Hz

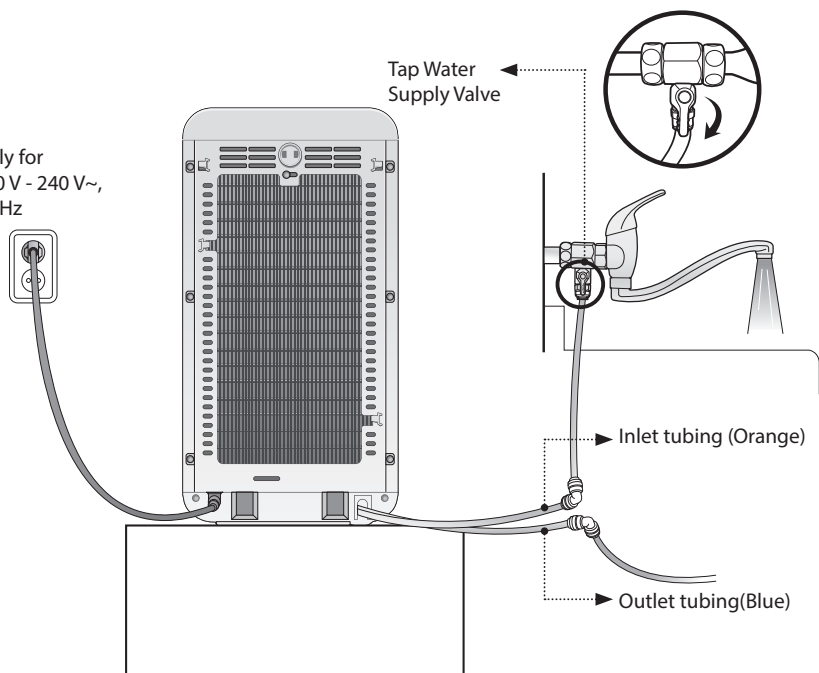

Connect the orange color inlet tubing ❶ to the tap water supplying pipe. Connect the outlet tubing ❷.

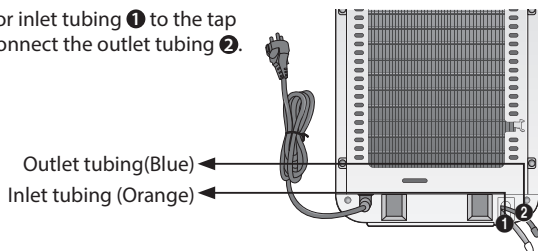

Caution!

■ Place for Installing Water Purifier I

Avoid installing the water purifier in an area with uneven surface, extreme humidity, extreme light exposure, extreme dust exposure, and water exposure, etc.

■ Place for Installing Water Purifier II

Keep the radiator grill at the rear of the product at least 10 cm away from the wall and make sure that the installation floor is firm.

■ After Installation

Please empty the water tank filled with filtered water two times after the product installation.

■ Cold Water Tubing

Make sure to connect it to the cold water tubing (If connected to the hot water tubing, the filters can get damaged).

■ Relocation and Installation

When moving between locations, wait at least 30 minutes after installation to connect the power.



Tips

To maintain optimal product performance, consult a Coway Technician for the detailed installation methods.

⚠ Some residual water used during post-manufacturing inspection may be present in the filter.


Do not be alarmed as it is not a used product.

⚠ Do not reuse the previously used tap water supply valve and hose when installing the purifier.

HOW TO CLEAN


How to Clean Inside Water Tank

1. Hold the cold water/hot water buttons at the front of the machine for 2-3 seconds each to turn it off and unplug the power cord.
Lock the water supply valve.

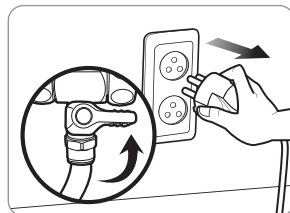


2. Use the outlet tubing and cold/ambient water taps to completely drain all water from inside the purifier.


* Drain the cold/ambient water tank from the cold/ambient water tap and the hot water tank from the side drain.

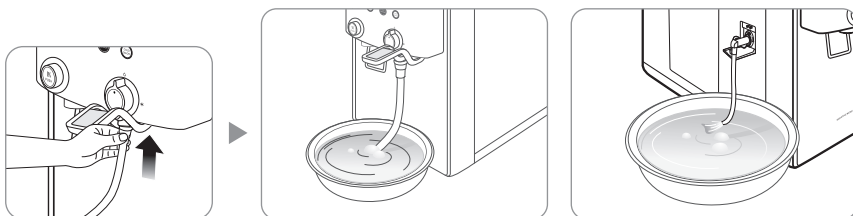


3. Push the upper cover of the product to open. Open the clips (in 6 places) affixing the interior storage tank and then open the interior water tank cover upward.

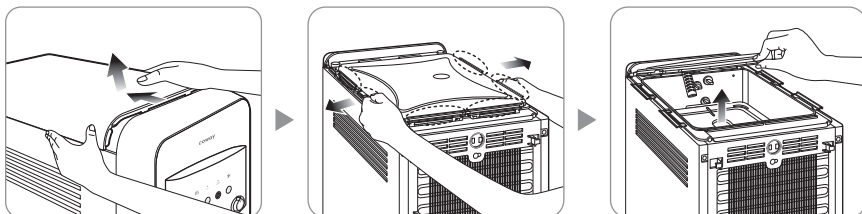




4. Turn the antibacterial filter on the interior water tank cover to detach it and shake it in water taken in advance from the machine to wash.

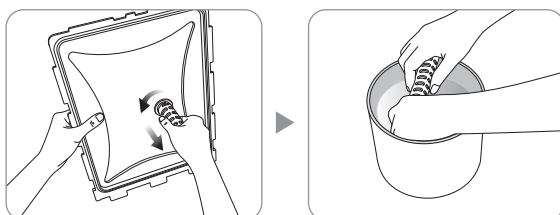



5. Wipe the interior water tank surfaces with a soft cloth.

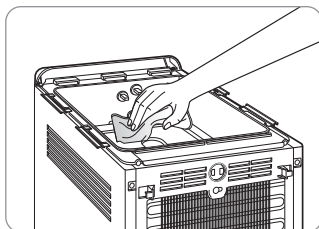


6. Rinse the interior water storage tank clean with water taken in advance from the machine, and then use the outlet tubing to completely drain. Run purified water through the product once and empty, and then use.

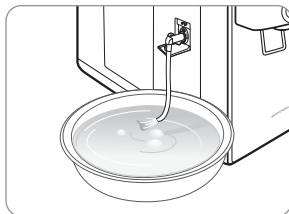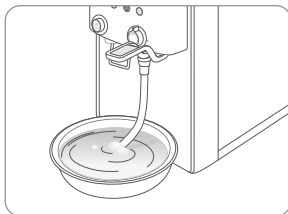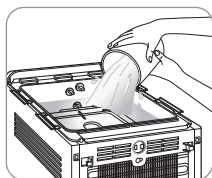

7. Turn the antibacterial filter to attach it to the interior water tank cover and then close the interior water tank cover. Fasten the clips (in 6 places) affixing the interior water tank.

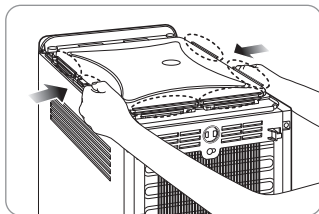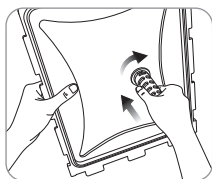

8. Close the upper cover and plug in the power cord, then turn on the water supply valve. Check that water comes from the cold/ambient and hot water taps and then press the Hot/Cold Water button on the front of the product to restart it.

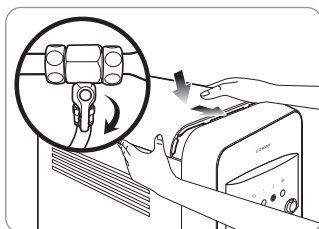


HOW TO CLEAN

How to Clean the Tray


1. How to take out the tray

The front of the tray can be easily separated by lifting it up slightly.

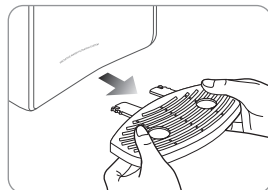

2. How to assemble the tray

Slide the tray into the bottom of the product.

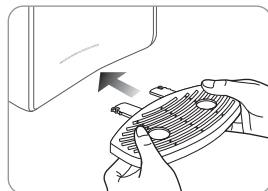

Tips

- ⚠ Completely close the interior water storage tank cover. Otherwise, insects or dirt may enter.
- ⚠ Do not use chemicals or detergent when cleaning the interior water storage tank. If chemicals or detergent are not completely washed away, they may be hazardous to your health.
 - Always keep the surrounding environment clean and clean the interior water storage tank about once every two months.


Drugs,
detergent, etc. X



How to Clean the Product Body

Wipe the product with a clean towel

- * For thicker layers of dust, use a wet towel to wipe (Do not use an abrasive).

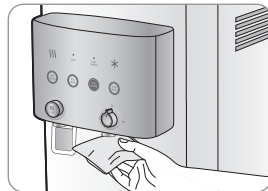

Tips


- Do not directly spray water to the product to clean it.
- Do not use thinner, benzene or agent containing abrasives or rough cloths to clean it.

How to Clean the Deco Faucet


1. Detach the deco faucet by turning it clockwise.




2. Rinse the deco faucet with water.

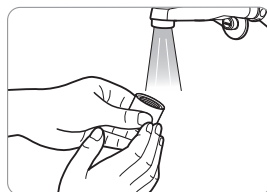

3. After rinsing, wipe the deco faucet with a soft, dry cloth.

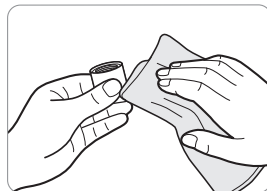

4. Attach the deco faucet back by turning it counterclockwise after cleaning.

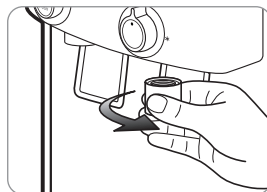

Tips



Never clean using cotton balls.
Bits of cotton or other foreign matter
may remain.

Cup-Touch Lever

Wipe dirty areas of the Cup-Touch Lever with a soft, dry cloth.

* If it is severely contaminated, wipe with a wet cloth.



FILTER REPLACEMENT

Filter

Filter is a critical component for a water filtration system. Replacing authorized filters at a specified replacement cycle is important to maintain the water quality, and a proper system operation. Please replace filters at a specified replacement cycle. For replacement filters, please contact Coway authorized dealers and distributors.




Filter replacement cycle

If the filter is not regularly replaced, it may degrade the water quality from the product. The filter change cycle may vary within the range of expected replacement cycle depending on the source water quality.

CHP-264L

Model of Filter	Names of Filter	Replacement Cycle
CNFN8S-PLUS	PLUS NEO-SENSE FILTER	6
CRMFN8S-20	RO MEMBRANE FILTER	24
CIFN8S-PLUS	PLUS INNO SENSE FILTER	18
CAF-03	ANTIBACTERIAL FILTER **	12

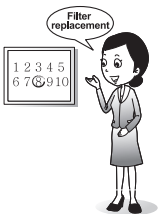

* Filter replacement cycle can vary depends on the environment.

About filter replacement cycle

The filter replacement cycle described above is not the filter quality warranty period but the expected cycle (life) that the filter shows its original performance.



Therefore, the filter replacement cycle may be reduced for the area with the poor water quality or more water consumption.





HOW TO REPLACE FILTER

Replace the filter!

1. Close the main water supply valve after unplugging the power cord, and drain the water inside of the water purifier.

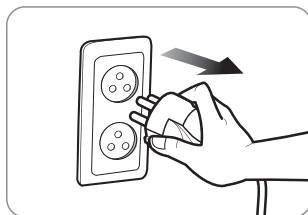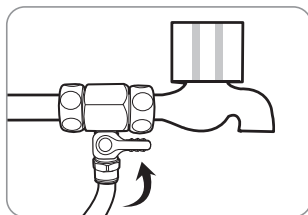

2. Separate the fittings connected to the filter, and please replace with a new filter.
(use the correct tool to remove the fittings).

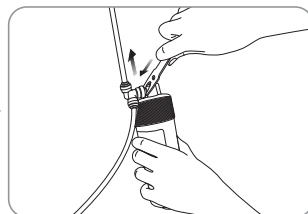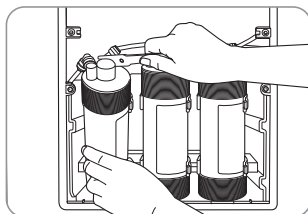

Tips

- ⚠ After changing the filter and connecting the fitting and the hose precisely, check that there is no leakage and drain the first round of purified water after filter change.

3. Insert the lower part of the side cover precisely in its place.



Tips

- ⚠ Use new filters only after washing.
 - Plus Neo-Sense filter: Install after washing with source water for about 1 minute.
 - Membrane (RO) filter: Install the filtered water valve after washing with source water for about 5 minutes.
 - Plus Inno-Sense Filter: Install with no separate flushing.

TROUBLESHOOTING

The water purifier may operate abnormally because the user is unfamiliar with the product or due to some other reasons and not because of a product malfunction. In such a case, problems can be easily solved without the help from the service center by checking the following.

If the problem is not solved after checking the following, please call the service center.

Symptom	Check	Measures to take
Water tastes strange.	• Did you clean the internal water tank?	Clean the internal water tank.
	• You didn't use the water purifier for a long time.	Get rid of the saved water and clean the storage tank.
	• Isn't it about time to change the filter?	Request the filter replacement.
Water is not being dispensed.	• Is the water supply cut or isn't the water supply valve closed?	Open the main water supply valve.
	• Did you miss the filter replacement times?	Request the filter replacement.
The water is flowing slower.	• Isn't it about time to change the filter?	Request the filter replacement.
	• Does the main power connect to the voltage rating that matches it on the rating plate?	Connect the power cord to the voltage rating that matches it on the rating plate.
	• Didn't you close the main water supply valve?	Open the main water supply valve.
	• Didn't the temperature of the main water drop suddenly?	If the water temperature is lowered, the water amount is decreased.
Cold / hot water is not being dispensed.	• Was the cold water mode indicator lightened?	Please press the cold water mode selection button.
	• Didn't you close the main water supply valve?	If it is the low water level to protect the electric motor, the cooling function doesn't operate. Open the main water supply valve.
	• Isn't the back side of the water purifier and the wall too close?	Please keep the distance between the back of the water purifier and the wall to 10 cm or more.
The product stops operating suddenly.	• Is the main water being supplied actively?	Check the main water supply valve.
	• Does the main power connect to the voltage rating that matches it on the rating plate?	Connect the power cord to the voltage rating that matches it on the rating plate.
	• Isn't water overflowing or leaking?	Request A/S.

SPECIFICATION

Product		Coway Water Purifier
Model		CHP-264L
Filtration Method		Reverse osmosis
Power Supply		220 V - 240 V~, 50 Hz
Water tank capacity	Ambient water	2.5 L
	Cold water	2.3 L
	Hot water	1.0 L
	Total	5.8 L
Dimension		260 mm (W) x 505 mm (D) x 500 mm (H)
Working Temperature		5 °C - 35 °C
Production Rate		76 L/d (25 °C, 0.14 Mpa)
Working Pressure		137 kPa – 827 kPa
Net Weight		18 Kg


- The water amount can vary according to the water pressure and the water temperature.
- The water tank capacity is based on the size and can be different from the extraction capacity.
- Without any prior notice, all or parts of the product are subject to change for the purpose of improving the performance of the product.
- Refer to Performance data sheet for individual contaminants, reduction performance and general operating information.

THAILAND

Add : Coway (Thailand) Co., Ltd.
 75/104-106 Ocean Tower 2 38th Fl, Soi Sukhumvit
 19 (Wattana), Sukhumvit Road, Klongtoey Nua,
 Wattana, Bangkok 10110
 Call center : 1421

WATER FLOW DIAGRAM

CHP-264L

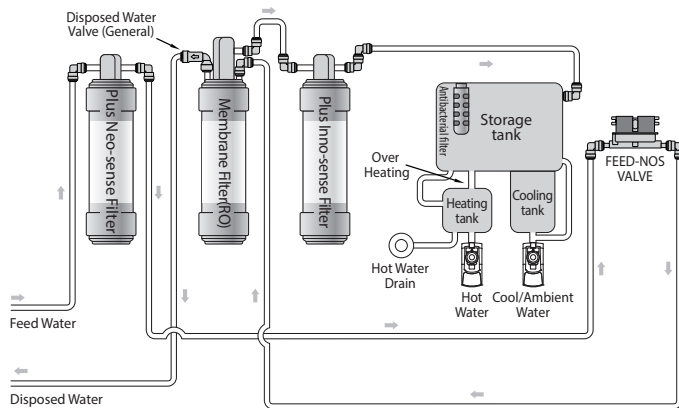

MEMO

////////////////////////////////////

ฟีเจอร์

1

ขนาดกะทัดรัดและการออกแบบที่สวยงาม


ตัวรูปทรงที่บางอย่างสวยงาม ทำให้เข้ากันได้กับห้องครัวขนาดเล็ก และสะดวกในการใช้งาน



2

ฟังก์ชันประหยัดพลังงานด้วยเซ็นเซอร์แสง


เมื่อใช้โหมด Eco มอเตอร์และเครื่องทำความร้อนจะลดความถี่ในการทำงานโดยอัตโนมัติ เพื่อลดการใช้พลังงาน

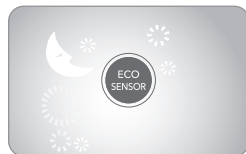

3

เป็นก๊อกน้ำแบบกดได้


สามารถถอดเป็นก๊อกน้ำออกได้ เพื่อการทำความสะอาดอย่างง่ายดาย (หมุนตามเข็มนาฬิกาเพื่อถอดออก)

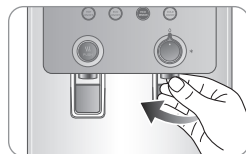

4

ฟังก์ชันจ่ายน้ำร้อน น้ำเย็น และน้ำอุณหภูมิห้องอย่างต่อเนื่องที่เสถียร

คันคันโยกใช้สลับสำหรับน้ำร้อนหรือน้ำเย็น/อุณหภูมิห้องขึ้น เพื่อจ่ายน้ำร้อน น้ำเย็น หรือน้ำอุณหภูมิห้องอย่างต่อเนื่อง ในขณะที่คันโยกถืออยู่กับที่

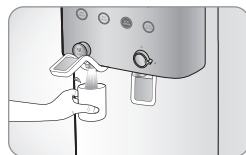

5

ระบบกรองน้ำปราศจากฟอง


เครื่องกรองน้ำที่ใช้ไส้กรอง Plus Inno-Sense ที่ช่วยปรับปรุงรสชาติของน้ำโดยการกำจัดสารมลพิษต่างๆ เช่น สารที่ทำให้เกิดกลิ่น สารปนเปื้อนที่ละลายในน้ำ คลอรีน และสารประกอบอินทรีย์ระเหยง่าย (VOC's)



6

ระบบต้านเชื้อแบคทีเรียภายในถังเก็บน้ำ

ภายในผลิตภัณฑ์เราได้ติดตั้งไส้กรองด้านเชื้อแบคทีเรียเพื่อช่วยป้องกันการเจริญเติบโตของจุลินทรีย์ในน้ำ

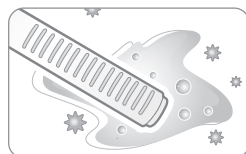

เรียนลูกตา

ขอบคุณที่ใช้ เครื่องกรองน้ำ Coway

โปรดอ่านคู่มือผู้ใช้นี้ เพื่อการใช้งานและดูแลรักษาผลิตภัณฑ์อย่างถูกต้อง

หากท่านพบปัญหาระหว่างการใช้งานผลิตภัณฑ์นี้ โปรดอ้างอิงคู่มือผู้ใช้นี้ในการแก้ปัญหา

เนื้อหา

ข้อมูลผลิตภัณฑ์

- | 03 | ข้อมูลความปลอดภัย
- อันตราย
- คำเตือน
- ข้อควรระวัง
- | 07 | ข้อชิ้นส่วนต่างๆ
- | 08 | กระบวนการกรองน้ำดื่ม

วิธีการใช้งาน

- | 09 | ข้อควรระวังในการติดตั้ง
- | 11 | ปุ่มและตัวแสดงผล
- | 14 | วิธีการใช้งาน
- วิธีกดน้ำเย็น
- วิธีกดน้ำเย็นอย่างต่อเนื่อง
- วิธีกดน้ำอุณหภูมิห้อง
- วิธีกดน้ำอุณหภูมิห้องอย่างต่อเนื่อง
- วิธีกดน้ำร้อน
- วิธีกดน้ำร้อนอย่างต่อเนื่อง

การซ่อมบำรุง

- | 17 | วิธีติดตั้ง
- | 19 | วิธีทำความสะอาด
- วิธีทำความสะอาดภายในถังน้ำ
- วิธีทำความสะอาดถาด
- วิธีทำความสะอาดตัวเครื่อง
- วิธีทำความสะอาดเป็นถือน้ำ
- คัน โยกใช้ด้วยสัมผัส
- | 23 | การเปลี่ยนไส้กรอง
- | 24 | วิธีการเปลี่ยนไส้กรอง

อื่นๆ

- | 25 | การแก้ปัญหา
- | 26 | ข้อมูลจำเพาะ
- | 27 | แผนภาพการไหลของน้ำ

ข้อมูลความปลอดภัย

โปรดเก็บข้อมูลความปลอดภัยนี้ไว้

โปรดอ่านข้อมูลต่อไปนี้อย่างถี่ถ้วนเพื่อป้องกันทรัพย์สินเสียหายและเพื่อรักษาความปลอดภัยของคุณ



สำหรับใช้งานกับ
220 V - 240 V~, 50 Hz เท่านั้น

▲ อันตราย : หากไม่ปฏิบัติตามคำแนะนำ อาจทำให้เกิดการบาดเจ็บหรืออาจทำให้ถึงแก่ชีวิตได้

- อย่าใช้สายไฟหรือปลั๊กที่เสียหาย หรือใช้เต้ารับที่หลวม
- อย่าดึงสายไฟ
- อย่าดึงสายไฟในการเคลื่อนย้ายผลิตภัณฑ์
- อย่าจับปลั๊กในขณะที่มือเปียก
- อย่าพับสายไฟหรือวางสายไฟไว้ข้างใต้วัตถุที่มีน้ำหนักมากเพื่อป้องกันมิให้เกิดความเสียหายหรือผิดรูป
- อย่าเสียบและถอดปลั๊กไฟซ้ำ ๆ กัน
- เมื่อบริเวณปลั๊กไฟเปียกชื้น ให้ถอดปลั๊กแล้วเช็ดให้แห้งสนิทก่อนการใช้งาน
- อย่าต่อเครื่องใช้ไฟฟ้าหลายเครื่องเข้ากับเต้ารับแผงเดียว
ใช้เต้ารับแยกเฉพาะสำหรับผลิตภัณฑ์นี้
- ปิดวาล์วจ่ายน้ำแล้วถอดปลั๊กเมื่อจะไม่ใช้งานผลิตภัณฑ์เป็นเวลานาน
- อย่าพยายามซ่อมหรือดัดแปลงสายไฟที่เสียหายด้วยตนเอง
- หากสายไฟเสียหาย อย่าพยายามเปลี่ยนสายไฟ โปรดติดต่อศูนย์บริการเพื่อแจ้งขอเปลี่ยนสายไฟ
- อย่าติดตั้งไว้ใกล้กับอุปกรณ์ทำความร้อน
- หากมีน้ำรั่วเข้าไปข้างในตัวผลิตภัณฑ์ หรือมีน้ำขังบนผลิตภัณฑ์ โปรดโทรติดต่อศูนย์บริการหลังจากปิดวาล์วจ่ายน้ำและถอดปลั๊ก

- หากเครื่องใช้ไฟฟ้านี้มีเสียงหรือกลิ่นแปลกๆ ให้ถอดปลั๊กทันที แล้วโทรติดต่อศูนย์บริการ
- อย่าจุดเทียนหรือสิ่งที่มีเปลวไฟอื่นๆ บนผลิตภัณฑ์นี้
- อย่าวางภาชนะบรรจุน้ำ ขา อาหาร วัตถุโลหะเล็กๆ หรือวัตถุไวไฟบนผลิตภัณฑ์นี้
- ทำความสะอาดหลังจากถอดปลั๊กแล้ว

ข้อมูลความปลอดภัย

▲ คำเตือน : หากท่านไม่ปฏิบัติตามคำแนะนำ อาจทำให้เกิดการบาดเจ็บหรืออาจทำให้ถึงแก่ชีวิตได้


- หากได้รับเปียก ให้ถอดปลั๊กผลิตภัณฑ์อย่างระมัดระวัง และปล่อยให้ได้รับแห้งสนิทก่อนการใช้งานครั้งต่อไป
- ถอดปลั๊กผลิตภัณฑ์ออกก่อนที่จะทำการซ่อมแซม ตรวจสอบ หรือเปลี่ยนชิ้นส่วน
- อุปกรณ์ทำน้ำเย็นนั้นต้องต่อเข้ากับเตารับแบบมีวงจรตัดไฟฟ้ารั่วลงดินอัตโนมัติ
- อย่าติดตั้งผลิตภัณฑ์บนพื้นที่ลาดเอียง
- อย่ากดหรือกระแทกผลิตภัณฑ์อย่างรุนแรง
- อย่าทำความสะอาดโดยการฉีดน้ำไปบนผลิตภัณฑ์โดยตรง หรือทำความสะอาดด้วยน้ำมันเบนซินหรือทินเนอร์
- อย่าซ่อมแซม ถอดประกอบ หรือดัดแปลง
- เครื่องใช้ไฟฟ้านี้มีได้มีวัตถุประสงค์เพื่อการใช้งานโดยบุคคล (รวมถึงเด็ก) ที่มีความบกพร่องทางด้านร่างกาย ประสาทสัมผัส หรือจิตใจ หรือขาดประสบการณ์และความรู้ เว้นแต่จะมีการกำกับดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานโดยผู้ที่มีความรับผิดชอบต่อความปลอดภัยต่อบุคคลดังกล่าว
- เด็กควรได้รับการกำกับดูแลเพื่อให้แน่ใจว่าจะไม่เล่นกับเครื่องใช้ไฟฟ้านี้
- เด็กที่มีอายุตั้งแต่ 8 ปีขึ้นไปสามารถใช้งานเครื่องใช้ไฟฟ้านี้ได้
- โปรดใช้ชุดท่อใหม่ที่มาพร้อมกับเครื่องกรองน้ำ อย่าใช้ชุดท่อน้ำเก่า

⚠ ข้อควรระวัง : หากท่านไม่ปฏิบัติตามคำแนะนำ อาจทำให้เกิดการบาดเจ็บเล็กน้อยหรือทรัพย์สินเสียหาย


- ใช้งานหลังจากปิดฝาล้างเก็บน้ำข้างในผลิตภัณฑ์อย่างเรียบร้อยแล้ว
- เพื่อให้ได้น้ำดื่มที่สะอาด ควรเปลี่ยนไส้กรองตามกำหนดเวลาการเปลี่ยนไส้กรอง
- ระบายน้ำในตู้เครื่องและน้ำที่กรองใหม่ออกก่อนอีกหนึ่งรอบก่อนการใช้งานหลังจากที่ไม่ได้ใช้งานผลิตภัณฑ์มาเป็นเวลานาน
- น้ำร้อนนั้นจะร้อนมาก ระวังอย่าให้น้ำร้อนไปโดนร่างกาย
- อย่าใช้น้ำดื่มที่กรองแล้วไปเปลี่ยนน้ำในตู้ปลาหรือบ่อเลี้ยงปลา
- หลังจากเคลื่อนย้ายผลิตภัณฑ์หรือเปลี่ยนไส้กรอง Inno-Sense อาจมีผงสีดำตกค้างอยู่ที่ด้านล่างของถังเก็บน้ำ
- อย่าใช้น้ำที่มีจุลชีพที่ไม่ปลอดภัยหรือน้ำที่ไม่ทราบคุณภาพโดยไม่ทำการฆ่าเชื้ออย่างเหมาะสมก่อนนำมากรองผ่านเครื่องกรองน้ำ ห้ามใช้ผลิตภัณฑ์นี้กรองน้ำที่ไม่ทราบแหล่งที่มา
- อย่าให้เด็กทำความสะอาดหรือซ่อมบำรุงโดยไม่มีการกำกับดูแล

ชื่อชิ้นส่วน

ด้านหน้า

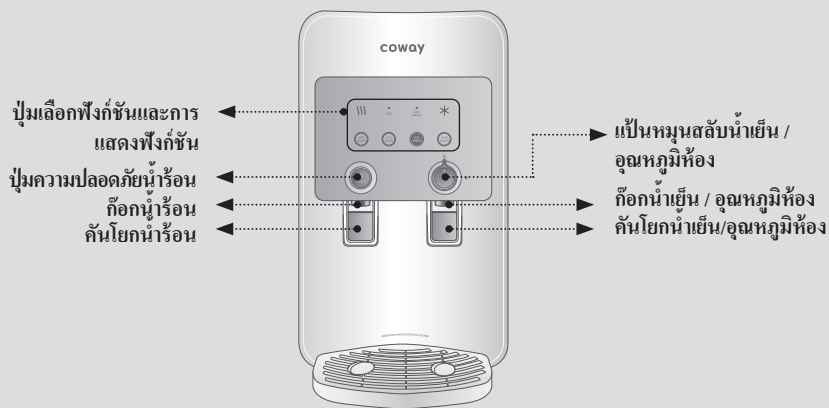

ด้านหลัง

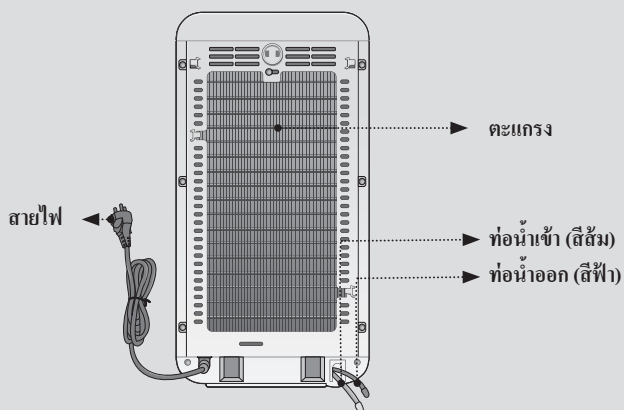

กระบวนการกรองน้ำดื่ม

หัวใจสำคัญของระบบการกรองน้ำคือไส้กรอง

การใช้ไส้กรองที่ไม่ได้รับการอนุมัติหรือการใช้ไส้กรองที่หมดอายุแล้ว อาจจะมีผลกระทบต่อประสิทธิภาพการทำงานในการกรองน้ำ

ระบบน้ำดื่ม 5 ขั้นตอน (CHP-264L)

ขั้นตอนที่ 1, 2 : ไส้กรอง PLUS NEO-SENSE

ไส้กรอง Plus Neo-Sense มีคุณสมบัติในการกำจัดอนุภาคขนาดเล็กและสิ่งปนเปื้อนที่ละลายอยู่ และยังมีคุณสมบัติในการกำจัดคลอรีน และสารประกอบอินทรีย์ระเหยง่าย (VOC's)

ขั้นตอนที่ 3 : ไส้กรองเมมเบรน (RO)


ไส้กรองเมมเบรน RO มีคุณสมบัติในการกำจัดสิ่งปนเปื้อนในน้ำเช่น โลหะหนัก จุลชีพในน้ำ และสารอินทรีย์ที่เป็นอันตรายต่างๆ ฯลฯ น้ำที่ไหลออกจากผลิตภัณฑ์ผ่านท่อระบายน้ำจะมีสารที่เป็นอันตรายซึ่งถูกกำจัดออก และถือว่าเป็นน้ำเสีย

ขั้นตอนที่ 4 : ไส้กรอง PLUS INNO-SENSE

ไส้กรอง Plus Inno-sense มีคุณสมบัติในการกำจัดกลิ่นและช่วยปรับปรุงรสชาติของน้ำ

ขั้นตอนที่ 5 : ไส้กรองANTIBACTERIAL

ไส้กรองแอนติแบคทีเรียนี้มีคุณสมบัติในการควบคุมและยับยั้งการเจริญเติบโตของจุลชีพในน้ำ

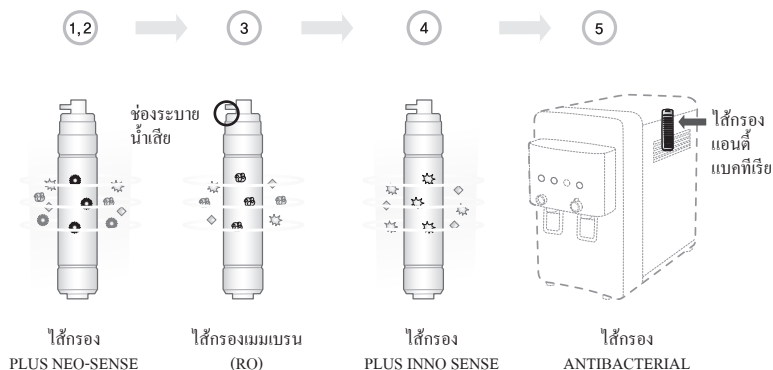

คำแนะนำ


การใช้น้ำเสีย

- น้ำเสียที่ถูกกำจัดออกควรนำไปใช้สำหรับการทำความสะอาดห้องน้ำ ทำความสะอาดบ้าน เสื้อผ้า หรือเพื่อวัตถุประสงค์อื่นๆ นอกเหนือจากการบริโภค
- อย่าใช้น้ำที่ถูกกำจัดออกเป็นน้ำดื่มหรือเพื่อประกอบอาหาร

ข้อควรระวังในการติดตั้ง

คำแนะนำสำหรับการติดตั้งเครื่องกรองน้ำอย่างถูกต้อง


1. ปิดวาล์วจ่ายน้ำหลักเพื่อแยกก๊อกน้ำออก

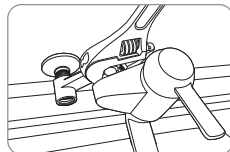

2. พันเทปเฟลอนบนอะแดปเตอร์ แล้วจึงประกอบท่อ




อย่าหมุนท่อน้ำ

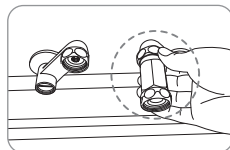

3. ประกอบก๊อกน้ำเข้ากับอะแดปเตอร์




ติดตั้งอะแดปเตอร์พร้อมข้อต่อเข้ากับท่อน้ำเย็น

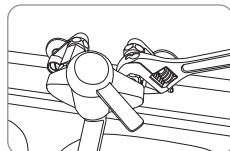


4. ต่อท่อ 1/4 นิ้วสลิสม์เข้ากับข้อต่อของอะแดปเตอร์



เปิดน้ำให้ไหลผ่านไส้กรองแต่ละชั้นอย่างน้อย 5 นาทีก่อนทำการเชื่อมต่อ

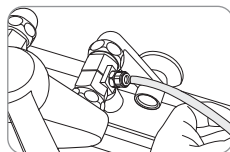

5. เปิดวาล์วจ่ายน้ำเพื่อจ่ายน้ำเข้าไปในระบบกรองน้ำ

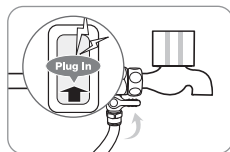

โปรดตรวจสอบก่อนใช้งาน

- ⚠️ ผลิตรักษาน้ำใช้ไฟฟ้า 220 V - 240 V~, 50 Hz**
ตรวจสอบให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V - 240 V~, 50 Hz
อุปกรณ์นี้จำเป็นต้องใช้ไฟฟ้าในการทำงาน



- **หลังจากติดตั้งเครื่องกรองน้ำ**
โปรคกรองน้ำเป็นเวลามากกว่า 70 นาที แล้วระบายน้ำออก 2 รอบเป็นอย่างน้อย
- **เมื่อไฟระบุสถานะปิด**
เมื่อไฟระบุสถานะปิด ให้ตรวจสอบว่าเกิดไฟฟ้าดับ แหล่งพลังงานถูกตัดด้วยสาเหตุอื่นๆ หรือไม่
- **การเปลี่ยนไส้กรองเป็นประจำ**
การเปลี่ยนไส้กรองเป็นประจำนั้นสำคัญอย่างยิ่งกับความสะดวกของน้ำดื่ม การใช้ไส้กรองที่หมดอายุจะลดประสิทธิภาพการทำงานของเครื่องกรองน้ำ ดังนั้นโปรดเปลี่ยนไส้กรองให้ตรงเวลา
- **เมื่อไม่ได้ใช้งานผลิตรักษาน้ำเป็นเวลานาน**
หากท่านเก็บน้ำไว้ในเครื่องหรือไม่ได้ใช้เครื่องกรองน้ำดื่มมาเป็นเวลานาน ให้ระบายน้ำออกมากกว่าหนึ่งรอบก่อนใช้งาน
- **เมื่อท่านต้องการจะไม่ได้ใช้งานผลิตรักษาน้ำเป็นเวลานาน**
ปิดวาล์วน้ำประปาแล้วถอดปลั๊กออก เมื่อจะไม่ได้ใช้งานผลิตรักษาน้ำเป็นเวลานาน




คำแนะนำ

เมื่อจะไม่ได้ใช้งานเป็นเวลานาน ให้ปิดวาล์วน้ำประปาและถอดปลั๊ก

ปุ่มและตัวแสดงผล

ส่วนตัวแสดงผล

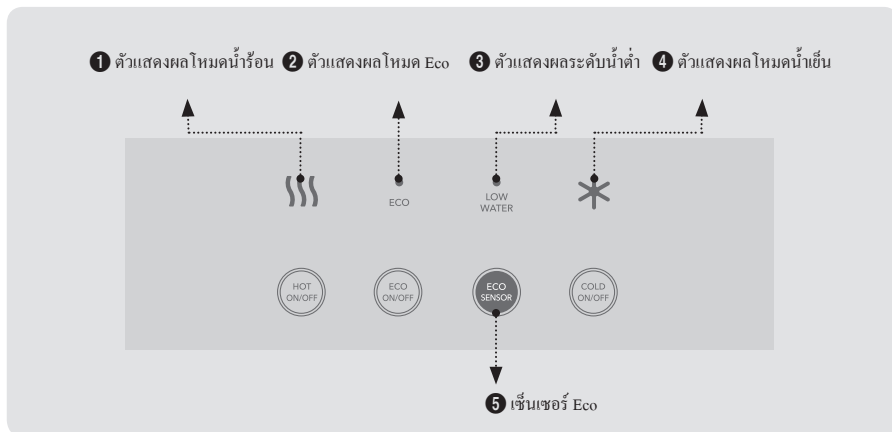

- 1 ตัวแสดงผลโหมคน้ำร้อน**
ตัวแสดงผลนี้จะสว่างขึ้นเมื่อเลือกน้ำร้อน



- 2 ตัวแสดงผลโหมค Eco**
ตัวแสดงผลนี้จะสว่างขึ้นเมื่อเลือกโหมค Eco



- 3 ตัวแสดงผลระดับน้ำต่ำ**
ตัวแสดงผลนี้จะสว่างขึ้นเมื่อระดับน้ำในถังเก็บน้ำเหลือน้อย




- 4 ตัวแสดงผลโหมคน้ำเย็น**
ตัวแสดงผลนี้จะสว่างขึ้นเมื่อเลือกน้ำเย็น



- 5 เซ็นเซอร์ Eco**
เซ็นเซอร์นี้จะตรวจจับแสงสว่างรอบๆ เครื่องกรองน้ำ เพื่อระบุว่าเป็นเป็นเวลากลางวันหรือกลางคืน

อุปกรณ์ควบคุม

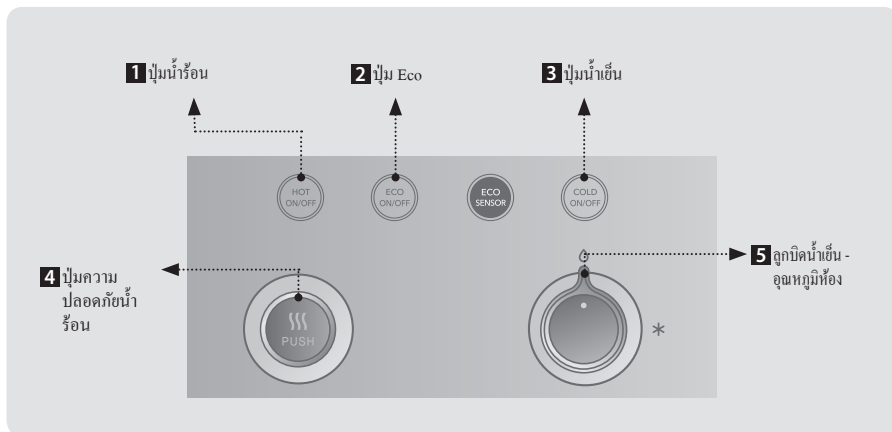

1 ปุ่มน้ำร้อน

ใช้ปุ่มนี้เพื่อเลือก/ยกเลิกการเลือกฟังก์ชันน้ำร้อน กดปุ่มค้างไว้อย่างน้อย 2 วินาที และไฟระบุสถานะจะสว่างขึ้น



2 ปุ่ม Eco

ใช้สำหรับเลือก/ยกเลิกการเลือกโหมด Eco กดปุ่มค้างไว้อย่างน้อย 2 วินาที และไฟระบุสถานะจะสว่างขึ้น



3 ปุ่มน้ำเย็น

ใช้ปุ่มนี้เพื่อเลือก/ยกเลิกการเลือกฟังก์ชันน้ำเย็น กดปุ่มค้างไว้อย่างน้อย 2 วินาที และไฟระบุสถานะจะสว่างขึ้น



4 ปุ่มความปลอดภัยน้ำร้อน

กดหนึ่งครั้งก่อนจ่ายน้ำ หากไม่กดปุ่มความปลอดภัยน้ำร้อน จะไม่สามารถจ่ายน้ำร้อนได้ แม้ว่าจะดันคันโยกใช้ถ้วยผสมก็ตาม



5 ลูกบิดน้ำเย็น - อุณหภูมิห้อง

ใช้เพื่อเลือกน้ำเย็นหรือน้ำอุณหภูมิห้อง


ปุ่มและตัวแสดงพล

■ การใช้ฟังก์ชันน้ำร้อน

กดปุ่มน้ำร้อนค้างไว้อย่างน้อย 2 วินาที เพื่อตรวจสอบว่าไฟระบุสถานะฟังก์ชันน้ำร้อนและไฟระบุอุณหภูมิน้ำร้อนสว่างขึ้นหรือไม่

ในการปิดฟังก์ชันน้ำร้อน ให้กดปุ่มน้ำร้อนค้างไว้อย่างน้อย 2 วินาทีอีกครั้ง

* ท่านจะสามารถกดน้ำร้อนได้ หลังจากเปิดฟังก์ชันน้ำร้อนได้ประมาณ 30 นาที

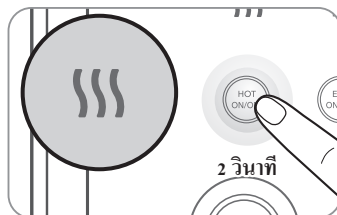


■ การใช้ฟังก์ชันน้ำเย็น

กดปุ่มน้ำเย็นค้างไว้อย่างน้อย 2 วินาที เพื่อตรวจสอบว่าไฟระบุสถานะฟังก์ชันน้ำเย็นและไฟระบุอุณหภูมิน้ำเย็นสว่างขึ้นหรือไม่

ในการปิดฟังก์ชันน้ำเย็น ให้กดปุ่มน้ำเย็นค้างไว้อย่างน้อย 2 วินาทีอีกครั้ง

* ท่านจะสามารถกดน้ำเย็นได้ หลังจากเปิดฟังก์ชันน้ำเย็นได้ประมาณ 30 นาที

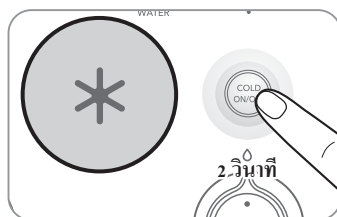

■ การใช้ฟังก์ชัน Eco

กดปุ่ม Eco ค้างไว้อย่างน้อย 2 วินาที เพื่อเปิดฟังก์ชัน Eco

ไฟระบุสถานะ Eco จะกะพริบเมื่อตรวจพบว่าเป็นเวลากลางคืน

* หากไฟระบุสถานะ Eco สว่าง อุณหภูมิน้ำเย็นจะเย็นลงเมื่อบริเวณรอบๆ เครื่องทำน้ำดื่มร้อน




คำแนะนำ

- หากเครื่องทำน้ำดื่มไม่จ่ายน้ำเย็น ให้ตรวจสอบว่าไฟระบุสถานะโหมดน้ำเย็นสว่างขึ้นหรือไม่ (ดูหน้า 11)
- เมื่อระดับน้ำอุณหภูมิห้องในถังเก็บน้ำเหลือน้อย ท่านอาจจะได้น้ำปริมาณน้อยกว่าปกติ
- ในกรณีไฟดับหรือเสียบปลั๊กใหม่ เครื่องจะรีเซ็ตไปที่การตั้งค่าครั้งล่าสุด

วิธีการใช้งาน

วิธีกดน้ำเย็น

กดปุ่มน้ำเย็นและตรวจสอบว่าไฟสถานะน้ำเย็นสว่างขึ้นหรือไม่
หมุนลูกบิดเลือกน้ำเย็น - อุณหภูมิห้องไปทางขวา แล้วกดคันโยก
สัมผัส


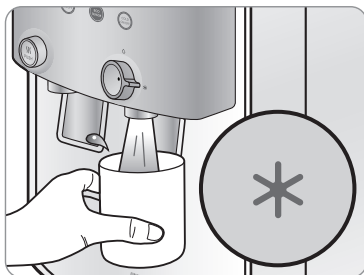


คำแนะนำ

- หากเครื่องทำน้ำดื่มไม่จ่ายน้ำเย็น ตรวจสอบว่าไฟสถานะน้ำเย็นสว่างขึ้นหรือไม่ (ดูหน้า 11)

วิธีกดน้ำเย็นอย่างต่อเนื่อง



กดปุ่มน้ำเย็นและตรวจสอบว่าไฟสถานะน้ำเย็นสว่างขึ้นหรือไม่
หมุนลูกบิดเลือกน้ำเย็น - อุณหภูมิห้องไปทางขวา แล้วดันคันโยก
ใช้ถ้วยสัมผัสขึ้น เพื่อล็อกคันโยกให้อยู่กับที่

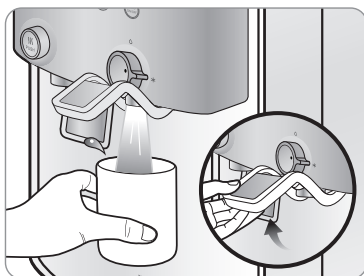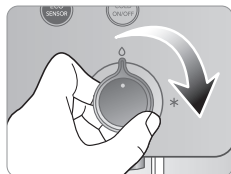

วิธีการใช้งาน



วิธีกดน้ำอุณหภูมิห้อง

หมุนลูกบิดเลือกน้ำเย็น - อุณหภูมิห้องไปทางซ้าย แล้วกดคันโยก
ใช้ถ้วยสัมผัส

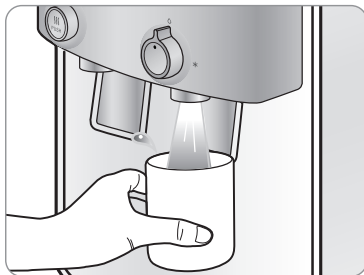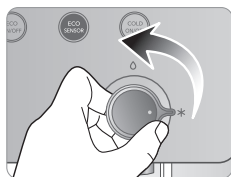


วิธีกดน้ำอุณหภูมิห้องอย่างต่อเนื่อง

หมุนลูกบิดเลือกน้ำเย็น - อุณหภูมิห้องไปทางซ้าย แล้วดันคันโยก
ใช้ถ้วยสัมผัสขึ้น เพื่อสื่อกันโยกให้อยู่กับที่

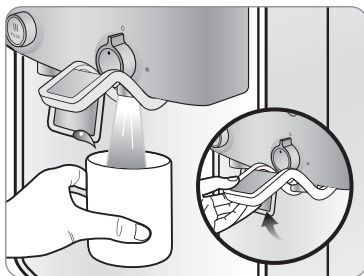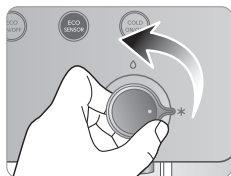

วิธีกดน้ำร้อน

กดปุ่มความปลอดภัยน้ำร้อน แล้วดันคันโยกใช้ถ้วยสัมผัส กดปุ่มน้ำร้อนและตรวจสอบว่าไฟสถานะน้ำร้อนสว่างขึ้นหรือไม่ กดปุ่มความปลอดภัยน้ำร้อนอีกครั้ง

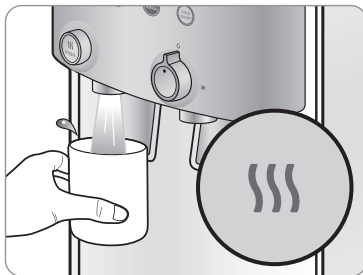


คำแนะนำ

- หากเครื่องกรองน้ำไม่จ่ายน้ำร้อน ตรวจสอบว่าไฟระบุสถานะโหมดน้ำร้อนสว่างขึ้นหรือไม่ (ดูหน้า 11)
- โปรดระวังน้ำร้อนลวกในขณะที่ใช้ฟังก์ชันน้ำร้อน

วิธีกดน้ำร้อนอย่างต่อเนื่อง

กดปุ่มความปลอดภัยน้ำร้อน แล้วดันคันโยกใช้ถ้วยสัมผัสขึ้น เพื่อล็อกคันโยกให้อยู่กับที่

กดปุ่มน้ำร้อน และตรวจสอบว่าไฟสถานะน้ำร้อนสว่างขึ้นหรือไม่

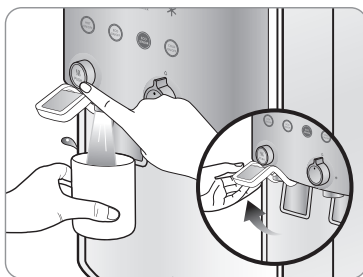


วิธีติดตั้ง

คำแนะนำการติดตั้ง


สำหรับ

220 V - 240 V~, 50 Hz

เท่านั้น

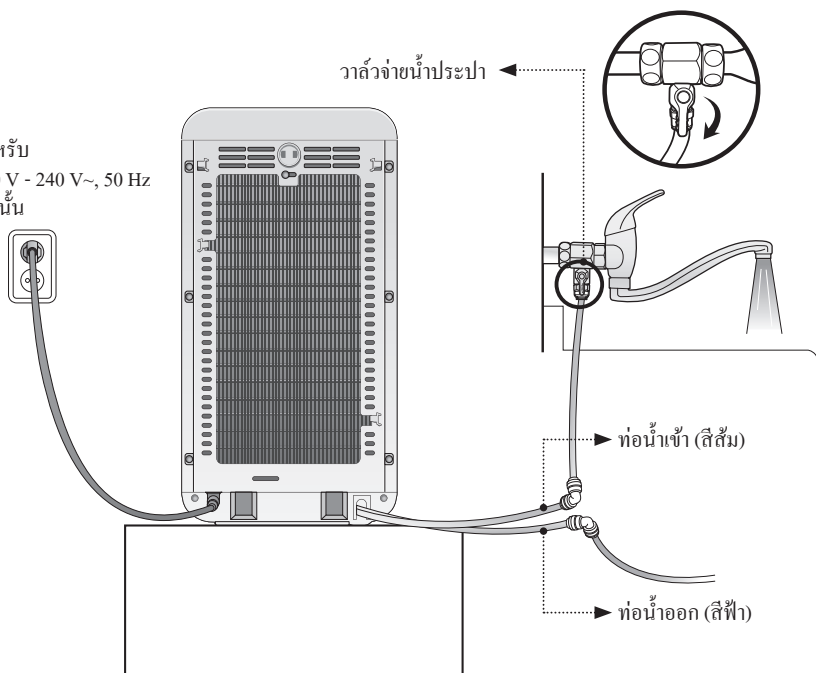

ต่อท่อน้ำเข้าสีส้ม ❶ เข้ากับท่อจ่ายน้ำประปา
ต่อท่อน้ำออก ❷

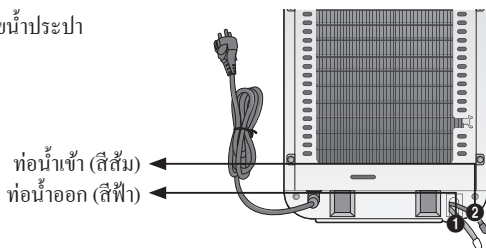

ข้อควรระวัง

■ พื้นที่ติดตั้งเครื่องกรองน้ำ I

หลีกเลี่ยงการติดตั้งเครื่องกรองน้ำในบริเวณที่พื้นไม่เรียบ มีความชื้นสูง ได้รับแสงแดดอย่างรุนแรง มีฝุ่นปริมาณสูงมาก และบริเวณที่โดนน้ำ ฯลฯ

■ พื้นที่ติดตั้งเครื่องกรองน้ำ II

ตะแกรงหม้อน้ำที่ด้านหลังของผลิตภัณฑ์ควรห่างจากผนังอย่างน้อย 10 ซม. และตรวจสอบให้แน่ใจว่าพื้นที่ติดตั้งนั้นแข็งแรง

■ หลังจากติดตั้ง

โปรดระบายน้ำออกจากถังเก็บน้ำสำรอง หลังจากติดตั้งผลิตภัณฑ์

■ ท่อน้ำเย็น

ตรวจสอบให้แน่ใจว่าท่อเข้ากับท่อน้ำเย็น (หากต่อกับท่อน้ำร้อน ให้กรองอาจเสียหายได้)

■ การย้ายที่และการติดตั้ง

เมื่อย้ายที่ผลิตภัณฑ์ ให้รออย่างน้อย 30 นาทีหลังจากการติดตั้ง ก่อนที่จะเสียบปลั๊ก



คำแนะนำ

เพื่อให้ผลิตภัณฑ์ทำงานได้อย่างมีประสิทธิภาพสูงสุด โปรดติดต่อช่างของ Coway เพื่อสอบถามรายละเอียดเกี่ยวกับการติดตั้งที่เหมาะสม


⚠️ "อาจมีน้ำที่ใช้ในการตรวจสอบหลังการผลิตค้างอยู่ในไส้กรองโปรดอย่าตกใจ นี่ไม่ใช่ผลิตภัณฑ์ใช้แล้ว"

⚠️ อย่าใช้ว่าส้วน้ำประปาและท่อเก่าสำหรับติดตั้งเครื่องกรองน้ำ

วิธีทำความสะอาด




วิธีทำความสะอาดภายในตู้น้ำ

1. กดปุ่มน้ำเย็น/น้ำร้อนที่ด้านหน้าของเครื่องค้างไว้ 2-3 วินาทีเพื่อปิดเครื่อง แล้วจึงถอดปลั๊กสวิตช์จั่ววยน้ำ



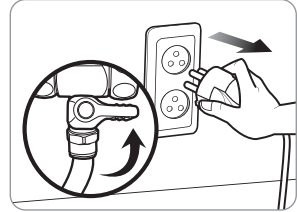


2. ใช้ท่อถ่ายน้ำและก๊อคน้ำเย็น/อุณหภูมิห้องในการระบายน้ำทั้งหมดออกจากเครื่องกรองน้ำ


* ระบายน้ำออกจากถังเก็บน้ำเย็น/อุณหภูมิห้องด้วยก๊อคน้ำเย็น/อุณหภูมิห้อง และระบายน้ำออกจากถังเก็บน้ำร้อนด้วยท่อระบายน้ำด้านข้าง

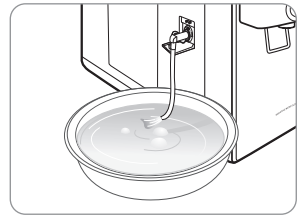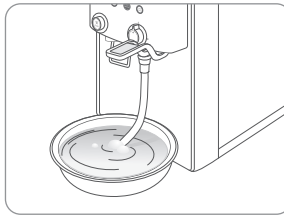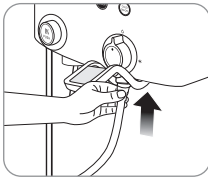


3. ดันฝาครอบด้านบนของผลิตภัณฑ์เพื่อเปิดออก ปลดคลิบ (6 จุด) ที่ยึดถังเก็บน้ำภายใน แล้วเปิดฝเปิดถังเก็บน้ำออก

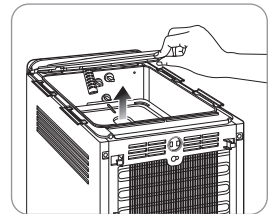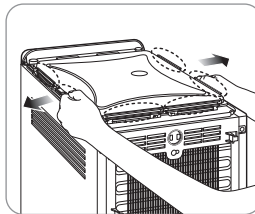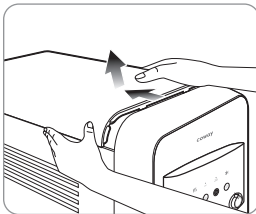




4. หมุนถอดไส้กรอง ANTIBACTERIAL ออกจากใต้ฝเปิดถังเก็บน้ำ และล้างโดยการเขย่าในน้ำจากเครื่องกรองน้ำที่ถ่ายเก็บไว้ก่อนหน้านี้

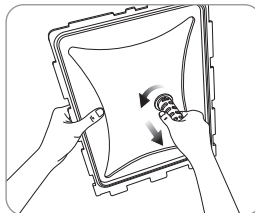



5. เช็ดพื้นผิวของถังเก็บน้ำภายในด้วยผ้านุ่ม

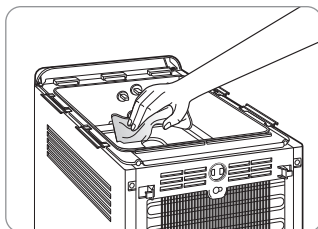


6. ล้างถังเก็บน้ำภายในให้สะอาดด้วยน้ำที่ถ่ายเก็บไว้ล่วงหน้าจากเครื่อง จากนั้นใช้ท่อถ่ายน้ำเพื่อระบายน้ำออกให้หมด ให้เครื่องทำการกรองน้ำจนเต็มถังเก็บน้ำหนึ่งรอบและ ระบายออก จากนั้นจึงใช้งานได้

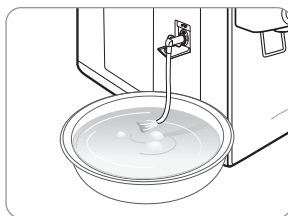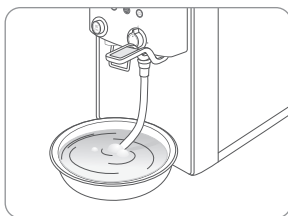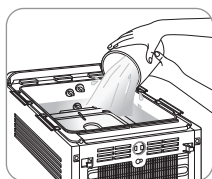

7. หมุนประกอบไส้กรองAntibacterial เข้ากับฝาปิดถังเก็บน้ำ และปิดฝาถังเก็บน้ำโดยกดล็อกคิลิปทั้ง6จุดรอบฝาถัง

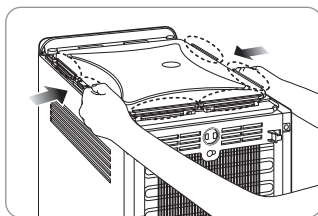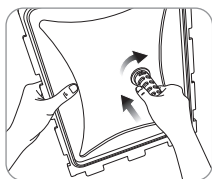

8. ปิดฝาครอบด้านบนแล้วเสียบปลั๊ก จากนั้นให้เปิดวาล์วจ่ายน้ำ ตรวจสอบว่ามีน้ำออกมาจากก๊อกน้ำเย็น/อุณหภูมิห้องและก๊อกน้ำร้อน จากนั้นให้กดปุ่มน้ำร้อน/เย็นที่ด้านหน้าของผลิตภัณฑ์เพื่อเปิดเครื่อง

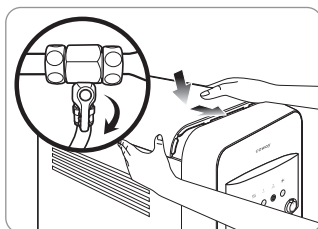


วิธีทำความสะอาด

วิธีทำความสะอาด


1. วิธีถอดถาด

สามารถถอดค้ำหน้าของถาดรองได้อย่างง่ายดายโดยการยกขึ้นเล็กน้อย

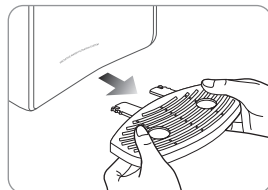

2. วิธีประกอบถาด

เลื่อนถาดเข้าที่ด้านล่างของผลิตภัณฑ์

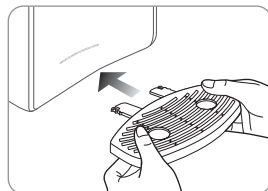

คำแนะนำ



ปิดฝาถังเก็บน้ำภายในให้สนิท มิฉะนั้นอาจมีแมลงหรือฝุ่นเข้าไปได้
อย่าใช้สารเคมีหรือน้ำยาทำความสะอาดในการทำความสะอาดถังเก็บน้ำภายใน หากล้างสารเคมีหรือน้ำยาทำความสะอาดออกไม่หมด มันอาจเป็นอันตรายต่อสุขภาพของท่านได้

- รักษาความสะอาดบริเวณรอบๆ เสมอ และทำความสะอาดถังเก็บน้ำภายในทุกสองเดือน


อย่า
ใช้ยาทำความสะอาด,
สาร X



วิธีทำความสะอาดตู้เครื่อง

ใช้ผ้าสะอาดเช็ดผลิตภัณฑ์

* หากมีฝุ่นหนา ให้ใช้ผ้าเปียกเช็ด
(อย่าใช้วัสดุผงขัด)

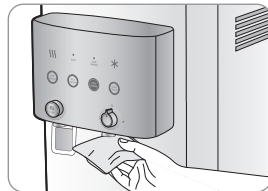

คำแนะนำ


- อย่าฉีดน้ำบนผลิตภัณฑ์โดยตรงเพื่อทำความสะอาด
- อย่าใช้ทินเนอร์ เบนซิน หรือสารทำความสะอาดที่มีวัสดุผงขัด หรือผ้าหยาบในการทำความสะอาด

วิธีทำความสะอาดเบ๊นท็อกน้ำ

1. ถอดปลายท็อกน้ำโดยการหมุนตามเข็มนาฬิกา




2. ล้างปลายท็อกน้ำด้วยน้ำ

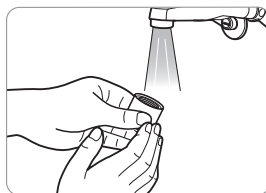

3. หลังจากล้างแล้ว ให้เช็ดด้วยผ้าที่นุ่มและแห้ง



4. ใส่ปลายท็อกน้ำกลับเข้าที่โดยการหมุนทวนเข็มนาฬิกาหลังจากทำความสะอาดแล้ว

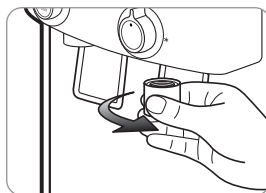

คำแนะนำ




ห้ามใช้ก้อนสำลีทำความสะอาด
เนื่องจากอาจมีเศษสำลีตกค้าง

ดัชนีไขถ้วยสัมพั

เช็ดบริเวณที่สกรปรกของคันโยกใช้ถ้วยสัมพัด้วยผ้าที่นุ่มและแห้ง

* หากสกปรกมาก ให้เช็ดด้วยผ้าเปียกหมาดๆ

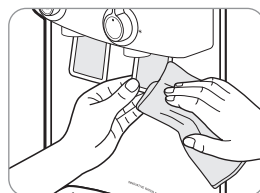

การเปลี่ยนไส้กรอง

■ ไส้กรอง

ไส้กรองคือส่วนประกอบที่สำคัญสำหรับระบบกรองน้ำ การใช้ไส้กรองที่ได้รับอนุญาต และเปลี่ยนไส้กรองตามกำหนดการที่ระบุนั้นสำคัญต่อการรักษาคุณภาพน้ำและทำให้ระบบทำงานได้ตามปกติ โปรดเปลี่ยนไส้กรองตามกำหนดการที่ระบุ ท่านสามารถซื้อไส้กรองได้โดยการติดต่อตัวแทนจำหน่าย Coway ที่ได้รับการอนุมัติ




■ รอบการเปลี่ยนไส้กรอง

ไม่เปลี่ยนไส้กรองเป็นประจำอาจทำให้คุณภาพน้ำจากผลิตภัณฑ์ลดลง รอบการเปลี่ยนไส้กรองอาจแตกต่างกันไปจากรอบการเปลี่ยนไส้กรองตามปกติโดยขึ้นอยู่กับคุณภาพน้ำที่ป้อนเข้าไปในเครื่อง

CHP-264L

รุ่นไส้กรอง	ชื่อไส้กรอง	รอบการเปลี่ยน
CNFN8S-PLUS	ไส้กรอง Plus Neo-Sense	6
CRMFN8S-20	ไส้กรองเมมเบรน RO	24
CIFN8S-PLUS	ไส้กรอง Plus Inno-Sense	18
CAF-03	ไส้กรองANTIBACTERIAL **	12

* รอบการเปลี่ยนไส้กรองอาจแตกต่างกันไปโดยขึ้นอยู่กับสิ่งแวดล้อม

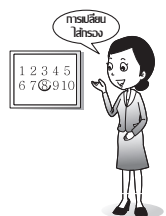

■ เกี่ยวกับรอบการเปลี่ยนไส้กรอง


รอบการเปลี่ยนไส้กรองที่ระบุข้างต้นไม่ใช่ระยะเวลารับประกันคุณภาพไส้กรอง แต่เป็นระยะเวลา (อายุการใช้งาน) ที่คาดว่าไส้กรองจะทำงานได้ตามปกติ ดังนั้นรอบการเปลี่ยนไส้กรองอาจจะสั้นลงในพื้นที่ซึ่งมีน้ำคุณภาพต่ำหรือมีการบริโภคน้ำในปริมาณสูง




วิธีการเปลี่ยนไส้กรอง

เปลี่ยนไส้กรอง

1. ปิดวาล์วจ่ายน้ำหลักหลังจากถอดปลั๊ก และระบายน้ำออกจากเครื่องทำน้ำดื่ม

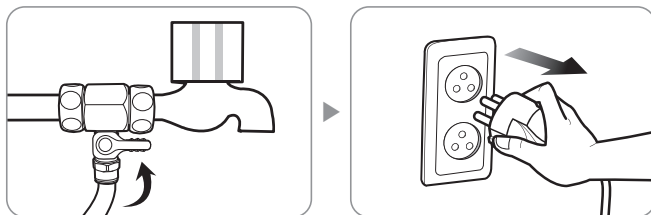

2. ถอดข้อต่อที่เชื่อมต่อกับไส้กรอง และเปลี่ยนไส้กรองใหม่ (ใช้เครื่องมือที่ถูกต้องในการถอดข้อต่อ)

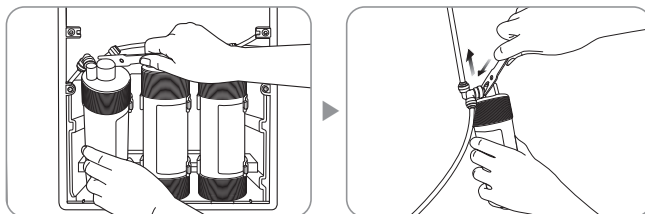

คำแนะนำ

- ⚠ หลังจากเปลี่ยนไส้กรองและประกอบข้อต่อและท่ออย่างเหมาะสมแล้ว ให้ตรวจสอบว่ามีน้ำรั่วไหลหรือไม่ จากนั้นให้ระบายน้ำกรองชุดแรกออกหลังจากเปลี่ยนไส้กรอง

3. ใส่ส่วนล่างของฝาครอบด้านข้างให้เข้าที่



คำแนะนำ

- ⚠ ใช้ไส้กรองใหม่หลังจากล้างแล้วเท่านั้น
- ไส้กรอง Plus Neo-Sense คัดตั้งหลังจากล้างด้วยน้ำประปาประมาณ 1 นาที
 - ไส้กรองเมมเบรน (RO): คัดตั้งว่าน้ำกรองหลังจากล้างด้วยน้ำประปาประมาณ 5 นาที
 - ไส้กรอง Plus Inno-Sense: คัดตั้งโดยไม่ต้องล้างแยกต่างหาก

การแก้ไขปัญหา

"เครื่องกรองน้ำอาจทำงานผิดปกติเพราะว่าผู้ใช้ไม่คุ้นเคยกับผลิตภัณฑ์หรือเนื่องจากสาเหตุอื่น แต่ไม่ว่าเพราะว่าผลิตภัณฑ์ทำงานผิดพลาด ในกรณีดังกล่าว ท่านสามารถแก้ปัญหาได้อย่างง่ายดายโดยไม่ต้องขอความช่วยเหลือจากศูนย์บริการ โดยการตรวจสอบดังต่อไปนี้ หากปัญหายังไม่ได้รับการแก้ไขหลังจากตรวจสอบตามรายการต่อไปนี้แล้ว โปรดติดต่อศูนย์บริการ"

อาการ	ตรวจสอบ	วิธีการแก้ไข
น้ำมีรสชาติแปลกๆ	• คุณได้ทำความสะอาดถังน้ำภายในหรือไม่	ทำความสะอาดถังน้ำภายใน
	• คุณไม่ได้ใช้งานเครื่องกรองน้ำคืบมาเป็นเวลานาน	ระบายน้ำที่คั่งค้างอยู่ข้างในและทำความสะอาดถังเก็บน้ำ
	• ถึงเวลาเปลี่ยนไส้กรองแล้วหรือเปล่า	เปลี่ยนไส้กรอง
ไม่มีน้ำจ่ายออกมา	• น้ำประปาถูกตัดหรือว่าถั่วน้ำปิดอยู่หรือไม่	เปิดวาล์วจ่ายน้ำหลัก
	• คุณลืมรอบการเปลี่ยนไส้กรองหรือเปล่า	เปลี่ยนไส้กรอง
น้ำไหลช้าลง	• ถึงเวลาเปลี่ยนไส้กรองแล้วหรือเปล่า	เปลี่ยนไส้กรอง
	• เสียบปลั๊กเข้ากับระบบไฟฟ้าที่มีอัตราแรงดันไฟฟ้าที่ตรงกับป้ายระบุคู่มือไฟฟ้าบนผลิตภัณฑ์หรือไม่	เสียบปลั๊กเข้ากับระบบไฟฟ้าที่มีอัตราแรงดันไฟฟ้าที่ตรงกับป้ายระบุคู่มือไฟฟ้า
	• คุณเปิดวาล์วจ่ายน้ำหลักอยู่หรือเปล่า	เปิดวาล์วจ่ายน้ำหลัก
	• อุณหภูมิของน้ำที่จ่ายเข้าลดลงจับปล้นหรือไม่	หากอุณหภูมิน้ำลดลง ปริมาณน้ำนั้นลดลง
น้ำเย็น / ร้อนไม่จ่ายออกมา	• ไพร่บรูสถานะไหนค่นน้ำเย็นสว่างหรือไม่	โปรดคลปุมเลือกไหนค่นน้ำเย็น
	• คุณเปิดวาล์วจ่ายน้ำหลักอยู่หรือเปล่า	หากระดับน้ำต่ำ ฟังก์ชันการทำความเย็นจะไม่ทำงาน เพื่อปกป้องมอเตอร์ไฟฟ้า เปิดวาล์วจ่ายน้ำหลัก
	• ด้านหลังของอุปกรณ์กรองน้ำใกล้กับผนังเกินไปหรือไม่	โปรดตั้งอุปกรณ์กรองน้ำให้ห่างจากผนังอย่างน้อย 10 ซม.
ผลิตภัณฑ์หยุดทำงานอย่างฉับพลัน	• มีน้ำจ่ายเข้ามาอยู่หรือไม่	ตรวจสอบวาล์วจ่ายน้ำหลัก
	• เสียบปลั๊กเข้ากับระบบไฟฟ้าที่มีอัตราแรงดันไฟฟ้าที่ตรงกับป้ายระบุคู่มือไฟฟ้าบนผลิตภัณฑ์หรือไม่	เสียบปลั๊กเข้ากับระบบไฟฟ้าที่มีอัตราแรงดันไฟฟ้าที่ตรงกับป้ายระบุคู่มือไฟฟ้า
	• มีน้ำสันหรือว่าไหลหรือเปล่า	แจ้งขอ A/S

ข้อมูลจำเพาะ:


ผลิตภัณฑ์		เครื่องกรองน้ำ Coway
รุ่น		CHP-264L
วิธีการกรองน้ำ		รีเวอร์สออสโมซิส
แหล่งจ่ายไฟ		220 V - 240 V~, 50 Hz
ความจุของถังเก็บน้ำ	น้ำอุณหภูมิห้อง	2.5 ลิ.
	น้ำเย็น	2.3 ลิ.
	น้ำร้อน	1.0 ลิ.
	รวม	5.8 ลิ.
ขนาด		260 มม. (ก) X 505 มม. (ล) X 500 มม. (ส)
อุณหภูมิการทำงาน		5 °C - 35 °C
อัตราการผลิต		76 L/d (25 °C, 0.14 Mpa)
แรงดันในการทำงาน		137 kPa – 827 kPa
น้ำหนักโดยรวม		18 กก.

- ปริมาณน้ำจะแตกต่างกันออกไปโดยขึ้นอยู่กับแรงดันน้ำและอุณหภูมิ
- ความจุของถังน้ำขึ้นอยู่กับขนาดซึ่งอาจจะแตกต่างจากปริมาณน้ำที่กรอง
- อาจมีการเปลี่ยนแปลงชิ้นส่วนต่างๆ ของผลิตภัณฑ์นี้โดยไม่มีการแจ้งให้ทราบล่วงหน้าเพื่อวัตถุประสงค์ในการปรับปรุงประสิทธิภาพของผลิตภัณฑ์
- อ้างอิงเอกสารข้อมูลประสิทธิภาพการทำงานสำหรับวัตถุดิบเป็นอน ประสิทธิภาพการทำงานที่ลดลง และข้อมูลการทำงาน

THAILAND
Add : Coway (Thailand) Co., Ltd. 75/104-106 Ocean Tower 2 38th Fl, Soi Sukhumvit 19 (Wattana), Sukhumvit Road, Klongtoey Nua, Wattana, Bangkok 10110 Call center : 1421

แผนภาพการไหลของน้ำ

CHP-264L

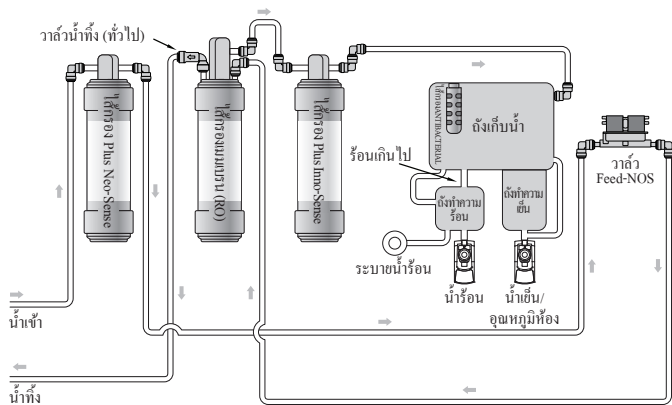

บันทึก

////////////////////////////////////

บันทึก

////////////////////////////////////

บันทึก

////////////////////////////////////

coway

www.coway.com