

Waternet Water Purifier User's Manual CHP-6310L


This product can not be used if the voltage is different from that mentioned in the rating plate.
For your safety and proper use of the product, please read this User's Manual before use.
English/Thai

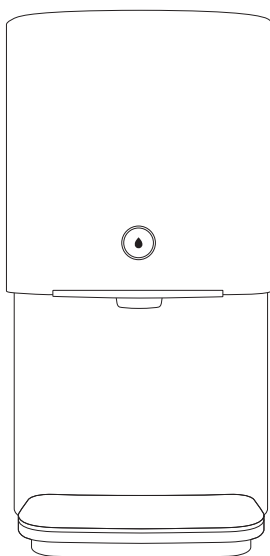

FEATURES

| Convenient quantitative dispensing for hot, cold and ambient water.

This convenient feature automatically extracts the exact amount of water (ambient, cold or hot) you wish through a single faucet.

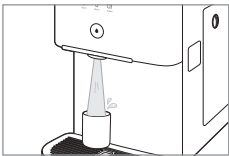


| Cold Water Plus feature

With this feature, a more abundant supply of cold water can be provided as this model uses separate cold and ambient water tanks.



| Energy saving light sensor

When in ECO mode, the device automatically reduces the frequency of motor and heater operation to reduce power consumption.

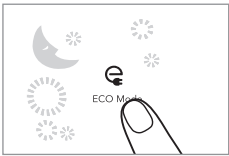

| Slim size and a refined design

This device can be conveniently installed and used in any kitchen, no matter how small, with its slim size and elegant design.



Thank you for using **Coway Water Purifier**
Please read this User Manual to learn about proper usage and maintenance of the product.
When a problem occurs while using the product,
it can be solved by referring to the instructions in this manual.

| CONTENTS

Product Information

- | 03 | Safety Information
- | 07 | Parts Name
- | 08 | Water Purification Process

How to use

- | 09 | Please Check Before Use
- | 10 | How to Use Hygienically
- | 11 | Buttons and Indicators
- | 16 | How to Get the Desired Water
 - How to Get Cold Water
 - How to Get Ambient Water
 - How to Get Hot Water

Maintenance

- | 18 | How to Install
- | 20 | How to Clean
 - How to Clean internal water tank
 - How to Clean the Tray
 - How to Clean Water Purifier
 - How to Clean Transparent Faucet Cover
- | 24 | Filter Replacement
- | 25 | How to Replace the Filter
- | 27 | Regular Maintenance

Others

- | 28 | Troubleshooting
- | 30 | Specification

- Please keep the user manual in easily accessible areas. -

SAFETY INFORMATION

Please follow the instructions as they are for your safety.

Please read this information to ensure your safety and prevent property damage.
Please read the cautions carefully and use the product correctly.



Danger

If not observed, serious injury or property damage could occur.



Warning

If not observed, serious injury or property damage could occur.



Caution

If not observed, serious injury or property damage could occur.

| ⚠ DANGER : Indicates an imminently hazardous situation which if not avoided, will result in death or serious injury.

- Do not use damaged power plugs or loose sockets.
- Do not pull on the power cord.
- Do not pull on the power cord to move the product.
- Do not touch the power plug with wet hands.
- Do not bend the power cord excessively or put it under a heavy object to avoid damage or deformation.
- Do not plug and unplug the power cord repeatedly.
- When the power area comes into contact with water, unplug the power plug and completely dry it prior to use.
- Make sure to unplug the power cord when repairing, inspecting the product or changing its parts.
- Completely wipe off dust, water etc. on the power plug's pins and areas of contact with the pins.
- Do not connect multiple products to one power outlet. Use a separate socket for the product.
- Lock the tap water supply valve and disconnect power when not using the product for an extended period of time.
- Do not modify the power cord on your own.
- If the power cord is damaged, do not attempt to replace the cord. Instead, contact the service center to replace it.

- Do not install near sources of heat.
- Connect the tap water to the cold water tubing.



Warning; Risk of fire / flammable materials

- ▲ THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED.**
- ▲ CHILDREN SHALL NOT PLAY WITH THE APPLIANCE.**
- ▲ CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.**

SAFETY INFORMATION

Please follow the instructions as they are for your safety.

Please read this information to ensure your safety and prevent property damage.
Please read the cautions carefully and use the product correctly.



Danger

If not observed, serious injury or property damage could occur.



Warning

If not observed, serious injury or property damage could occur.



Caution

If not observed, serious injury or property damage could occur.

| ⚠ WARNING : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

- Do not apply excessive force or impact to the product.
- Do not install the product on a tilted surface. Do not apply excessive force or impact to the product.
- Do not install in a location with too much humidity or dust or in a location exposed to water or rain.
- Do not directly spray water on the product for cleaning or use benzene or thinner to wipe the product.
- As the refrigerant used in this product is isobutane (R-600a), which is a combustible natural gas, ensure that the product is not damaged while moving it.
- If the refrigerant leaks from the internal piping, a fire or injury may occur.
- Move away all flammable objects or object that ignite sparks, and then ventilate the area.
- The refrigerant used in this product is isobutane (R-600a), a combustible natural gas. For your safety, contact your local community center before throwing away to safely dispose of this product.
- Do not damage pipes, etc. while disposing of this product.


| ▲ CAUTION : Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or damage to the product or other properties.

- Use tap water as source water.
 - ① Use tap water that is suitable for drinking as source water.
 - ② Do not use in wet places such as bathroom.
 - ③ Do not use in places of high humidity or temperature.
- Drain the stored water as well as newly filtered water one more time completely prior to use when not using the product for an extended period of time.
- Do not come into close contact with hot water as it is very hot and scalding may occur.
- Please replace the filter according to the filter replacement cycle for clean water.
- People with physical, sensory, or mental impairment as well as children must be supervised or guided while using the water purifier.
- You must use the new hose set provided with this product. Do not reuse old hose sets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children are not to play with the product.
- Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is intended to be used in household and similar applications such as.
 - staff kitchen areas in shops, offices and other working environments.
 - farm houses and by clients in hotels, motels and other residential type environments.
 - bed and breakfast type environments.


READ AND SAVE THESE INSTRUCTIONS

PARTS NAME

| Front / Back

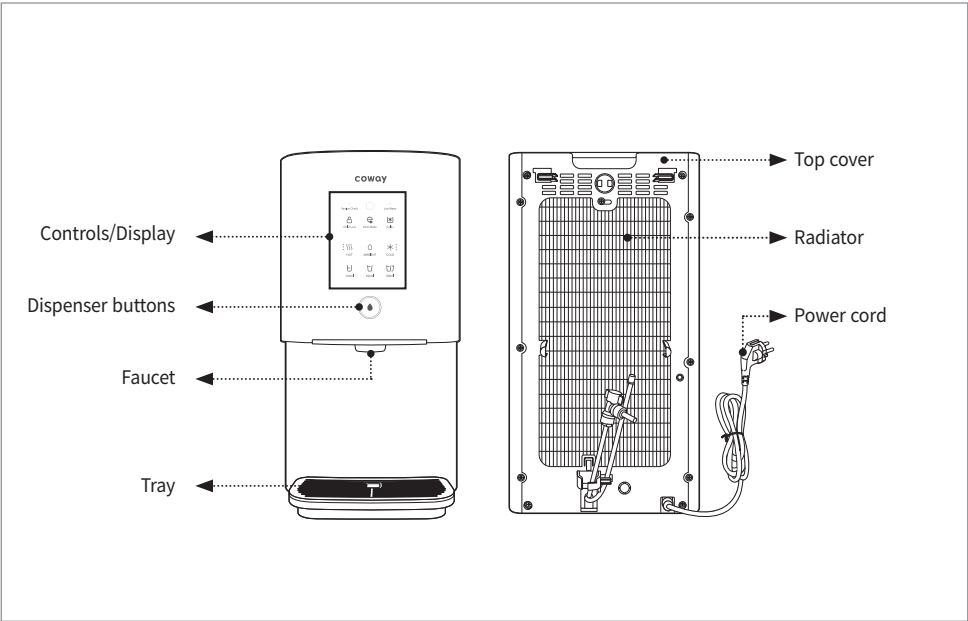

| Accessories

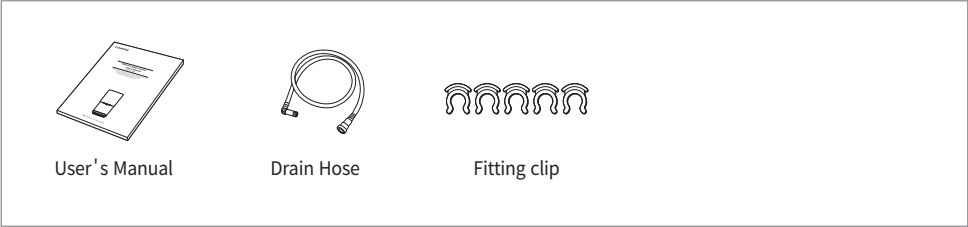

The essence of the water filtration system lies in the filters.

Using an uncertified filter, or even using a certified yet expired filter may reduce filter performance.

| 4-step water Purification System

Step 1, 2 : Neo-Sense filter

This Neo-Sense filter has the function of reducing particulates, dissolved organic and inorganic impurities. It also has another function to remove chlorine, volatile organic compounds. (VOC's)


Step 3 : Membrane filter (RO)

RO Membrane filter has a function to reduce water contaminants such as heavy metals, waterborne microorganisms and harmful organic chemicals etc.

The water which contains harmful materials is eliminated through the reject water hose as disposed water.

Step 4 : Plus Inno-Sense filter

This Plus Inno-Sense filter has functions to reduce smell inducing material and to improve the taste of water.

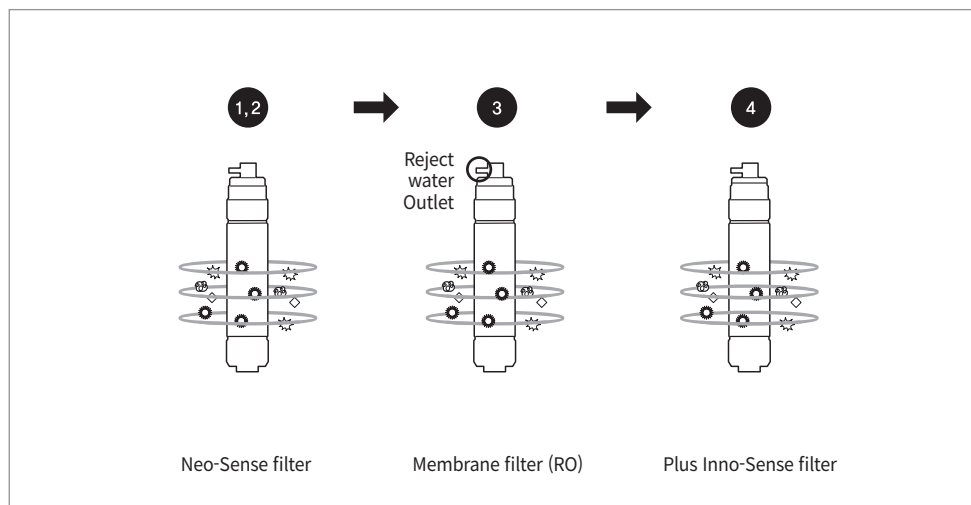

Tips

► Uses of the disposed water


- The disposed water should be used only for cleaning the house, clothes, or purposes other than drinking.
- Never use the disposed water for drinking or for cooking.

PLEASE CHECK BEFORE USE

| Please check before use!

This product is for 220 V~, 50 Hz.

Make sure to connect the power plug to a grounded 220 V~, 50 Hz outlet. It requires a power supply to operate.



| Open the tap water valve

The water purifier can work properly only when the tap water is supplied.

| When indicator light on the display is turned off

When the indicator light is off, check if there is a blackout or if the power supply is cut off for other reasons.

| When the product has not been used for a long time

Completely drain the stored water as well as newly filtered water one more time prior to use when using the product after an extended period of time.

| After installation

After installation, filter and drain water for at least 130 minutes.
(Use after draining purified water at least twice.)

| Regular filter replacement

Regular filter replacement is crucial for clean drinking water.
Using expired filters decreases water purifier performance, so please replace the filters on time.

| How to drain hot water

Press the drain cover on the side of the device,
then insert the drain hose (continuous dispensing hose) to drain hot water from inside the hot water tank.
(Be careful not to be burned while draining hot water.)




Tips

Turn off the tap water valve and unplug the power cord when not using the water purifier for a long time.

Category	Type	Details
Period of use	When not used for a long time	• Refer to "Cleaning" in the instruction manual for instructions on interior cleaning and storage. When using after long-term storage, clean before reuse.
How to Use	Faucet Contamination	• Do not touch the faucet area with your hands, mouth, or cups you have used.
		• Self-care - Wipe the faucet with a clean, dry rag/non-woven fabric, etc. (wipe once per week.)
	When getting water	• Be careful that drinks (coffee, tea, carbonated beverages) and food don't splash into the faucet or onto the front cover.
		• If there are drinks or other foreign matter on the device, wipe immediately to prevent further contamination.
	Tray and filtered water tank	• Do not throw in coffee, drinks, food, or anything other than leftover water.
		• Do not leave water in the tray for more than one day. Clean these parts yourself once per week.
Hardware	Product disassembly	• Do not disassemble or open the device at your discretion.
	Product use	• Do not put anything on top of the device. (there may be contamination.)
	Filter	• Do not install or use filters other than genuine Coway filters.
	Checkups	• Have your device serviced once every 2 months. * Maintenance period may differ by product.
	Filter replacement cycle	• Have filters replaced and checked according to the replacement cycle set for each filter.
Maintenance	Maintenance personnel	• Have your Coway device serviced by a Coway Cody or Coway Technician. • If part replacement or interior cleaning are done by someone without expertise, there is a risk of leakage, etc. Request a Coway Cody or Coway Technician.
	Maintenance card record	• If checkup/cleaning/part replacement was done during servicing, check that this information has been recorded on the maintenance card.
	Surroundings	• Keep the device surroundings clean (trash can, etc.) so it stays in a hygienic environment.
Installation	Product disassembly and installation	• Do not install or disassemble the device at your own discretion; have a Coway Technician do it.
	Installation environment	• Do not install the device where it may easily be contaminated. - Unhygienic places such as inside bathrooms, places with a lot of mice or insects (ants, cockroaches, etc.), and ships; near severely contaminated places like easily contaminated rivers, livestock or waste water, etc. - Seawater areas with a lot of humidity or salinity - Places that receive direct sunlight - Other unhygienic places considered unsuitable for device installation

BUTTONS AND INDICATORS

| Indicators

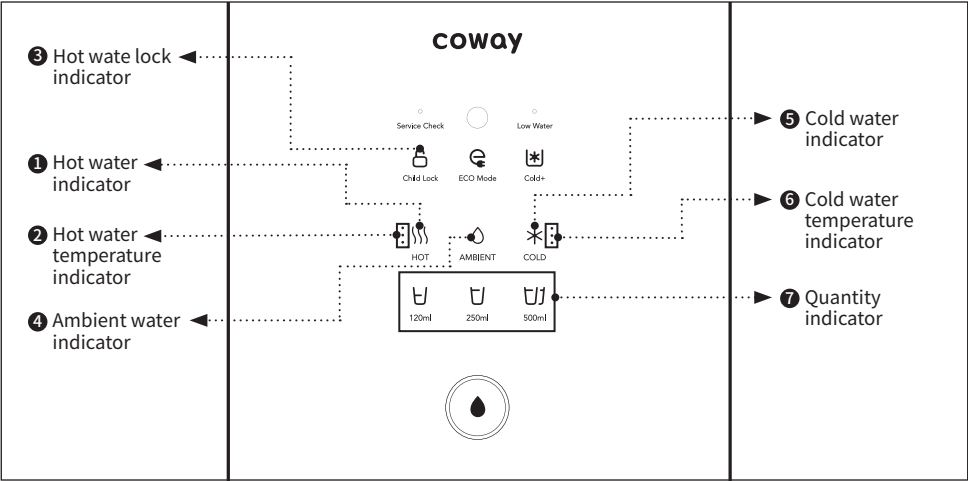

1 Hot water indicator
The indicator lights up when hot water is selected.



2 Hot water temperature indicator
The indicator lights up according to the temperature of the hot water. The temperature of hot water is at its highest when all 3 LED lights are illuminated.



3 Hot water lock indicator
The indicator lights up when hot water lock is selected.



4 Ambient water indicator
The indicator lights up when ambient water is selected.



5 Cold water indicator
The indicator lights up when cold water is selected.




6 Cold water temperature indicator
The indicator lights up according to the temperature of the cold water. The temperature of cold water is at its lowest when all 3 LED lights are illuminated.



7 Quantity indicator
Shows how much water is selected to dispense.
☺ (Half cup-about 120 ml) :
A good amount of water to use for coffee or tea
☺ (One cup-about 250 ml) :
A perfect amount of water to drink
☺☺ (Two cups-about 500 ml) :
A good amount of water to use to cook ramen, etc.

Indicators

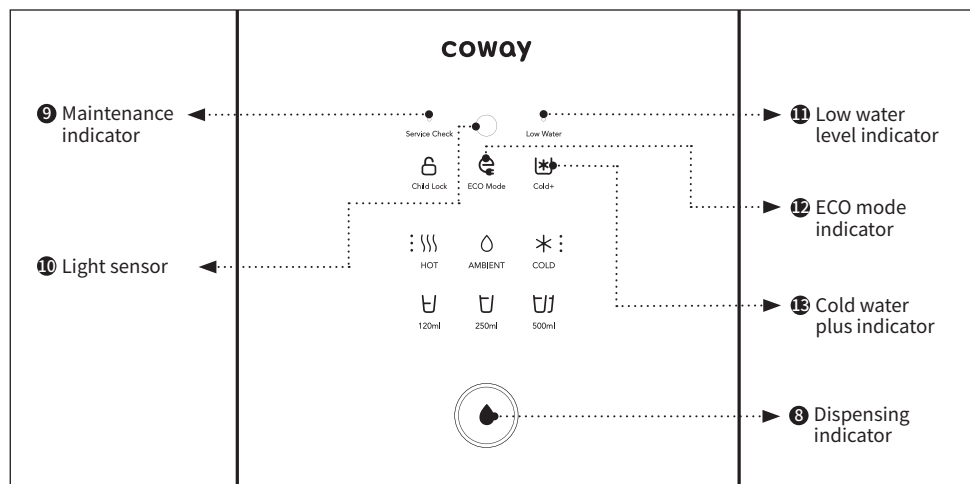

- 8 Dispensing indicator**
This indicator lights up when water is being extracted.



- 9 Maintenance indicator**
If the product does not work properly, a light is turned on. In this case, contact the call center of your country.



- 10 Light sensor**
This sensor detects light around the device to discern whether it is day or night.



- 11 Low water level indicator**
The indicator lights up when the water level in the tank is low.




- 12 ECO mode indicator**
The indicator lights up when the ECO mode feature is on.



- 13 Cold water plus indicator**
The indicator lights up when the cold water plus feature is selected.

BUTTONS AND INDICATORS

Buttons

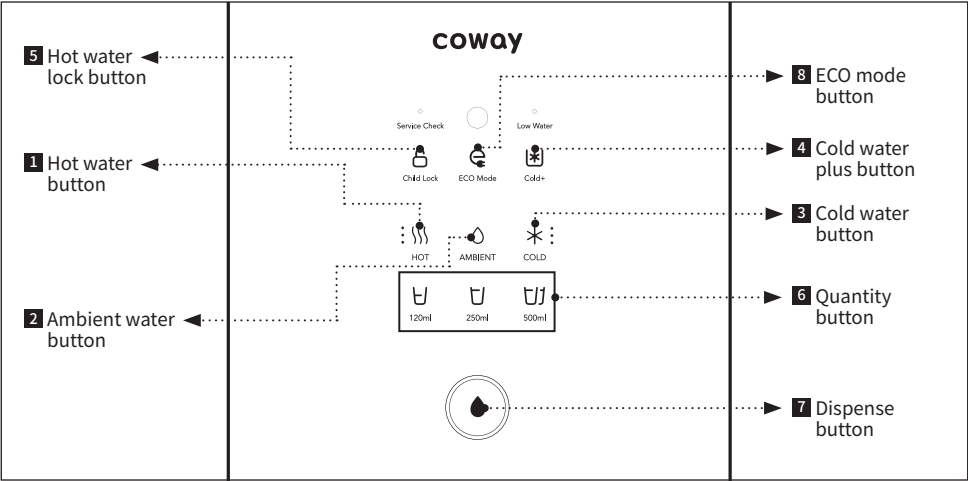

1 Hot water button
Use when you wish to extract hot water.



2 Ambient water button
Use when you wish to extract ambient water.



3 Cold water button
Use when you wish to extract cold water.



4 Cold water plus button
Use when you want to turn on the cold water plus feature.



5 Hot water lock button
Use when turning on hot water lock. hold for about 2 seconds to turn hot water lock on/off.
(You cannot select/dispense hot water while hot water lock is active.)



6 Quantity button
Use when selecting the amount of water you wish to extract.



7 Dispense button
Use when you wish to extract water.




8 ECO mode button
Use when you want to turn ECO mode on.

| To use the hot water feature

Press the hot water button for at least 2 seconds and check to see whether the display shows the hot water feature on and whether the hot water temperature indicator is lit. To turn off hot water, press and hold the hot water button again for at least 5 seconds.


* You can get hot water about 30 minutes after you turn on the hot water feature.

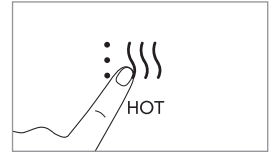

| To use the cold water feature


Press the cold water button for at least 2 seconds and check to see whether the display shows the cold water feature on and whether the cold water temperature indicator is lit. To turn off cold water, press and hold the cold water button again for at least 5 seconds.

* You can get cold water starting about two hours after you turn on the cold water feature.

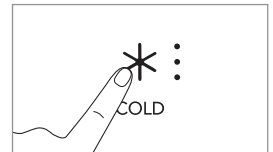

| To use the cold water plus feature

Press the Cold water plus button for at least 2 seconds and check to see whether the display shows the Cold Water Plus feature on and whether the cold water plus indicator is lit. To turn off cold water plus, press and hold the cold water plus button again for at least 2 seconds.

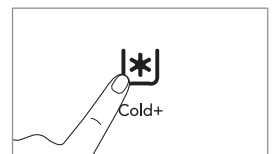

Tips

- If you turn on the cold water plus feature, you can resolve temperature ununiformity when using cold water continuously.
(The cold water plus feature is convenient for those who use cold water frequently.)


BUTTONS AND INDICATORS

| To use the ECO mode feature

Press and hold the ECO mode button for at least 2 seconds to turn ECO mode on.

The ECO mode indicator blinks when the product recognizes night.

* If the ECO mode indicator is on, the cold water temperature is kept relatively high when the area around is dark.

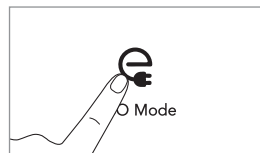

Tips



- If the water purifier does not dispense cold water, check to see whether the cold water indicator is lit. (see page 11)
- When the level of ambient water inside the water tank is low, you may not be able to get as much water as usual.
- When the power cord is reconnected or there is a blackout, the last settings used are kept.
- This product has a ECO mode feature when not in use. If not used for a long time (approximately 9 hours), the hot water temperature is automatically decreased and the cold water temperature kept higher to help save on electricity costs. When ECO mode is on due to non-use, the hot water may be less hot and the cold water may be somewhat less cold.

HOW TO GET THE DESIRED WATER

How to use

| How to Get Cold Water

Check the cold water temperature indicator and touch the cold water button, and then touch the quantity button to set the amount of water you want. Press the dispense button to get your selected amount of cold water. Press the dispense button again while dispensing to stop the water. To continuously get cold water, press and hold for at least 3 seconds. You will get a stream of cold water for about 3 minutes. Press the dispense button again while dispensing to stop the water.

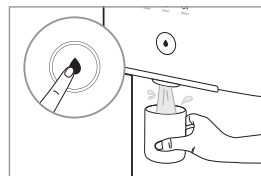
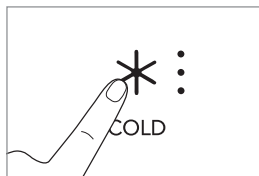


Tips

- If cold water is not dispensed from the water purifier, check that the cold water indicator is lit up on the display. (see p. 11)
- If water is not dispensed from the water purifier, check whether the low water level indicator is lit up on the display. (see p. 12)

| How to Get Ambient Water

Touch the ambient water button, and then touch the quantity button to set the amount of water you want. Press the dispense button to get your selected amount of ambient water. Press the dispense button again while dispensing to stop the water. To continuously get ambient water, press and hold for at least 3 seconds. You will get a stream of water for about 3 minutes. Press the dispense button again while dispensing to stop the water.

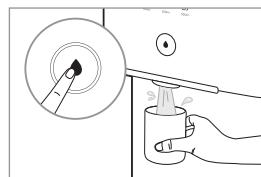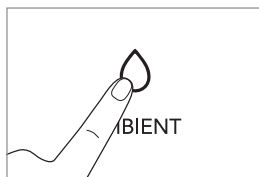



Tips

- If ambient water is not dispensed from the water purifier, check whether the low water level indicator is lit up on the display. (see p. 12)

HOW TO GET THE DESIRED WATER

| How to Get Hot Water



Touch the hot water button, and then touch the quantity button to set the amount of water you want. Press the dispense button to get your selected amount of hot water. Press the dispense button again while dispensing to stop the water. To continuously get hot water, press and hold for at least 3 seconds. You will get a stream of water for about 3 minutes. Press the dispense button again while dispensing to stop the water.

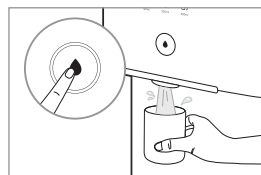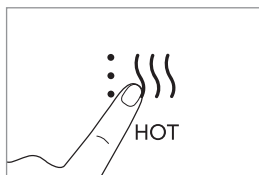

Tips

- If water is not dispensed from the water purifier, check whether the low water level indicator is lit up on the display. (see p. 12)
- Be careful not to get burned when using hot water.

| Installation Guide

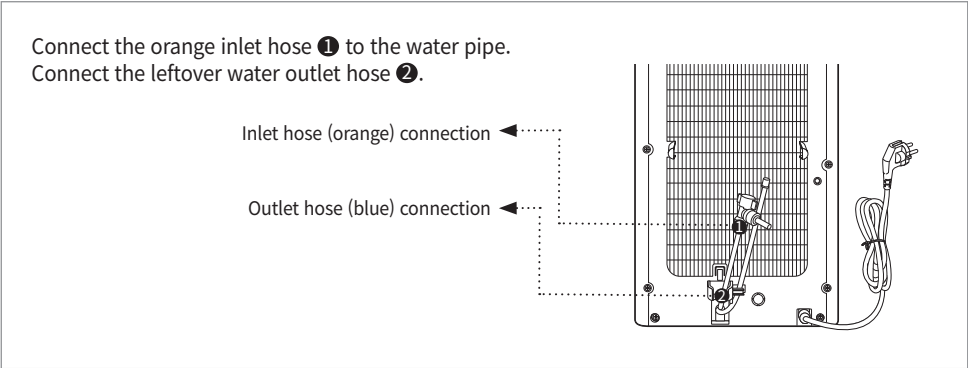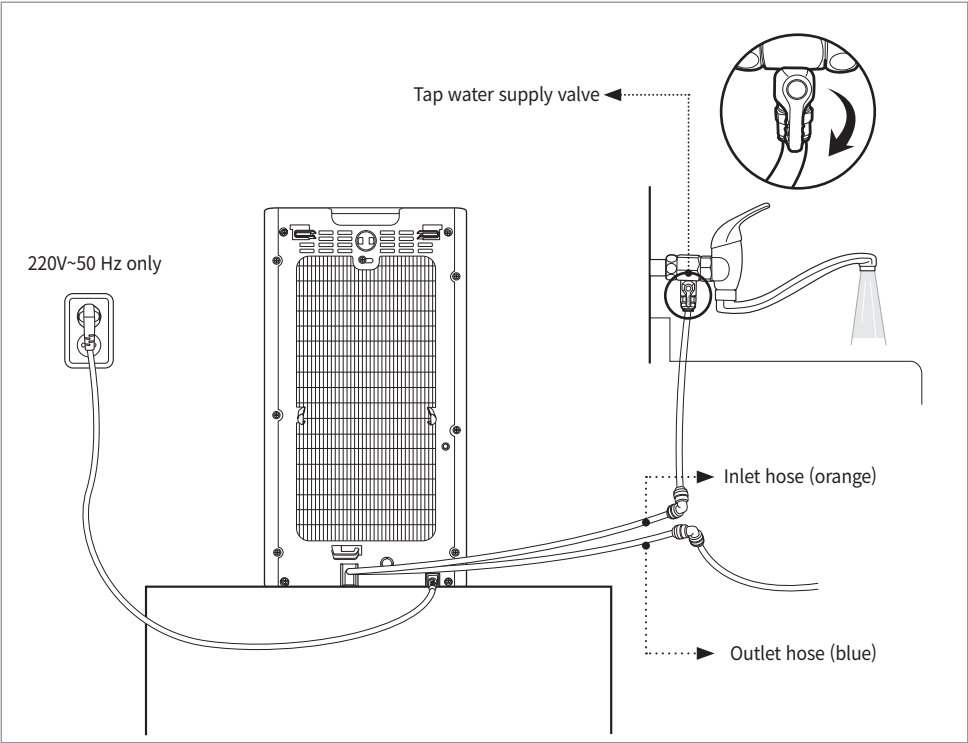

HOW TO INSTALL

| Caution

WHERE TO INSTALL I

Avoid installing the water purifier in an area with uneven surface, extreme humidity, extreme light exposure, extreme dust exposure, and water exposure etc.

WHERE TO INSTALL II

Keep the radiator grill at the rear of the product at least 10 cm away from the wall and make sure that the installation floor is firm.

RELOCATION AND INSTALLATION

When moving between locations, wait at least 30 minutes after installation to connect the power.

COLD WATER TUBING

Make sure to connect it to the cold water tubing.
(If connected to the hot water tubing, the filters can get damaged.)

AFTER INSTALLATION

After installation, filter and drain water for at least 130 minutes.
(Use after draining purified water at least twice.)



Tips

- Please consult a Coway installation technician for detailed instructions on installation for optimal product performance.

- Service inquiry : 1800-888-111


-  Some residual water used during post-manufacturing inspection may be present in the filter.

-  Do not reuse the previously used tap water supply valve and hose when installing the water purifier.


| How to Clean the Internal Water Tank

1. Close the tap water supply valve, then use the drain hose to completely drain all water from inside the water purifier. When drainage is complete, unplug the power.


- * Use the drain hose and cold/ambient water dispensing faucet to completely drain all water from inside the water purifier.
- * Drain water in the cold/ambient water tanks through the cold/ambient water faucets and water in the hot water tank through the side drain.

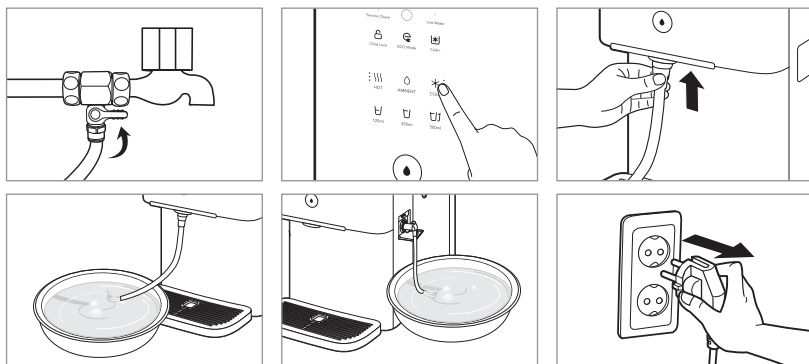

2. Push the top cover of the purifier upward to open.
Open the 6 clips affixing the interior storage tank and then open the internal water tank cover.

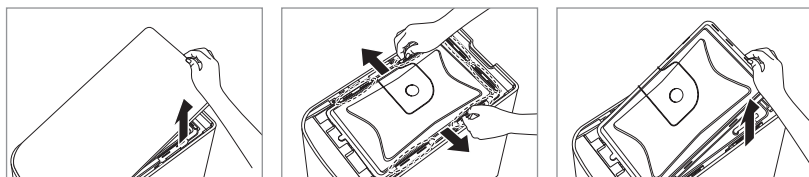


3. Detach the antibacterial filter from the water tank cover and shake in purified water to clean, then reinstall. Replace with a new part every 12 months.


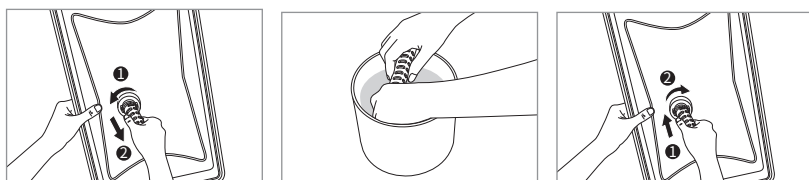


HOW TO CLEAN



4. Wipe the water tank surfaces with a soft cloth.

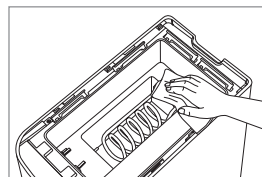



5. Rinse the internal water tank clean with water from the water purifier, then plug in the power again and completely drain it using the continuous dispensing button. Empty newly purified water once more before use.

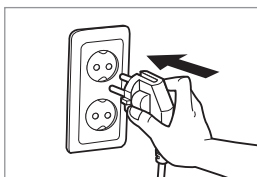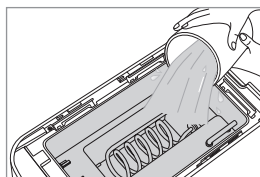

6. Install the separator, then press firmly at both ends so it stays in place.

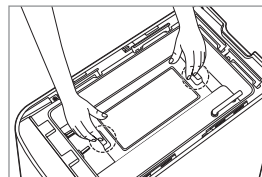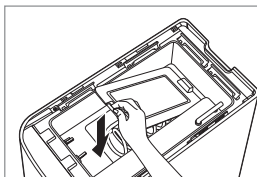

7. Close the top cover and open the water supply valve, then restart the water purifier.

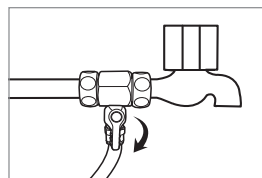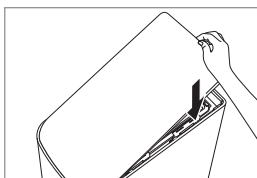


Tips

- ⚠ Please shut the internal water tank cover completely. Otherwise insects and debris may enter the product.
- ⚠ Do not use chemicals or detergent when cleaning the water tank. Residual chemicals and detergents may be harmful to the body.
- Please maintain a clean surrounding area and clean the internal water tank once every two months.

| How to Clean the Tray


1. How to remove the tray

The front of the tray can be easily separated by pulling the front of it. Separate the tray and wipe the inside and outside with a cloth.

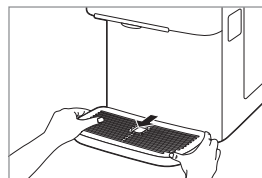

2. How to assemble the tray


Attach the tray hooks to the water purifier and then gently push.

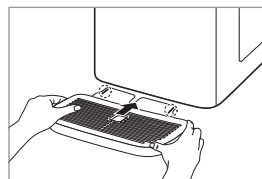

| How to Clean the Water Purifier

Wipe the product with a clean towel.

* For thicker layers of dust, use a wet towel to wipe. (Do not use an abrasive.)

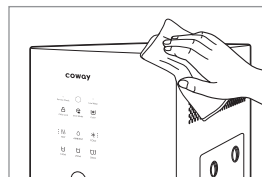


Tips

- Do not immerse the product in water to clean it.
- Do not use thinner, benzene or agent containing abrasives or rough cloths to clean it.


HOW TO CLEAN

| How to Clean the Transparent Faucet Cover


1. Detach the transparent faucet cover by pulling it outward.

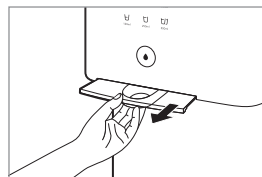


2. Rinse the transparent faucet cover with water.

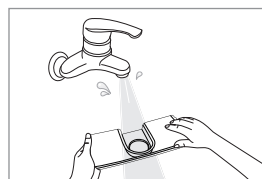

3. After rinsing, wipe the transparent faucet cover with a soft, dry cloth.

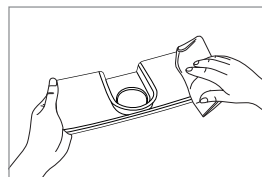

4. After cleaning, attach the transparent faucet cover back by pushing it inwards.

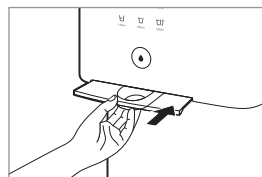

Tips



Never clean using cotton balls.
Foreign matter such as cotton may be left behind.

| Filter

The life of a water purifier is its filters. Using an uncertified filter; or even using a certified yet expired filter may reduce filter performance. Replace with authorized filters according to the replacement cycle. A Coway Cody will visit to replace the filters.

* Call 1800-888-111 for filter replacement.

| Filter replacement cycle

If the filter is not regularly replaced, it may degrade the water quality from the product. The filter change cycle may vary within the range of expected replacement cycle depending on the source water quality.

CHP-6310L

Filter name	Recommended replacement cycle
Neo-sense filter	6 months
Membrane filter (RO)	20 months
Plus Inno-sense filter	18 months


| About the filter replacement cycle

Each filter's recommended replacement cycle is calculated based on water supply quality. For reference, the effective water capacity means the minimum treatment capacity for which contaminants can be effectively removed without cleaning, recycling, or replacing the inner filters, and recommended replacement cycles for individual filters may differ.


HOW TO REPLACE THE FILTER

| Replace the Filter!

1. Lock the water supply valve and completely drain all water from inside the filtration device.

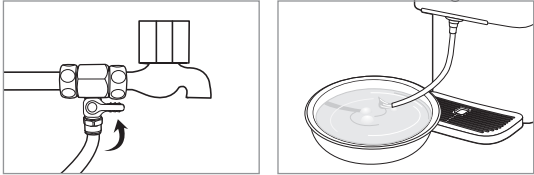

2. Turn the door handle of the right top cover to remove the side cover.

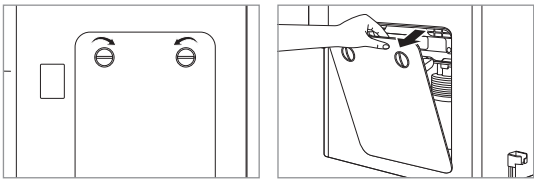


Tips



After replacing the filter, connect fittings and hoses precisely and check that there are no leaks. Be sure to first drain purified water.

3. Hold the bottom of the filter you want to replace with one hand and raise the lock lever upward to replace the filter.

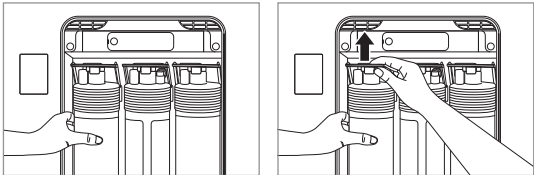


Tips



Check that the filter is securely installed and that the lever is supporting it well, then turn on the source water to check that there are no leaks.

4. Close the cover and turn the lever located to the right of the cover toward the outside to lock it, then insert the side door into the slot. (If you do not turn the lever to close the door, it will not be closed.)

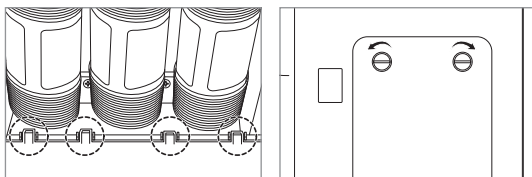

 Please be sure to use the new filter after flushing.



- Neo-sense filter : Please assemble after flushing with tap water for 1 minute.
- Plus Inno-sense filter : Please use the filter without flushing.
- Membrane filter (RO) : Please assemble after flushing with Neo-sense filter for about 5 minutes.



We will replace fittings, tubings, and faucets after 5 years of use if you contact our customer service center (this may incur a cost).

REGULAR MAINTENANCE

To use your device safely, it's best to perform occasional maintenance. Check the following occasionally so your device is always working to its full potential.

| Power

- Does the display go from on to off if you move the power cord while it is connected?
- Is part of the power cord warmer than usual?
- Is part of the power cord warped, discolored, or damaged?

 If these problems occur, immediately stop using the device and contact a service center. (1800-888-111)

| Display

- Are the indicators on the front panel flashing abnormally?
If indicators flash abnormally, contact a service center immediately. (1800-888-111)

The water purifier may operate abnormally because the user is unfamiliar with the product or due to some other reasons and not because of a product malfunction. In such a case, problems can be easily solved without help from the service center by checking the following.
If the problem is not solved after checking the following, please call the service center.

Problem	Check	Possible Solutions
The water has a poor aftertaste.	• Have you cleaned the water tank?	Clean the water tank.
	• The water filtration device has not been used for a very long time.	Discard stored water and clean the water tank.
	• Is it time to replace a filter?	Request a filter replacement.
Water doesn't come out.	• Is the water supply cut off or is the connection valve locked?	Open the connection valve.
	• Is it past time to replace a filter?	Request a filter replacement.
The quantity of ambient water has suddenly decreased.	• Is it time to replace a filter?	Request a filter replacement.
	• Is the power connected?	Check that the power cord is plugged into a 220V~ 50 Hz socket.
	• Is the connection valve locked?	Open the connection valve.
	• Did the temperature of the source water suddenly drop?	If the water temperature drops, the quantity of ambient water decreases.
Cold water doesn't come out.	• Is the cold water indicator lit?	Press the cold water button to turn on cold water.
	• Is the connection valve locked?	The cooler does not operate if the water level is low. This is to protect the motor. Open the connection valve.
	• Is the back of the device too close to a wall?	Keep a distance of at least 10 cm between the back of the device and the wall.

TROUBLESHOOTING

Problem	Check	Possible Solutions
Hot water doesn't come out.	• Is the hot water indicator lit	Press the hot water button to turn on hot water.
	• Is the PowerSave indicator lit?	Water may be less hot than usual while in PowerSave mode.
	• Is the connection valve locked?	The heater does not operate if the water level is low. This is to protect the motor. Open the connection valve.
The device was working, and then suddenly stopped.	• Is the source water supply good?	Check the connection valve.
	• Is the power connected?	Check that the power cord is plugged into a 220V~ 50 Hz socket.
	• Is water overflowing or leaking?	Request service.

► Filter replacement, service inquiries : 1800-888-111

SPECIFICATIONS

Others


Product Name		Waternet water Purifier/ electric water cooler (and hot water heater)
Model name		CHP-6310L
Filtration Method		Reverse osmosis
Collection rate		50 % (343 kPa, 25°C, NaCl 200 ppm)
Rated voltage		220V~ 50 Hz
Rated input		Cold water : 0.5 A, Hot water : 250 W - 300 W
Display information		Water temperature display, locking feature
Main functions		Ambient water, cold water, hot water, overheating/overcooling prevention, set quantity dispensing, continuous dispensing
Water tank Capacity	Ambient water	2.5 L
	Cold water	2.5 L
	Hot water	1.0 L
	Total	6.0 L
Filter Material	Neo-sense filter (carbon block pre-filter)	Block activated carbon
	Membrane filter (RO)	Reverse osmosis filter
	Plus Inno-Sense filter (carbon block post-filter)	Block activated carbon, non-woven fabric
Product size		260 mm (width) × 483 mm (depth) × 510 mm (height)
Operating temperature		5 °C - 35 °C
Effective Water Capacity		680 L (for VOC) 11 000 L (for Aesthetic Chlorine)
Operating pressure (tap water)		0.14 MPa - 0.83 MPa
Net Weight		17.3 kg

- ▶ The water tank capacity may differ slightly from the quantity of obtainable water due to the size of the water tank.
- ▶ Product design and specifications are regulated by law and are subject to change without notice to improve the product or its quality.
- ▶ Collection rate refers to the amount of water that comes out compared to the amount that goes in.
- ▶ May differ depending on the installation location water pressure, water temperature, and water quality.

พีเจอร์

| การจ่ายน้ำแบบกำหนดปริมาณอันแสนสะดวกสำหรับน้ำร้อน น้ำเย็น และน้ำอุณหภูมิห้อง

พีเจอร์อันสะดวกสายนี้อาจจ่ายน้ำ (อุณหภูมิห้อง เย็น หรือร้อน) ในปริมาณที่ท่านต้องการผ่านก๊อกน้ำเพียงตัวเดียว

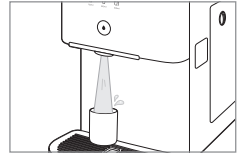

| พีเจอร์ Cold Water Plus

ด้วยพีเจอร์นี้ทำให้สามารถจ่ายน้ำเย็นได้มากขึ้น เนื่องจากรุ่นนี้ใช้ถังเก็บน้ำเย็นและถังเก็บน้ำอุณหภูมิห้องแยกกัน



| เซ็นเซอร์แสงประหยัดพลังงาน

เมื่อเข้าสู่โหมด ECO อุปกรณ์จะลดการทำงานของมอเตอร์และเครื่องทำความร้อนโดยอัตโนมัติเพื่อลดการใช้พลังงาน



| มีขนาดที่บางและการออกแบบที่หรูหรา

อุปกรณ์นี้สามารถติดตั้งได้อย่างง่ายดาย และใช้งานได้ในห้องครัวทุกขนาด ไม่ว่าห้องครัวจะมีขนาดเล็กแค่ไหน ด้วยขนาดที่บางและการออกแบบที่หรูหรา



ขอขอบคุณที่ใช้งาน เครื่องกรองน้ำดื่ม Coway
โปรดอ่านคู่มือนี้เพื่อเรียนรู้เกี่ยวกับการใช้งานและการดูแลรักษาผลิตภัณฑ์นี้อย่างเหมาะสม
เมื่อพบปัญหาในขณะที่ใช้งานผลิตภัณฑ์นี้ คุณสามารถแก้ไขปัญหาได้โดยการอ้างอิงคำแนะนำในคู่มือนี้

| สารบัญ

ข้อมูลผลิตภัณฑ์	วิธีใช้
03 ข้อมูลความปลอดภัย	09 โปรดตรวจสอบก่อนใช้งาน
07 ชื่อชิ้นส่วนต่างๆ	10 วิธีการใช้งานอย่างถูกสุขอนามัย
08 กระบวนการกรองน้ำดื่ม	11 ปุ่มและตัวขับเคลื่อน
	16 วิธีกักน้ำในปริมาณที่ต้องการ
	วิธีกักน้ำเย็น
	วิธีกักน้ำอุณหภูมิห้อง
	วิธีกักน้ำร้อน
การบำรุงรักษา	อื่นๆ
18 วิธีติดตั้ง	28 การแก้ไขปัญหา
20 วิธีทำความสะอาด	30 ข้อมูลจำเพาะ
วิธีทำความสะอาดถังเก็บน้ำภายใน	
วิธีทำความสะอาดถาด	
วิธีทำความสะอาดเครื่องกรองน้ำดื่ม	
วิธีทำความสะอาดเบ้ากักน้ำแบบใส	
24 การเปลี่ยนไส้กรอง	
25 วิธีเปลี่ยนไส้กรอง	
27 การดูแลรักษาทั่วไป	

ข้อมูลเกี่ยวกับความปลอดภัย

| ▲ **อันตราย :** ระบุถึงอันตรายที่จะเกิดขึ้นหากไม่หลีกเลี่ยง
อาจทำให้ถึงแก่ชีวิตหรือการบาดเจ็บสาหัส

- อย่าใช้ปลั๊กที่เสียหายหรือใช้เต้ารับที่หลวม
- อย่าดึงที่สายไฟ
- อย่าดึงสายไฟในการเคลื่อนย้ายผลิตภัณฑ์
- อย่าจับปลั๊กด้วยมือที่เปียก
- อย่าขอสายไฟมากเกินไป หรือวางสายไฟไว้ข้างใต้วัตถุที่มีน้ำหนักมากเพื่อหลีกเลี่ยงการเกิดความเสียหายหรือการผิดรูป
- อย่าเสียบและถอดสายไฟซ้ำ ๆ กัน
- เมื่อบริเวณปลั๊กไฟเปียกชื้น ให้ถอดปลั๊กแล้วเช็ดให้แห้งสนิทก่อนการใช้งาน
- อย่าสัมผัสปลั๊กก่อนที่จะทำการซ่อมแซม ตรวจสอบ หรือเปลี่ยนอะไหล่ของผลิตภัณฑ์
- เช็ดฝุ่น น้ำ ฯลฯ บนขาปลั๊กและหน้าสัมผัสของขาปลั๊กให้สะอาด
- อย่าต่อเครื่องใช้ไฟฟ้าหลายเครื่องเข้ากับเต้ารับแผงเดียว ใช้เต้ารับแยกเฉพาะสำหรับผลิตภัณฑ์นี้
- ปิดวาล์วจ่ายน้ำแล้วถอดปลั๊กเมื่อจะไม่ใช้งานผลิตภัณฑ์เป็นเวลานาน
- อย่าดัดแปลงสายไฟด้วยตนเอง
- หากสายไฟเสียหาย อย่าพยายามเปลี่ยนสายไฟ โปรดติดต่อศูนย์บริการเพื่อแจ้งขอเปลี่ยนสายไฟ
- อย่าติดตั้งไว้ใกล้กับแหล่งความร้อน
- ต่อเข้ากับน้ำประปาที่มีคุณสมบัติค่อนข้างเป็นน้ำเย็น

- ⚠ ผลิตภัณฑ์สามารถใช้งานได้โดยเด็กที่มีอายุ 8 ปีขึ้นไป และบุคคลที่มีความบกพร่องทางร่างกายหรือจิตใจ หรือบุคคลที่ขาดประสบการณ์และความรู้ โดยพวกเขาได้รับการกำกับดูแลหรือได้รับคำแนะนำเกี่ยวกับวิธีการใช้งานเครื่องใช้ไฟฟ้านี้อย่างปลอดภัย และเข้าใจถึงอันตรายต่างๆ ที่เกี่ยวข้อง
- ⚠ อย่าให้เด็กเล่นกับเครื่องใช้ไฟฟ้านี้
- ⚠ อย่าให้เด็กทำความสะอาดหรือซ่อมบำรุงโดยไม่มีการกำกับดูแล

ข้อมูลเกี่ยวกับความปลอดภัย

|  คำเตือน : ระบุถึงอันตรายที่อาจเกิดขึ้นหากไม่หลีกเลี่ยง
ซึ่งอาจทำให้ถึงแก่ชีวิตหรือการบาดเจ็บสาหัส

- อย่าใช้ความรุนแรงหรือกระแทกผลิตภัณฑ์
- อย่าติดตั้งผลิตภัณฑ์บนพื้นที่มีความลาดเอียง อย่าใช้ความรุนแรงหรือกระแทกผลิตภัณฑ์
- อย่าติดตั้งในบริเวณที่มีความชื้นสูง มีฝุ่นมาก หรือจุดที่สัมผัสกับน้ำหรือฝน
- อย่าฉีดน้ำใส่ผลิตภัณฑ์โดยตรงเพื่อทำความสะอาด หรือใช้เบนซินหรือทินเนอร์เช็ดผลิตภัณฑ์
- เนื่องจากสารทำความเย็นที่ใช้นี้ ผลิตภัณฑ์นี้คือไอโซบิวเทน (R-600a) ซึ่งเป็นก๊าซธรรมชาติที่เผาไหม้ได้ โปรดทำให้แน่ใจว่าผลิตภัณฑ์ไม่ได้รับความเสียหายในขณะเคลื่อนย้าย
- หากสารทำความเย็นรั่วออกจากท่อภายใน อาจทำให้เกิดเพลิงไหม้หรือการบาดเจ็บได้
- นำวัสดุติดไฟได้หรือวัสดุสร้างประกายไฟออกไปห่างๆ และระบายอากาศในบริเวณดังกล่าว
- สารทำความเย็นที่ใช้นี้ ผลิตภัณฑ์นี้คือไอโซบิวเทน (R-600a) ซึ่งเป็นก๊าซธรรมชาติที่เผาไหม้ได้ เพื่อความปลอดภัยของท่าน โปรดติดต่อศูนย์ชุมชนของท่านก่อนที่จะทิ้งผลิตภัณฑ์นี้ เพื่อกำจัดอย่างปลอดภัย
- อย่าทำให้ท่อ และอื่นๆ ของผลิตภัณฑ์เสียหายในขณะที่กำลังจัดผลิตภัณฑ์นี้


| ⚠️ **ระวัง :** ระบุถึงอันตรายที่อาจจะเกิดขึ้นหากไม่หลีกเลี่ยง
ซึ่งอาจทำให้เกิดการบาดเจ็บเล็กน้อยหรือปานกลาง
หรือเกิดความเสียหายกับผลิตภัณฑ์หรือทรัพย์สินอื่น ๆ

- ใช้น้ำประปาเป็นแหล่งน้ำเข้า
 - ① ใช้น้ำประปาที่เหมาะสมสำหรับดื่มเป็นแหล่งน้ำจ่ายเข้า
 - ② อย่าใช้งานในบริเวณที่เป็นที่เปียกเช่นห้องน้ำ
 - ③ อย่าใช้งานในบริเวณที่มีความชื้นหรืออุณหภูมิสูง
- ระบายน้ำในตัวเครื่องและน้ำที่กรองใหม่ออกก่อนอีกหนึ่งรอบก่อนการใช้งานหลังจากที่ไม่ได้ใช้งานผลิตภัณฑ์มาเป็นเวลานาน
- อย่าเข้าไปสัมผัสใกล้กับน้ำร้อนจนเกินไป เนื่องจากน้ำจะร้อนมาก ซึ่งอาจทำให้โดนน้ำร้อนลวกได้
- โปรดเปลี่ยนไส้กรองตามรอบการเปลี่ยนไส้กรองเพื่อให้ได้น้ำสะอาด
- บุคคลที่มีความบกพร่องทางร่างกาย การรับรู้ หรือจิตใจ รวมถึงเด็ก จะต้องได้รับการกำกับดูแลหรือได้รับคำแนะนำในขณะที่ใช้งานเครื่องกรองน้ำดื่มนี้
- ท่านต้องใช้ชุดท่อน้ำใหม่ที่มาพร้อมกับผลิตภัณฑ์นี้ อย่าใช้ชุดท่อเก่า
- ผลิตภัณฑ์สามารถใช้งานได้โดยเด็กที่มีอายุ 8 ปีขึ้นไป และบุคคลที่มีความบกพร่องทางร่างกายหรือจิตใจ หรือบุคคลที่ขาดประสบการณ์และความรู้ โดยพวกเขาได้รับการกำกับดูแลหรือได้รับคำแนะนำเกี่ยวกับวิธีการใช้งานเครื่องใช้ไฟฟ้านี้อย่างปลอดภัย และเข้าใจถึงอันตรายต่างๆ ที่เกี่ยวข้อง
- อย่าให้เด็กเล่นกับผลิตภัณฑ์นี้
- อย่าให้เด็กทำความสะอาดหรือซ่อมบำรุงโดยไม่การกำกับดูแล


อ่านและเก็บบันทึกคำแนะนำเหล่านี้ไว้

ชื่อชิ้นส่วน

ด้านหน้า / ด้านหลัง

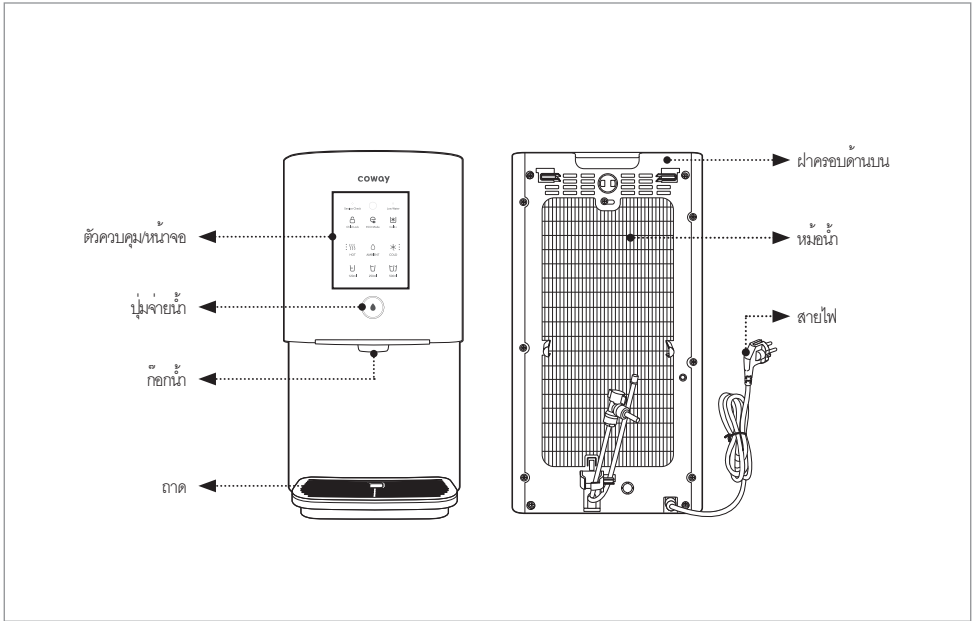

อุปกรณ์เสริม

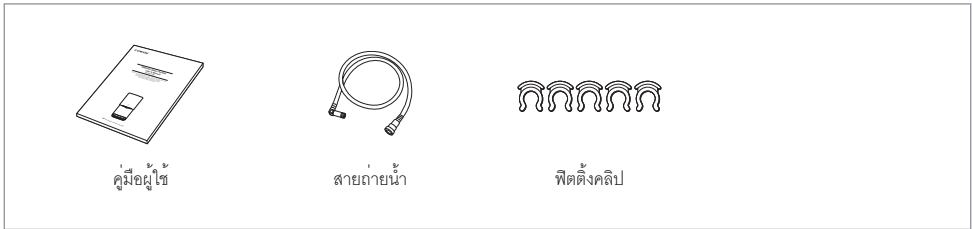

หัวใจสำคัญของระบบกรองน้ำคือไส้กรอง

การใช้ไส้กรองที่ไม่ผ่านการรับรอง หรือกระทั่งการใช้ไส้กรองที่ผ่านการรับรองนานเกินไป อาจทำให้ประสิทธิภาพการกรองลดลง

| ระบบกรองน้ำดื่ม 4 ขั้นตอน

ขั้นตอนที่ 1, 2 : ไส้กรองNeo-Sense


ไส้กรอง Neo-Sense มีคุณสมบัติในการกำจัดอนุภาคขนาดเล็กและสิ่งปนเปื้อนที่ละลายอยู่ และยังมีคุณสมบัติในการกำจัดคลอรีนและสารประกอบอินทรีย์ระเหยง่าย (VOC's)

ขั้นตอนที่ 3 : ไส้กรองเมมเบรน (RO)

ไส้กรองเมมเบรน RO มีคุณสมบัติในการลดสิ่งปนเปื้อนในน้ำเช่น โลหะหนัก จุลชีพในน้ำ และสารอินทรีย์ที่เป็นอันตรายต่างๆ ฯลฯ น้ำที่มีวัตถุอันตรายจะถูกกำจัดออกผ่านท่อน้ำทิ้งเป็นน้ำทิ้ง

ขั้นตอนที่ 4 : ไส้กรองPlus Inno-Sense

ไส้กรอง Plus Inno-Sense มีคุณสมบัติในการกำจัดวัตถุตกค้างในน้ำ และช่วยปรับปรุงรสชาติของน้ำ

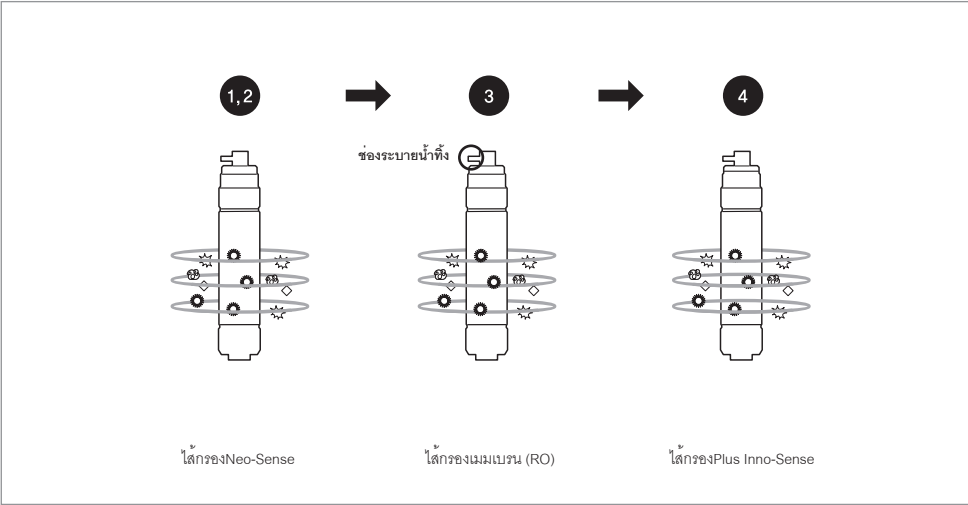

เคล็ดลับ

การใช้น้ำทิ้ง

- น้ำทิ้งที่ถูกกำจัดออกควรนำไปใช้สำหรับการทำความสะอาดบ้าน เลื้อผ้า และเพื่อวัตถุประสงค์อื่นนอกเหนือจากการบริโภคเท่านั้น
- อย่าใช้น้ำที่ถูกกำจัดออกเป็นน้ำดื่มหรือเพื่อประกอบอาหาร

โปรดตรวจสอบก่อนใช้งาน

| โปรดตรวจสอบก่อนใช้งาน

⚠️ ผลิตภัณฑ์นี้ใช้สำหรับ 220 V~, 50 Hz.

ตรวจสอบให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V~, 50 Hz
อุปกรณ์นี้จำเป็นต้องใช้ไฟฟ้าในการทำงาน



| เปิดวาล์วจ่ายน้ำประปา

เครื่องกรองน้ำดื่มจะทำงานได้อย่างถูกต้องต่อเมื่อจ่ายน้ำประปาเข้าเท่านั้น

| เมื่อไฟระบุสถานะบนหน้าจอปิด

เมื่อไฟระบุสถานะปิด ให้ตรวจสอบว่าเกิดไฟฟ้าดับ แหล่งพลังงานถูกตัดด้วยสาเหตุอื่นๆ หรือไม่

| เมื่อไม่ได้ใช้งานผลิตภัณฑ์มาเป็นเวลานาน

ระบายน้ำในตัวเครื่องและน้ำที่กรองใหม่ออกก่อนอีกหนึ่งรอบให้หมดก่อนการใช้งานหลังจากที่ไม่ได้ใช้งานผลิตภัณฑ์มาเป็นเวลานาน

| หลังการติดตั้ง

หลังการติดตั้งไส้กรอง ให้ระบายน้ำออกอย่างน้อย 130 นาที(ใช้งานหลังจากระบายน้ำดื่มออกอย่างน้อยสองครั้ง)

| การเปลี่ยนไส้กรองเป็นประจำ

การเปลี่ยนไส้กรองเป็นประจำนั้นสำคัญอย่างยิ่งกับความสะอาดของน้ำดื่ม การใช้ไส้กรองที่หมดอายุจะลดประสิทธิภาพการทำงานของเครื่องทำน้ำดื่ม ดังนั้นโปรดเปลี่ยนไส้กรองให้ตรงเวลา

| วิธีการระบายน้ำร้อน

กดฝาปิดของระบายที่ด้านข้างของผลิตภัณฑ์จากนั้นให้ต่อกับสายถ่ายน้ำ (สายปล่อยน้ำออกอย่างต่อเนื่อง) เพื่อระบายน้ำร้อนออกจากถังเก็บน้ำร้อน

(ระวังอย่าให้น้ำลวกตนเองในขณะที่ระบายน้ำร้อน)



เคล็ดลับ ปิดวาล์วน้ำประปาแล้วถอดปลั๊กออก เมื่อจะไม่ใช้งานเครื่องกรองน้ำดื่มนี้เป็นเวลานาน


วิธีการใช้งานอย่างถูกสุขอนามัย

วิธีใช้

หมวดหมู่	ประเภท	รายละเอียด
ระยะเวลาการใช้งาน	เมื่อไม่ใช้งานเป็นเวลานาน	• อังถึงหัวข้อ "การทำความสะอาด" ในคู่มือการใช้งานสำหรับคำแนะนำเกี่ยวกับการทำความสะอาดภายในและการจัดเก็บ เมื่อจะใช้งานหลังจากเก็บไว้นานๆ ให้ทำความสะอาดก่อนนำกลับมาใช้งาน
	การปนเปื้อนของก๊อกน้ำ	• อย่าสัมผัสบริเวณก๊อกน้ำด้วยมือ ปาก หรือแก้วน้ำที่ใช้แล้ว • การดูแลด้วยตนเอง - เช็ดก๊อกน้ำด้วยผ้าแห้งที่สะอาดผ่านอนุฟเฟน ฯลฯ (เช็ดสัปดาห์ละครั้ง)
วิธีการใช้งาน	เมื่อทำการจ่ายน้ำ	• ระวังอย่าให้เครื่องต้ม (กาแฟ ชา น้ำอัดลม) และอาหารกระเด็นเข้าไปในก๊อกน้ำหรือกระเด็นใส่ฝาครอบด้านหน้า • หากมีเครื่องต้มหรือสิ่งแปลกปลอมอื่นๆ อยู่บนอุปกรณ์นี้ ให้เช็ดออกทันทีเพื่อป้องกันการปนเปื้อนต่อไป
	ถอดและดึงเก็บน้ำดื่ม	• อย่าเทกาแฟ เครื่องดื่ม อาหาร หรือสิ่งอื่นใดลงไปในก๊อกน้ำที่เหลือ • อย่าทิ้งน้ำไว้ในถาดนานเกินกว่าหนึ่งวัน ทำความสะอาดชั้นส่วนเหล่านี้ด้วยตนเองสัปดาห์ละครั้ง
	การถอดประกอบผลิตภัณฑ์	• อย่าถอดประกอบหรือเปิดอุปกรณ์นี้ออกตามอำเภอใจ
	การใช้ผลิตภัณฑ์	• อย่าวางสิ่งใดไว้บนอุปกรณ์นี้ (อาจเกิดการปนเปื้อนได้)
	ฮาร์ดแวร์	• อย่าติดตั้งหรือใช้ไส้กรองอื่น ที่ไม่ใช่ไส้กรองของแท้จาก Coway
การซ่อมบำรุง	การตรวจสอบ	• นำอุปกรณ์ของท่านเข้ารับบริการทุก 2 เดือน * ระยะเวลาการซ่อมบำรุงอาจแตกต่างกันสำหรับแต่ละผลิตภัณฑ์
	ระยะเวลาเปลี่ยนไส้กรอง	• นำไส้กรองไปเปลี่ยนและตรวจสอบตามรอบการเปลี่ยนไส้กรองสำหรับไส้กรองแต่ละตัว
	บุคลากรซ่อมบำรุง	• นำอุปกรณ์ Coway ของท่านไปซ่อมบำรุงโดย Coway Cody หรือช่างเทคนิคของ Coway • หากการเปลี่ยนชิ้นส่วนหรือการทำความสะอาดภายในนั้นกระทำโดยบุคคลที่ขาดความเชี่ยวชาญ จะมีความเสี่ยงต่อการรั่วไหล ฯลฯ โปรดติดต่อ Coway Cody หรือช่างเทคนิคของ Coway
	บันทึกในใบซ่อมบำรุง	• หากมีการตรวจสอบ/ทำความสะอาด/เปลี่ยนชิ้นส่วนระหว่างการซ่อมบำรุง ให้ตรวจสอบว่าข้อมูลนี้ได้ถูกบันทึกลงในใบซ่อมบำรุงหรือไม่
	สภาพแวดล้อม	• รักษาความสะอาดบริเวณรอบๆ อุปกรณ์นี้ (ถังขยะ ฯลฯ) เพื่อให้อุปกรณ์อยู่ในสิ่งแวดล้อมที่สะอาด
การติดตั้ง	การถอดประกอบ และการติดตั้งผลิตภัณฑ์	• อย่าติดตั้งหรือถอดประกอบอุปกรณ์นี้ตามอำเภอใจ โปรดให้ช่างเทคนิคของ Coway เป็นผู้ดำเนินการ
	สภาพแวดล้อมในการติดตั้ง	• อย่าติดตั้งอุปกรณ์นี้ไว้ในจุดที่เกิดการปนเปื้อนได้ง่าย - สถานที่ไม่ถูกสุขอนามัยได้แก่ข้างในห้องน้ำ สถานที่ซึ่งมีหนูหรือแมลงมาก (มด แมลงสาบ ฯลฯ) และเรือ หรืออยู่ใกล้กับสถานที่ซึ่งมีการปนเปื้อนอย่างรุนแรงเช่น แก้วน้ำที่สกปรก สถานที่เลี้ยงสัตว์ หรือน้ำเสีย ฯลฯ - บริเวณใกล้หน้าต่างที่มีความชื้นและความเค็มสูง - สถานที่ซึ่งได้รับแสงแดดโดยตรง - สถานที่ที่ไม่ถูกสุขอนามัยอื่นๆ ที่เห็นว่าไม่เหมาะกับการติดตั้งอุปกรณ์นี้

ปุ่มและตัวชี้บอก

| ตัวชี้บอก

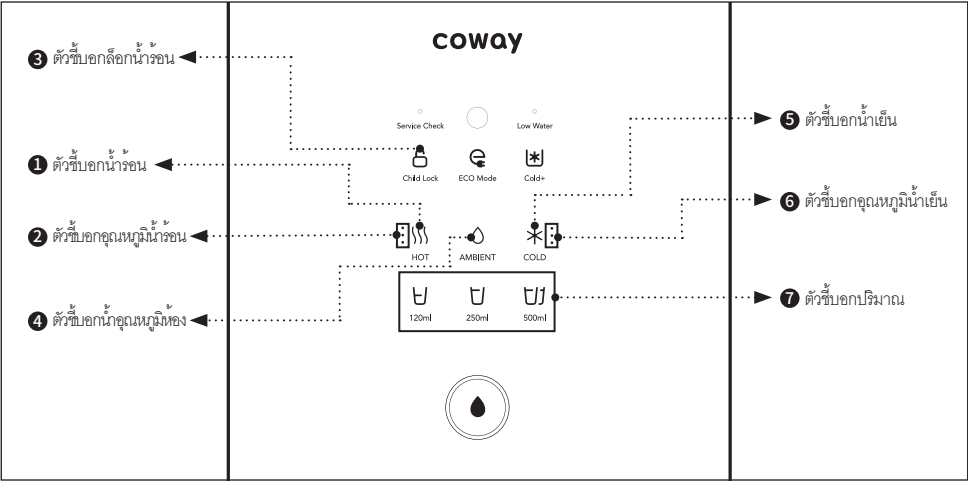

1 ตัวชี้บอกน้ำร้อน

ตัวชี้บอกนี้จะสว่างขึ้นเมื่อเลือกน้ำร้อน



2 ตัวชี้บอกอุณหภูมิน้ำร้อน

ตัวชี้บอกจะสว่างขึ้นตามอุณหภูมิของน้ำร้อน
อุณหภูมิของน้ำร้อนอยู่ในระดับสูงสุดเมื่อไฟ LED ทั้ง 3 ดวงสว่างขึ้น



3 ตัวชี้บอกล็อกน้ำร้อน

ตัวชี้บอกนี้จะสว่างขึ้นเมื่อล็อกน้ำร้อน



4 ตัวชี้บอกน้ำอุณหภูมิห้อง

ตัวชี้บอกนี้จะสว่างขึ้นเมื่อเลือกน้ำอุณหภูมิห้อง




5 ตัวชี้บอกน้ำเย็น

ตัวชี้บอกนี้จะสว่างขึ้นเมื่อเลือกน้ำเย็น



6 ตัวชี้บอกอุณหภูมิน้ำเย็น

ตัวชี้บอกจะสว่างขึ้นตามอุณหภูมิของน้ำเย็น
อุณหภูมิของน้ำเย็นอยู่ในระดับต่ำสุดเมื่อไฟ LED ทั้ง 3 ดวงสว่างขึ้น



7 ตัวชี้บอกปริมาณ

แสดงปริมาณน้ำที่เลือกในการจ่ายน้ำ

120 (ครึ่งถ้วย-ประมาณ 120 มล.) :

ปริมาณน้ำที่เหมาะสมสำหรับกาแฟหรือชา


250 (เต็มถ้วย-ประมาณ 250 มล.) :

ปริมาณน้ำที่เหมาะสมสำหรับน้ำดื่ม

500 (สองถ้วย-ประมาณ 500 มล.) :

ปริมาณน้ำที่เหมาะสมสำหรับการทำบะหมี่สำเร็จรูป ฯลฯ

| ตัวชี้บอก

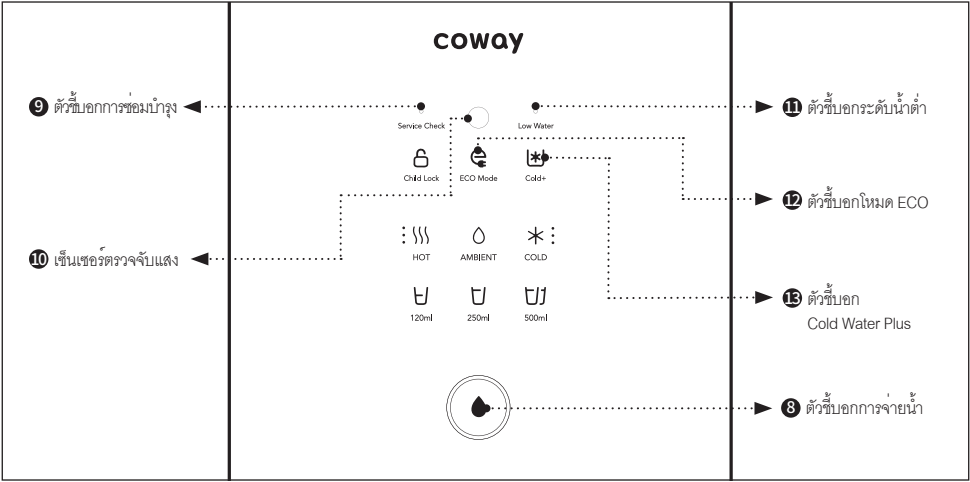

8 ตัวชี้บอกการจ่ายน้ำ
ตัวชี้บอกจะสว่างขึ้นเมื่อกำลังจ่ายน้ำ



9 ตัวชี้บอกการซ่อมบำรุง
ตัวชี้บอกจะสว่างขึ้นเมื่อจำเป็นต้องทำการซ่อมบำรุง



10 เซ็นเซอร์ตรวจจับแสง
เซ็นเซอร์จะตรวจจับแสงสว่างรอบๆ อุปกรณ์นี้
เพื่อระบุว่าเป็นเวลาสว่างหรือมืด



11 ตัวชี้บอกระดับน้ำต่ำ
ตัวชี้บอกจะสว่างขึ้นเมื่อระดับน้ำในถังเก็บน้ำเหลือน้อย




12 ตัวชี้บอกโหมด ECO
ตัวชี้บอกจะสว่างขึ้นเมื่อเปิดโหมด ECO



13 ตัวชี้บอก Cold Water Plus
ตัวชี้บอกจะสว่างขึ้นเมื่อเลือกฟีเจอร์ Cold Water Plus

ปุ่มและตัวชี้บอก

ปุ่ม

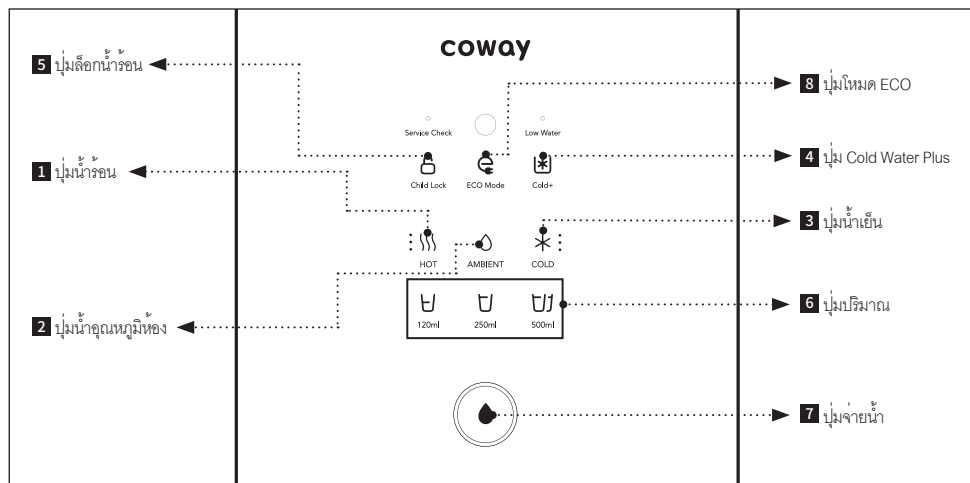

1 ปุ่มน้ำร้อน

ใช้เมื่อท่านต้องการจ่ายน้ำร้อน



2 ปุ่มน้ำอุณหภูมิห้อง

ใช้เมื่อท่านต้องการจ่ายน้ำอุณหภูมิห้อง



3 ปุ่มน้ำเย็น

ใช้เมื่อท่านต้องการจ่ายน้ำเย็น



4 ปุ่ม Cold Water Plus

ใช้เมื่อท่านต้องการเปิดพีเจอร์ Cold Water Plus



5 ปุ่มล็อกน้ำร้อน

ใช้เมื่อท่านต้องการเปิดล็อกน้ำร้อน

กดปุ่มค้างไว้ประมาณ 2

วินาทีเพื่อเปิด/ปิดล็อกน้ำร้อน (ท่านไม่สามารถเลือก/จ่ายน้ำร้อนได้ในขณะที่ล็อกน้ำร้อนกำลังทำงาน)



6 ปุ่มปริมาณ

ใช้เมื่อเลือกปริมาณน้ำที่ท่านต้องการจะจ่าย



7 ปุ่มจ่ายน้ำ

ใช้เมื่อท่านต้องการจ่ายน้ำ




8 ปุ่มโหมด ECO

ใช้เมื่อท่านต้องการเปิดโหมด ECO

| การใช้ฟังก์ชันน้ำร้อน

กดปุ่มน้ำร้อนค้างไว้อย่างน้อย 2 วินาทีแล้วตรวจดูว่าหน้าจอแสดงว่าฟิเจอร์น้ำร้อนเปิดอยู่ และตัวชี้บอกอุณหภูมิน้ำร้อนสว่างอยู่หรือไม่ ในการปิดฟังก์ชันน้ำร้อน ให้กดปุ่มน้ำร้อนอีกครั้งค้างไว้อย่างน้อย 5 วินาที

* ท่านจะสามารถกดน้ำร้อนได้ หลังจากที่ท่านเปิดฟังก์ชันน้ำร้อนได้ประมาณ 30 นาที

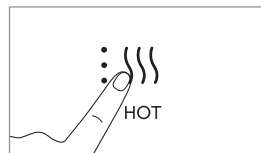


| การใช้ฟังก์ชันน้ำเย็น

กดปุ่มน้ำเย็นค้างไว้อย่างน้อย 2


วินาทีแล้วตรวจดูว่าหน้าจอแสดงว่าฟิเจอร์น้ำเย็นเปิดอยู่ และตัวชี้บอกอุณหภูมิน้ำเย็นสว่างอยู่หรือไม่ ในการปิดฟังก์ชันน้ำเย็น ให้กดปุ่มน้ำเย็นอีกครั้งค้างไว้อย่างน้อย 5 วินาที

* ท่านจะสามารถจ่ายน้ำเย็นได้ หลังจากที่ท่านเปิดฟังก์ชันน้ำเย็นได้ประมาณสองชั่วโมง

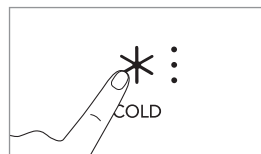

| การใช้ฟังก์ชัน Cold Water Plus

กดปุ่มน้ำเย็นค้างไว้อย่างน้อย 2 วินาทีแล้วตรวจดูว่าหน้าจอแสดงว่าฟิเจอร์ Cold Water Plus เปิดอยู่ และตัวชี้บอก Cold Water Plus สว่างอยู่หรือไม่ ในการปิดฟังก์ชัน Cold Water Plus ให้กดปุ่ม Cold Water Plus อีกครั้งค้างไว้อย่างน้อย 2 วินาที

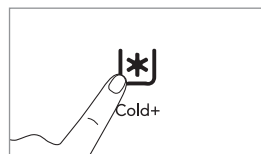

เคล็ดลับ

- ฟิเจอร์ Cold Water Plus มีประโยชน์เมื่อท่านต้องการน้ำเย็นปริมาณมากในครั้งเดียว (การใช้ฟิเจอร์ Cold Water Plus บ่อยๆ จะไม่มีผลกับค่าไฟฟ้าของท่าน)


ปั๊มและตัวขับเคลื่อน

| การใช้ฟังก์ชันโหมด ECO

กดปุ่มโหมด ECO ค้างไว้อย่างน้อย 2 วินาที เพื่อเปิดโหมด ECO ตัวขับเคลื่อนโหมด ECO

จะกระพริบเมื่อผลิตภัณฑ์ตรวจพบความผิดปกติ

* หากตัวขับเคลื่อนโหมด ECO เปิดอยู่ อุณหภูมิหมักน้ำเย็นจะค่อนข้างสูงเมื่อบริเวณโดยรอบมีแดด

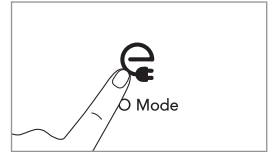

เคล็ดลับ



- หากเครื่องกรองน้ำดื่มไม่จ่ายน้ำเย็น ให้ตรวจสอบว่าตัวขับเคลื่อนน้ำเย็นสว่างอยู่หรือไม่ (ดูหน้า 11)
- เมื่อระดับน้ำอุณหภูมิห้องในถังเก็บน้ำเหลือน้อย ท่านอาจจะได้น้ำปริมาณน้อยกว่าปกติ
- เมื่อเชื่อมต่อสายไฟอีกครั้งหรือเกิดไฟฟ้าดับ การตั้งค่าล่าสุดจะถูกรักษาไว้
- ผลิตภัณฑ์นี้มีพีเจอร์โหมด ECO หากไม่ได้ใช้งาน หากไม่ใช้งานเป็นเวลานาน (ประมาณ 9 ชั่วโมง) อุณหภูมิหมักน้ำร้อน จะลดลงโดยอัตโนมัติ และอุณหภูมิหมักน้ำเย็นจะสูงขึ้นเพื่อลดการใช้พลังงาน เมื่อโหมด ECO เปิดทำงานเนื่องจากการไม่ใช้งาน น้ำร้อน อาจจะร้อนน้อยลงและน้ำเย็นก็จะเย็นน้อยลง

วิธีกดน้ำในปริมาณที่ต้องการ

วิธีใช้

| วิธีกดน้ำเย็น

ตรวจสอบตัวชี้บอกอุณหภูมิน้ำเย็นแล้วกดปุ่มน้ำเย็น จากนั้นให้กดปุ่มปริมาณเพื่อกำหนดปริมาณน้ำที่ท่านต้องการ
กดปุ่มจ่ายน้ำเพื่อจ่ายน้ำในปริมาณที่ท่านเลือก กดปุ่มจ่ายน้ำอีกครั้งในขณะที่กำลังจ่ายน้ำ
เพื่อหยุดการจ่ายน้ำ จ่ายน้ำเย็นอย่างต่อเนื่องได้โดยการกดค้างไว้อย่างน้อย 3 วินาที ท่านจะได้น้ำเย็นเป็นเวลาประมาณ 3 นาที
กดปุ่มจ่ายน้ำอีกครั้งในขณะที่กำลังจ่ายน้ำ เพื่อหยุดการจ่ายน้ำ

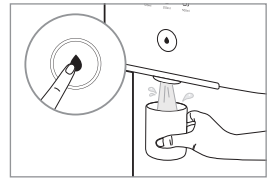
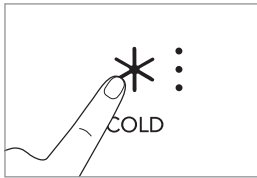


เคล็ดลับ

- หากเครื่องกรองน้ำดื่มไม่จ่ายน้ำเย็น ตรวจสอบว่าตัวชี้บอกน้ำเย็นสว่างขึ้นในหน้าจอหรือไม่ (ดูหน้า 11)
- หากเครื่องกรองน้ำดื่มไม่จ่ายน้ำ ตรวจสอบว่าตัวชี้บอกระดับน้ำเหลือน้อยสว่างขึ้นในหน้าจอหรือไม่ (ดูหน้า 12)

| วิธีกดน้ำอุณหภูมิห้อง

กดปุ่มน้ำอุณหภูมิห้องแล้วกดปุ่มปริมาณเพื่อกำหนดปริมาณน้ำที่ท่านต้องการ กดปุ่มจ่ายน้ำเพื่อจ่ายน้ำอุณหภูมิห้องในปริมาณที่ท่านเลือก
กดปุ่มจ่ายน้ำอีกครั้งในขณะที่กำลังจ่ายน้ำ เพื่อหยุดการจ่ายน้ำ จ่ายน้ำอุณหภูมิห้องอย่างต่อเนื่องได้โดยการกดค้างไว้อย่างน้อย 3 วินาที
ท่านจะได้น้ำเป็นเวลาประมาณ 3 นาที กดปุ่มจ่ายน้ำอีกครั้งในขณะที่กำลังจ่ายน้ำ เพื่อหยุดการจ่ายน้ำ

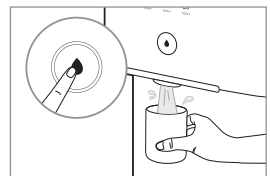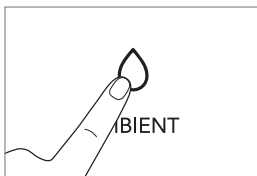



เคล็ดลับ

- หากเครื่องกรองน้ำดื่มไม่จ่ายน้ำอุณหภูมิห้อง
ตรวจสอบว่าตัวชี้บอกระดับน้ำเหลือน้อยสว่างขึ้นในหน้าจอหรือไม่ (ดูหน้า 12)

วิธีกดน้ำในปริมาณที่ต้องการ

| วิธีกดน้ำร้อน



กดปุ่มน้ำร้อนแล้วกดปุ่มปริมาณเพื่อกำหนดปริมาณน้ำที่ท่านต้องการ กดปุ่มจ่ายน้ำเพื่อจ่ายน้ำร้อนในปริมาณที่ท่านเลือก กดปุ่มจ่ายน้ำอีกครั้งในขณะที่กำลังจ่ายน้ำ เพื่อหยุดการจ่ายน้ำ จ่ายน้ำร้อนอย่างต่อเนื่องได้โดยการกดค้างไว้อย่างน้อย 3 วินาที ท่านจะได้น้ำเป็นเวลาประมาณ 3 นาที กดปุ่มจ่ายน้ำอีกครั้งในขณะที่กำลังจ่ายน้ำ เพื่อหยุดการจ่ายน้ำ

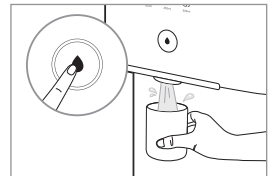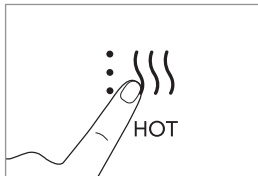

เคล็ดลับ

- หากเครื่องกรองน้ำดื่มไม่จ่ายน้ำ ตรวจสอบว่าตัวขับเคลื่อนระดับน้ำเหลือน้อยสว่างขึ้นในหน้าจอหรือไม่ (ดูหน้า 12).
- ระมัดระวังให้น้ำลวกตนเองในขณะที่ใช้น้ำร้อน

| คำแนะนำการติดตั้ง

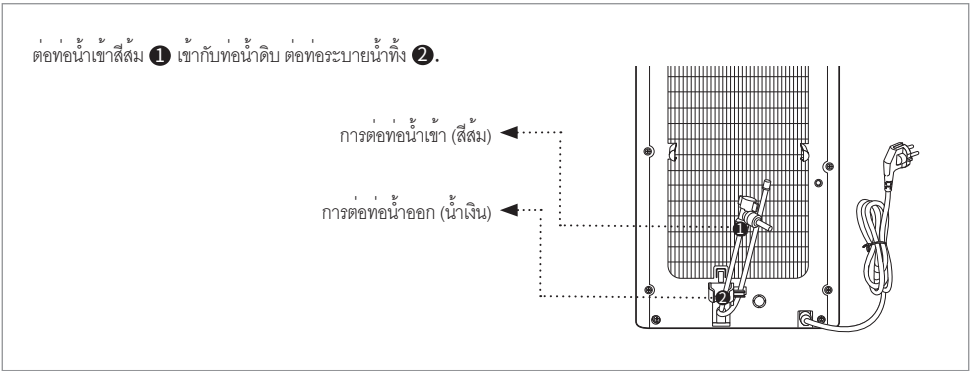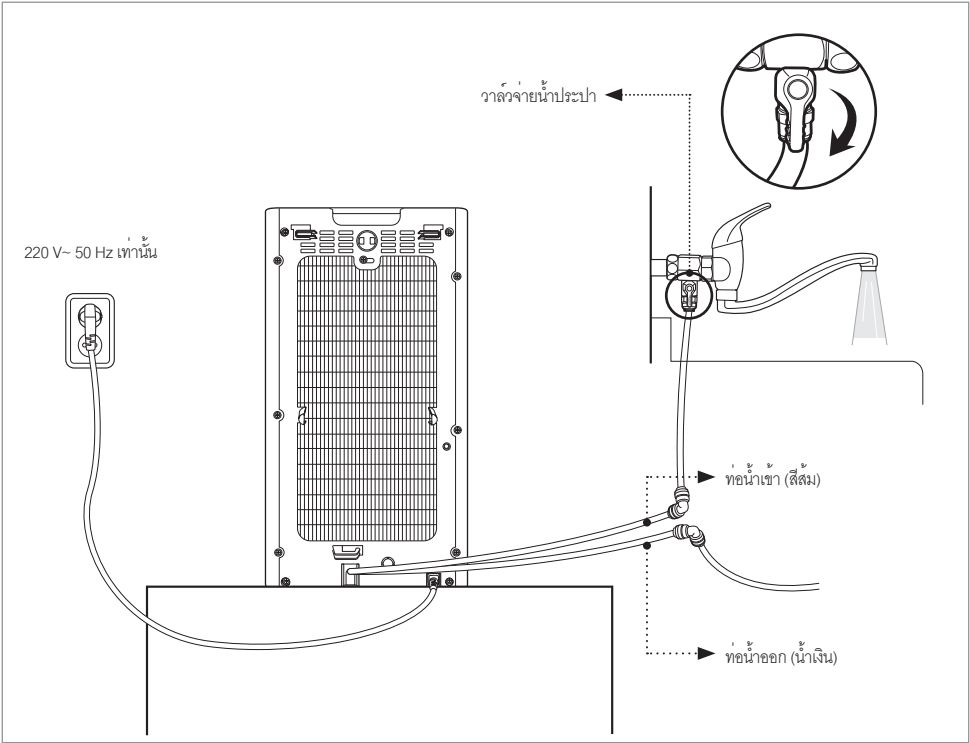

วิธีติดตั้ง

| ข้อควรระวัง

⚠️ ควรติดตั้งที่ใด I

หลีกเลี่ยงการติดตั้งเครื่องกรองน้ำดื่มในบริเวณที่พื้นไม่เรียบ มีความชื้นสูง ได้รับแสงแดดอย่างรุนแรง มีฝุ่นปริมาณสูงมาก และบริเวณที่โดนน้ำ ฯลฯ

⚠️ ควรติดตั้งที่ใด II

ตะแกรงหมอน้ำที่ด้านหลังของผลิตภัณฑ์ควรห่างจากผนังอย่างน้อย 10 ซม. และตรวจสอบให้แน่ใจว่าพื้นที่ติดตั้งนั้นแข็งแรง

⚠️ การย้ายที่และการติดตั้ง

เมื่อย้ายที่ผลิตภัณฑ์ ให้รออย่างน้อย 30 วันหลังจากการติดตั้ง ก่อนที่จะเสียบปลั๊ก

⚠️ ท่อน้ำเย็น

ตรวจสอบให้แน่ใจว่าต่อเข้ากับน้ำดิบที่เป็นน้ำค่อนข้างเย็น (หากต่อกับน้ำดิบที่เป็นน้ำร้อน ใ้กรองอาจเสียหายได้)

⚠️ หลังจากการติดตั้ง

หลังการติดตั้งไส้กรอง ให้ระบายน้ำออกอย่างน้อย 130 นาที (ใช้งานหลังจากระบายน้ำดื่มออกอย่างน้อยสองครั้ง)



เคล็ดลับ


- โปรดปรึกษาช่างเทคนิคการติดตั้งของ Coway สำหรับรายละเอียดเกี่ยวกับการติดตั้งเพื่อให้ผลิตภัณฑ์มีประสิทธิภาพสูงสุด
- ติดต่อขอรับบริการ : 1421
- ⚠️ อาจมีน้ำที่ใช้ในการตรวจสอบหลังการผลิตค้างอยู่ในไส้กรอง
- ⚠️ อย่าใช้วาล์วน้ำประปาและท่อเก่าสำหรับติดตั้งเครื่องกรองน้ำดื่มนี้

| วิธีทำความสะอาดถึงเก็บน้ำภายใน


1. ปิดวาล์วจ่ายน้ำประปา จากนั้นให้ใช้สายถ่ายน้ำทำการระบายน้ำภายในเครื่องกรองน้ำดื่มออกให้หมด เมื่อระบายน้ำเสร็จแล้ว ให้ถอดปลั๊กออก

* ใช้สายถ่ายน้ำและก๊อกจ่ายน้ำเย็นน้ำอุณหภูมิห้องในการระบายน้ำทั้งหมดออกจากภายในเครื่องกรองน้ำดื่ม

* ระบายน้ำออกจากถังเก็บน้ำเย็นน้ำอุณหภูมิห้องด้วยก๊อกน้ำเย็นน้ำอุณหภูมิห้อง และระบายน้ำออกจากถังเก็บน้ำร้อน ผ่านช่องระบายน้ำด้านข้าง

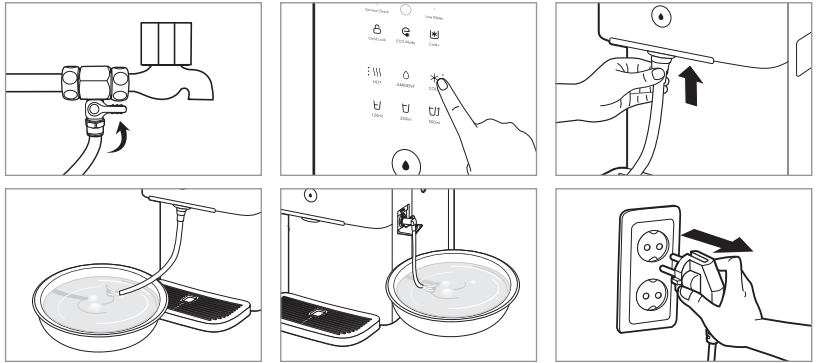

2. ดันฝาครอบด้านบนของผลิตภัณฑ์เพื่อเปิดออก ปลดคลิบ 6 ตัวที่ยึดถังเก็บน้ำภายใน แล้วเปิดฝาดังเก็บน้ำออก

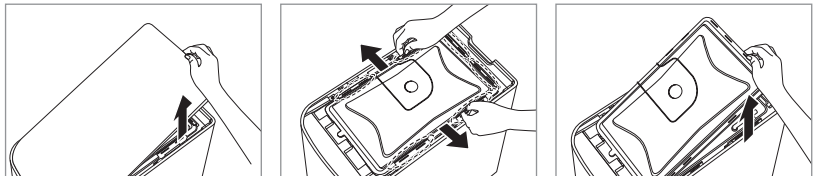


3. ถอดไส้กรองแอนตี้แบคทีเรียออกจากฝาดังเก็บน้ำ แล้วเขย่าด้วยน้ำดื่มเพื่อทำความสะอาด จากนั้นจึงติดตั้งใหม่ เปลี่ยนชิ้นส่วนใหม่ทุก 12 เดือน





วิธีทำความสะอาด



4. เช็ดด้านในของถังเก็บน้ำด้วยผ้านุ่ม

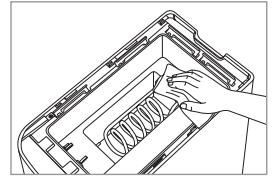



5. ล้างภายในถังเก็บน้ำให้สะอาดด้วยน้ำจากเครื่องกรองน้ำดื่ม จากนั้นให้เสียบปลั๊กอีกครั้ง แล้วระบายน้ำออกให้หมดโดยไม่หมุนจ่ายน้ำต่อเนื่อง ระบายน้ำดื่มที่กรองใหม่อีกครั้งก่อนการใช้งาน

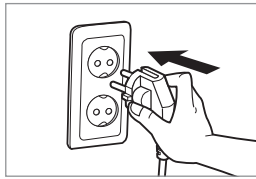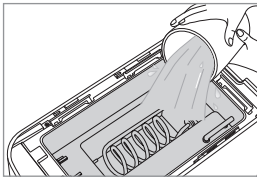

6. ติดตั้งอุปกรณ์กันถังเก็บน้ำ แล้วกดให้แน่นที่ปลายทั้งสองด้านเพื่อให้อยู่กับที่

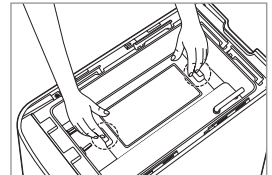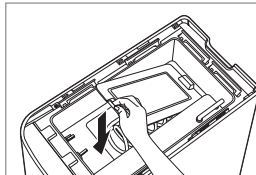

7. ปิดฝาครอบด้านบนแล้วเปิดวาล์วจ่ายน้ำ จากนั้นให้เปิดเครื่องทำกรองดื่มอีกครั้ง

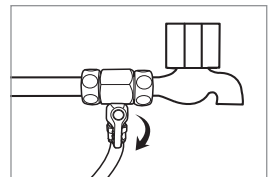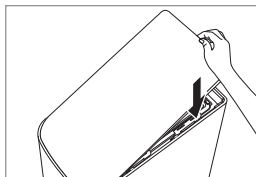


เคล็ดลับ

- ⚠️ โปรดปิดฝาดังเก็บน้ำภายในให้สนิท มิฉะนั้นอาจมีแมลงหรือฝุ่นผงเข้าไปในผลิตภัณฑ์
- ⚠️ อย่าใช้สารเคมีหรือน้ำยาทำความสะอาดเมื่อทำความสะอาดถังเก็บน้ำ สารเคมีและน้ำยาทำความสะอาดที่ตกค้างอาจเป็นอันตรายต่อร่างกาย
- โปรดรักษาความสะอาดบริเวณโดยรอบเสมอ
- และควรทำความสะอาดภายในถังเก็บน้ำทุกสองเดือน

| วิธีทำความสะอาดถาด


1. วิธีถอดถาด

สามารถถอดด้านหน้าของถาดได้อย่างง่ายดายโดยการดึงที่ด้านหน้าของถาด ถอดถาดออกแล้วใช้ผ้าเช็ดภายในและภายนอก

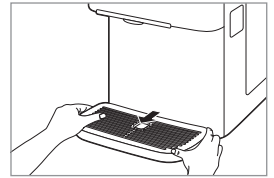

2. วิธีประกอบถาด

เกี่ยวตะขอของถาดกับเครื่องทำน้ำดื่มแล้วดันเข้าเบาๆ

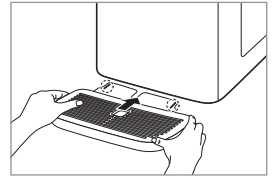

| วิธีทำความสะอาดเครื่องกรองน้ำดื่ม

ใช้ผ้าสะอาดเช็ดผลิตภัณฑ์

* หากมีฝุ่นหนา ให้ใช้ผ้าเปียกเช็ด (อย่าใช้วัสดุผงขัด)




เคล็ดลับ

- อย่าทำความสะอาดโดยการนำผลิตภัณฑ์ไปแช่น้ำ
- อย่าใช้ทินเนอร์ เบนซิน หรือสารทำความสะอาดที่มีวัสดุผงขัด หรือผ้าหยาบในการทำความสะอาด


วิธีทำความสะอาด

| วิธีทำความสะอาดแป้นก๊อมน้ำแบบใส


1. ถอดแป้นก๊อมน้ำแบบใสโดยการดึงออกมา

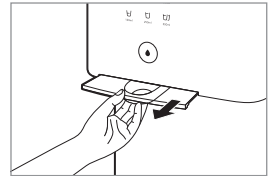


2. ล้างแป้นก๊อมน้ำแบบใสด้วยน้ำ

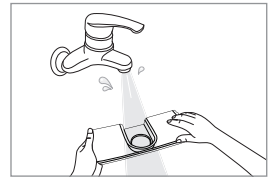

3. หลังจากล้างแล้ว ให้เช็ดแป้นก๊อมน้ำแบบใสด้วยผ้าที่นุ่มและแห้ง

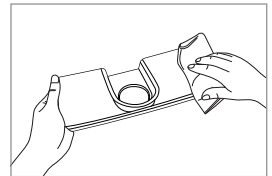

4. หลังจากทำความสะอาด ให้ประกอบแป้นก๊อมน้ำแบบใสกลับคืนด้วยการดันเข้า

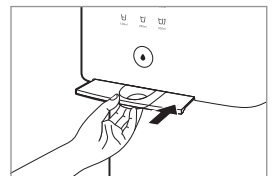

เคล็ดลับ



ห้ามใช้ก้อนสำลีทำความสะอาด สิ่งแปลกปลอมเช่นเศษผ้าอาจตกค้าง

| ไส้กรอง

อายุการใช้งานของเครื่องกรองน้ำดื่มนั้นขึ้นอยู่กับไส้กรอง การใช้ไส้กรองที่ไม่ได้รับการรับรองหรือการใช้ไส้กรองที่หมดอายุแล้ว อาจลดประสิทธิภาพการทำงานในการกรองน้ำ ควรเปลี่ยนด้วยไส้กรองที่ได้รับการรับรองตามกำหนดเวลาเปลี่ยน ช่าง Coway Cody จะไปเปลี่ยนไส้กรองดังกล่าว

* โทร 1421 สำหรับการเปลี่ยนไส้กรอง

| รอบการเปลี่ยนไส้กรอง

การไม่เปลี่ยนไส้กรองเป็นประจำอาจทำให้คุณภาพน้ำจากผลิตภัณฑ์ลดลง
รอบการเปลี่ยนไส้กรองอาจแตกต่างกันไปจากรอบการเปลี่ยนไส้กรองตามปกติขึ้นอยู่กับคุณภาพน้ำที่จ่ายเข้าไปในเครื่อง

CHP-6310L

ชื่อไส้กรอง	รอบการเปลี่ยนที่แนะนำ
ไส้กรองNeo-sense	4 เดือน
ไส้กรองเมมเบรน (RO)	24 เดือน
ไส้กรองPlus Inno-Sense	18 เดือน
ไส้กรอง Ceramic	12 เดือน



| เกี่ยวกับรอบการเปลี่ยนไส้กรอง

รอบการเปลี่ยนไส้กรองสำหรับไส้กรองแต่ละตัวนั้นคำนวณโดยอิงคุณภาพของแหล่งจ่ายน้ำ สำหรับการอ้างอิง
ความสามารถในการผลิตน้ำอย่างมีประสิทธิภาพหมายถึงความสามารถขั้นต่ำในการบำบัดน้ำที่สามารถกำจัดสิ่งปนเปื้อนได้อย่างมีประสิทธิภาพโดยไม่ต้องทำความสะอาด รีไซเคิล หรือเปลี่ยนไส้กรองภายใน และรอบการเปลี่ยนไส้กรองสำหรับไส้กรองแต่ละตัวอาจแตกต่างกันไป



วิธีเปลี่ยนไส้กรอง

| เปลี่ยนไส้กรอง

1. ปิดวาล์วจ่ายน้ำแล้วระบายน้ำจากข้างในอุปกรณ์ออกให้หมด

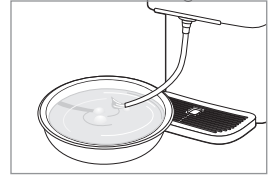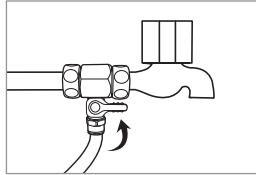

2. หมุนด้วยมือประตูดึงฝาครอบด้านขวาบนเพื่อถอดฝาครอบด้านข้าง

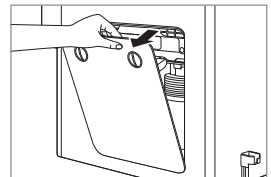
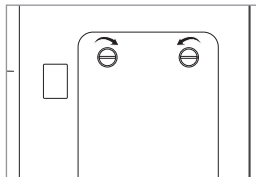


เคล็ดลับ



หลังจากเปลี่ยนไส้กรองแล้ว ให้ประกอบพิดดึงและท่อน้ำให้เข้าที่ และตรวจสอบว่าไม่มีน้ำรั่ว อย่าลืมระบายน้ำกรองน้ำแรกออกก่อน

3. จับที่ส่วนล่างของไส้กรองที่ท่านต้องการจะเปลี่ยนด้วยมือข้างหนึ่ง แล้วยกคันโยกล็อกขึ้นเพื่อเปลี่ยนไส้กรอง

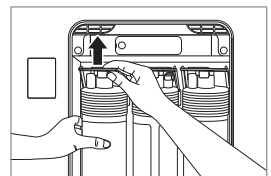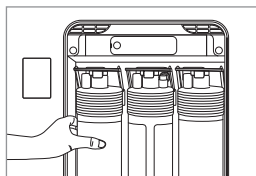


เคล็ดลับ



ตรวจสอบว่าติดตั้งไส้กรองอย่างแน่นหนาแล้วและคันโยกก็รองรับอย่างมั่นคง จากนั้นให้น้ำจ่ายเข้าเพื่อตรวจสอบว่าไม่มีน้ำรั่ว

4. ปิดฝาครอบแล้วหมุนคันโยกที่อยู่ทางด้านขวาของฝาครอบออกด้านนอกเพื่อล็อกฝาครอบ จากนั้นให้ใส่ฝาครอบด้านข้างเข้าไปในร่อง (หากท่านไม่หมุนคันโยกเพื่อปิดฝาครอบ ฝาครอบจะปิดไม่ได้)

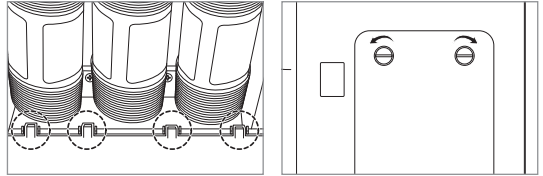

เคล็ดลับ



โปรดใช้ไส้กรองอันใหม่หลังจากล้างไส้กรองแล้ว

- ไส้กรอง Neo-Sense : โปรดประกอบหลังจากล้างด้วยน้ำประปาเป็นเวลา 1 นาที
- ไส้กรองPlus Inno-Sense : โปรดใช้ไส้กรองนี้โดยไม่ต้องล้างไส้กรอง
- ไส้กรองเมมเบรน (RO) : โปรดประกอบหลังจากล้างไส้กรองด้วยน้ำจาก Neo-Sense ประมาณ 5 นาที



เคล็ดลับ

เราจะเปลี่ยนฟิตติ้ง สายน้ำ และก๊อกน้ำหลังจากการใช้งาน 5 ปี หากท่านติดต่อศูนย์บริการลูกค้าของเรา (อาจมีค่าใช้จ่าย)

การดูแลรักษาเป็นประจำ

ในการใช้อุปกรณ์ของท่านอย่างปลอดภัย ควรทำการซ่อมบำรุงเป็นบางครั้ง ตรวจสอบสิ่งต่อไปนี้เป็นประจำเพื่อให้อุปกรณ์ของท่านทำงานได้อย่างเต็มประสิทธิภาพ

| พลังงาน

- หน้าจอเปิดแล้วปิดเมื่อท่านเคลื่อนย้ายสายไฟในขณะที่กำลังเชื่อมต่ออยู่หรือไม่
- มีส่วนใดของสายไฟที่อุ่นกว่าปกติหรือไม่
- มีส่วนใดของสายไฟที่บิดเบี้ยว มีสีผิดปกติ หรือเสียหายหรือไม่

⚠ หากเกิดปัญหาเหล่านี้ ให้หยุดใช้งานอุปกรณ์นี้ทันทีแล้วติดต่อ Call Center (1421)

| หน้าจอ

- ตัวข้อบกพร่องด้านหน้ากระพริบผิดปกติหรือไม่

หากตัวข้อบกพร่องกระพริบผิดปกติ ให้ติดต่อ Call Center ทันที (1421)

เครื่องกรองน้ำอาจทำงานผิดปกติเพราะว่าผู้ใช้ไม่คุ้นเคยกับผลิตภัณฑ์หรือเนื่องจากสาเหตุอื่น แต่ไม่ใช่เพราะว่าผลิตภัณฑ์ทำงานผิดพลาด ในกรณีดังกล่าวก็สามารถแก้ปัญหาได้อย่างง่ายดายโดยไม่ต้องขอความช่วยเหลือจากศูนย์บริการโดยการตรวจสอบดังต่อไปนี้ หากปัญหายังไม่สามารถแก้ไขหลังจากตรวจสอบตามรายการต่อไปนี้แล้ว โปรดโทรติดต่อศูนย์บริการ

อาการ	ตรวจสอบ	วิธีแก้ปัญหาที่เป็นไปได้
น้ำมีรสชาติแย่	• คุณได้ทำความสะอาดถังเก็บน้ำหรือไม่	ทำความสะอาดถังเก็บน้ำ
	• ไม่ได้ใช้งานอุปกรณ์กรองน้ำมาเป็นเวลานาน	ทั้งน้ำที่ตกค้างอยู่ข้างในออก แล้วทำความสะอาดถังเก็บน้ำ
	• ถึงเวลาเปลี่ยนไส้กรองน้ำหรือยัง	แจ้งขอเปลี่ยนไส้กรอง
ไม่มีน้ำออกมา	• แหล่งจ่ายน้ำถูกตัดหรือวาล์วน้ำ ถูกปิดอยู่หรือไม่	เปิดวาล์วน้ำ
	• เลยเวลาเปลี่ยนไส้กรองน้ำหรือยัง	แจ้งขอเปลี่ยนไส้กรอง
ปริมาณน้ำอุณหภูมิห้องลดลงอย่างฉับพลัน	• ถึงเวลาเปลี่ยนไส้กรองน้ำหรือยัง	แจ้งขอเปลี่ยนไส้กรอง
	• เสียบปลั๊กอยู่หรือไม่	ตรวจสอบว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V~ 50 Hz หรือไม่
	• วาล์วน้ำ ถูกปิดอยู่หรือไม่	เปิดวาล์วน้ำ
	• ชุดหมักของแหล่งน้ำที่จ่ายเข้าลดลงอย่างฉับพลันหรือไม่	หากชุดหมักน้ำลดลง ปริมาณน้ำอุณหภูมิห้องจะลดลง
ไม่มีน้ำเย็นออกมา	• ตัวรีดน้ำเย็นสว่างขึ้นหรือไม่	กดปุ่มน้ำเย็นเพื่อเปิดน้ำเย็น
	• วาล์วน้ำ ถูกปิดอยู่หรือไม่	อุปกรณ์ทำความเย็นจะไม่ทำงานเมื่อระดับน้ำต่ำ เพื่อเป็นการป้องกันมอเตอร์และให้ เปิดวาล์วข้อต่อ
	• ด้านหลังของอุปกรณ์อยู่ใกล้กับผนังมากเกินไปหรือไม่	เว้นระยะห่างระหว่างด้านหลังของอุปกรณ์กับผนังกับผนังอย่างน้อย 10 ซม.

การแก้ไขปัญหา

อาการ	ตรวจสอบ	วิธีแก้ปัญหาที่เป็นไปได้
ไม่มีน้ำร้อนออกมา	• ตัวขับเคลื่อนน้ำร้อนส่วข้างขึ้นหรือไม่	กดปุ่มน้ำร้อนเพื่อเปิดน้ำร้อน
	• ตัวขับเคลื่อน PowerSave ส่วข้างขึ้นหรือไม่	น้ำอาจร้อนน้อยกว่าปกติในขณะที่อยู่ในโหมด PowerSave
	• วาล์วน้ำ ถูกปิดอยู่หรือไม่	อุปกรณ์ทำความร้อนจะไม่ทำงานเมื่อระดับน้ำต่ำ เพื่อเป็นการปกป้องมอเตอร์ และให้เปิดวาล์วข้อต่อ
อุปกรณ์ทำงานอยู่แ ล้วยก็หยุดลงอ ย่างฉับพลัน	• แหล่งจ่ายน้ำมีคุณภาพดีหรือไม่	ตรวจสอบวาล์วน้ำ
	• เสียบปลั๊กอยู่หรือไม่	ตรวจสอบว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V~ 50 Hz หรือไม่
	• มีน้ำล้นหรือรั่วไหลหรือไม่	แจ้งขอรับบริการ

- การเปลี่ยนไส้กรอง, การแจ้งขอรับบริการ : Call Center

ชื่อผลิตภัณฑ์		เครื่องทำน้ำดื่ม Coway / เครื่องทำน้ำเย็นไฟฟ้า (และเครื่องทำน้ำร้อน)
ชื่อรุ่น		CHP-6310L
วิธีการกรองน้ำ		รีเวอร์สออสโมซิส
อัตราการผลิต		50 % (343 kPa, 25 °C, NaCl 200 ppm)
อัตราแรงดันไฟฟ้า		220 V~ 50 Hz
อัตราอินพุต		น้ำเย็น : 0.5 A, น้ำร้อน : 250 W - 300 W
ข้อมูลหน้าจอ		หน้าจออุณหภูมิหน้า พีเอชการลือก
ฟังก์ชันหลัก		น้ำอุณหภูมิห้อง น้ำเย็น น้ำร้อน การป้องกันความร้อนสูงเกินไป/ความเย็นต่ำเกินไป การกำหนดปริมาณการจ่ายน้ำ การจ่ายน้ำอย่างต่อเนื่อง
ความจุของ ถังเก็บน้ำ	น้ำอุณหภูมิห้อง	2.5 ลิ.
	น้ำเย็น	2.5 ลิ.
	น้ำร้อน	1.0 ลิ.
	รวม	6.0 ลิ.
วัสดุไส้กรอง	ไส้กรอง Neo-sense (ฟิซิลเตอร์แบบกักคาร์บอน)	กักถ่านกัมมันต์
	ไส้กรองเมมเบรน (RO)	ไส้กรองรีเวอร์สออสโมซิส
	ไส้กรอง Plus Inno-sense (โพลีฟิซิลเตอร์แบบกักคาร์บอน)	กักถ่านกัมมันต์ ผ่านอนุฟวเอน
ขนาดผลิตภัณฑ์		260 มม. (กว้าง) x 483 มม. (ลึก) x 510 มม. (สูง)
อุณหภูมิการทำงาน		5 °C - 35 °C
ความสามารถผลิตน้ำอย่างมีประสิทธิภาพ		680 ลิ. (สำหรับ VOC) 11,000 ลิ. (สำหรับเฮลเทติกคลอรีน)
แรงดันการทำงาน (น้ำประปา)		0.14 MPa - 0.83 MPa
น้ำหนักโดยรวม		17.3 กก.

- ความจุของถังเก็บน้ำอาจแตกต่างกันเล็กน้อยจากปริมาณน้ำที่สามารถจุได้ เนื่องจากขนาดของถังเก็บน้ำ
- การออกแบบและข้อมูลจำเพาะของผลิตภัณฑ์นั้นอยู่ภายใต้การควบคุมของกฎหมาย และอาจเปลี่ยนแปลงได้โดยไม่มีการแจ้งให้ทราบเพื่อปรับปรุงผลิตภัณฑ์และคุณภาพของผลิตภัณฑ์
- อัตราการผลิตน้ำหมายถึงปริมาณน้ำที่ไหลออกมา เทียบกับปริมาณที่ดื่มเข้าไป
- อาจแตกต่างกันไปโดยขึ้นอยู่กับสถานที่ติดตั้ง แรงดันน้ำ อุณหภูมิน้ำ และคุณภาพของน้ำ

MEMO

001

9242526

coway

www.coway.com